

# COSORI®



## User Manual

Pro Gen 2 5.8-Quart Smart Air Fryer

Model: CS168-AF



### Questions or Concerns?

Mon-Fri, 9:00 am-5:00 pm PST/PDT  
support@cosori.com | (888) 402-1684



Thank you for  
your purchase!




(We hope you love your new air fryer as much as we do.)



*join*

the Cosori Cooks Community on Facebook  
[facebook.com/groups/cosoricooks](https://www.facebook.com/groups/cosoricooks)

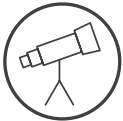

*explore*

our recipe gallery  
[www.cosori.com/recipes](http://www.cosori.com/recipes)



*enjoy*

weekly, featured recipes  
*made exclusively by our in-house chefs*



---

## CONTACT OUR CHEFS

Our helpful, in-house chefs are ready to assist you with any questions you might have!

**Email:** [recipes@cosori.com](mailto:recipes@cosori.com)

**Toll-Free:** (888) 402-1684

M-F, 9:00 am–5:00 pm PST/PDT

---

On behalf of all of us at Cosori,

*Happy cooking!*

# Table of Contents

Package Contents	3
Specifications	3
Important Safeguards	4
• Key Safety Points	4
• General Safety	4
• While Air Frying	5
• Power & Cord	5
Getting to Know Your Smart Air Fryer	6
Display Diagram	7
Display Messages	8
Before First Use	9
• Setting Up	9
• Test Run	9
• Basket Tips	10
• VeSync App Setup	11
Using Your Smart Air Fryer	12
• Preheating	12
• Air Frying	13
• Shaking Food	17
• Cooking Guide	18
• More Functions	19
Accessories	20
Care & Maintenance	21
Troubleshooting	22
Warranty Information	25
Customer Support	26

# Specifications

<b>Power Supply</b>	AC 120V, 60Hz
<b>Rated Power</b>	1700W
<b>Capacity</b>	5.8 qt / 5.5 L (serves 3-5 people)
<b>Temperature Range</b>	170°–400°F / 77°–204°C
<b>Time Range</b>	1–60 min
<b>Dimensions (including handle)</b>	11.7 x 14.2 x 12.6 in / 29.8 x 36.1 x 32.1 cm
<b>Weight</b>	11.9 lb / 5.4 kg

Download the free VeSync app to access original recipes and video tutorials from the Cosori chefs, interact with our online community, and more!



# Package Contents


- 1 x Pro Gen 2 5.8-Quart Smart Air Fryer
- 1 x Recipe Book
- 1 x Quick Reference Guide
- 1 x User Manual

# READ AND SAVE THESE INSTRUCTIONS


## IMPORTANT SAFEGUARDS

Follow basic safety precautions when using your air fryer. Read all instructions.


### Key Safety Points

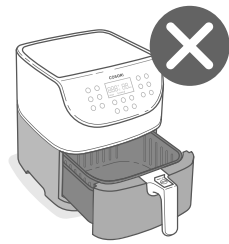

**Do not** touch hot surfaces. Use handle.

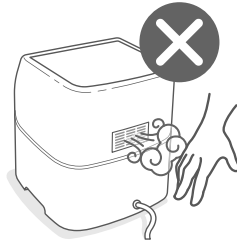

**Do not** block any ventilation openings. Hot steam is released through openings. Keep your hands and face clear of openings.

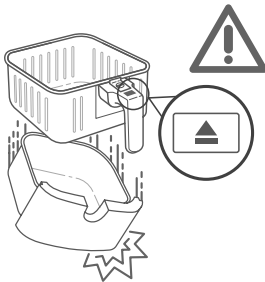


 
**Only** press the basket release button with the baskets resting flat on a counter or any level, heat-resistant surface.

The handle is attached to the inner basket, not the outer basket. When you press the basket release button, the outer basket will **drop**.

### General Safety

- To protect against electric shock, do not immerse the air fryer cord, plug, or housing in water or other liquids.
- Close supervision is necessary when the air fryer is used by or near children.
- Unplug from outlet when not in use, and before cleaning. Allow to cool before putting on or taking off parts.
- **Do not** use your air fryer if it has a damaged cord or plug, if it malfunctions, or if it has been damaged in any way. **Contact Customer Support** (see page 23).
- Using accessory attachments not recommended by Cosori may cause injuries.
- **Do not** use outdoors.
- **Do not** place the air fryer or any of its parts on or near hot gas or electric burners, or in a heated oven.
- Be extremely cautious when moving your air fryer (or removing the baskets) if it contains hot oil or other hot liquids.
- **Do not** clean with metal scouring pads. Metal fragments can break off the pad and touch electrical parts, creating a risk of electric shock.
- **Do not** use the air fryer for any purpose other than its intended use.
- Not for commercial use. Household use **only**.
- This air fryer is not to be used by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Keep the appliance and its cord out of reach of children.
- See **Care & Maintenance**(see Page 18) for guidelines on how to clean accessories.
- To disconnect, turn any control to "off", then remove plug from wall outlet.


## While Air Frying

- An air fryer works with hot air only. **Never** fill the baskets with oil or fat.
- **CAUTION:** To avoid risk of electric shock, cook only in the removable baskets.
- **Do not** place oversized foods or metal utensils into your air fryer as they may create a fire or risk of electric shock.
- **Do not** place paper, cardboard, non-heat-resistant plastic, or similar materials into your air fryer. You may use parchment paper or foil.
- **Never** put baking or parchment paper into the air fryer without food on top. Air circulation can cause paper to lift and touch heating coils.
- **Always** use heat-safe containers. Be extremely cautious if using containers that aren't metal or glass.
- To avoid risk of fire, **do not** cover or allow the air fryer to touch flammable materials (curtains, draperies, walls, etc.) when it is turned on.
- **Do not** store items on top of the air fryer when it is turned on.
- **Do not** store any materials other than Cosori's recommended accessories in the air fryer when not in use.
- Use on a flat, stable, heat-resistant surface away from heat sources or liquids.
- To turn the air fryer off, press  once. The air fryer will beep,  will turn blue, and other buttons will turn off.
- Immediately turn off and unplug your air fryer if you see dark smoke coming out. White smoke is normal, caused by heating fat or food splashing, but dark smoke means that food is burning or there is a circuit problem. Wait for smoke to clear before pulling the baskets out. If the cause was not burnt food, contact **Customer Support** (see page 23).
- **Do not** leave your air fryer unattended while in use.

## Power & Cord

- Your air fryer has a polarized plug (one prong is wider than the other), which fits into a polarized outlet only one way. If the plug does not fit, reverse the plug. If it still does not fit, **do not** use the plug in that outlet. **Do not** alter the plug in any way.
- **Do not** let the power cord (or any extension cord) hang over the edge of a table or counter, or touch hot surfaces.

- If the power supply cord is damaged, it must be replaced by Arovast Corporation or similarly qualified persons in order to avoid an electric or fire hazard. Please contact **Customer Support** (see page 23).
- Your air fryer should **only** be used with **120V, 60Hz** electrical systems. **Do not** plug into another type of outlet.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.

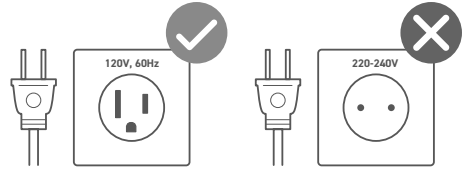

## Extension Cords

- A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- Longer extension cords are available and may be used if care is exercised in their use.
- If a longer extension cord is used:
  - The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the air fryer.
  - The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

### Electromagnetic Fields (EMF)

The Cosori Air Fryer complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

## Caution:

- The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s) and Part 15 of the FCC Rules. Operation is subject to the following two conditions:
  - (1) This device may not cause interference.
  - (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

- FCC's IC Radiation Exposure Statement:  
This equipment complies with FCC and Canada radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.  
This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Déclaration d'IC sur l'exposition aux radiations:

Cet équipement est conforme aux limites d'exposition aux radiations définies par le Canada pour des environnements non contrôlés. Cet équipement doit être installé et utilisé à une distance minimum de 20 cm entre l'antenne et votre corps.

Cet émetteur ne doit pas être installé au même endroit ni utilisé avec une autre antenne ou un autre émetteur.

# SAVE THESE INSTRUCTIONS

# GETTING TO KNOW YOUR SMART AIR FRYER


Your Cosori Air Fryer uses rapid 360° air circulation technology to cook with little-to-no oil for quick, crispy, delicious food with up to 85% fewer calories than deep fryers. With user-friendly, one-touch controls, nonstick baskets, and an intuitive, safe design, the Cosori Air Fryer is the star of your kitchen.

## Air Fryer Diagram



### Note:

- **Do not** try to open the top of the air fryer. It is not a lid.
- The baskets are made of aluminum metal with nonstick coating. They are PFOA-free and BPA-free.

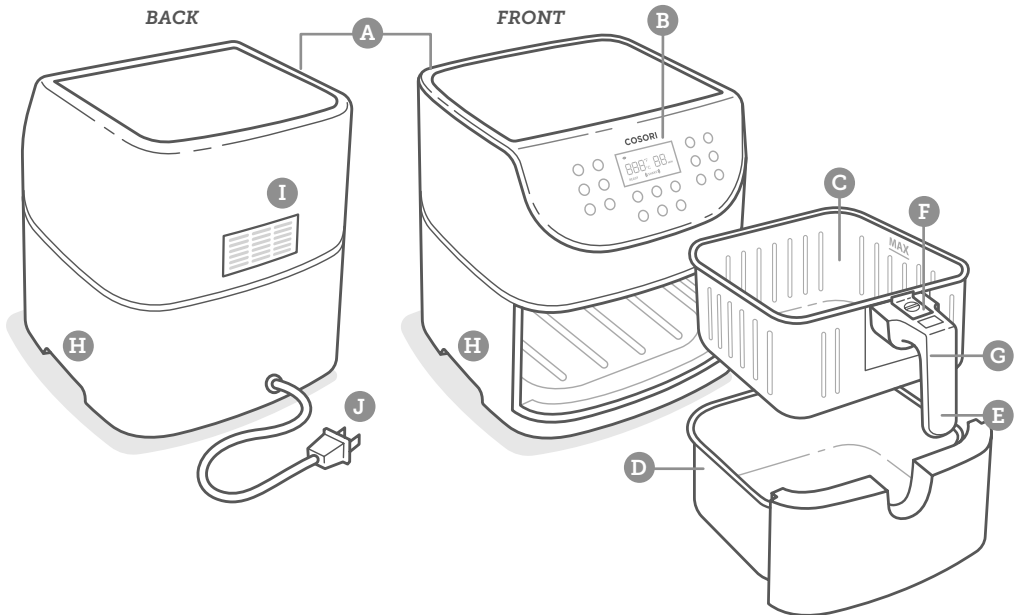

- |                   |                          |               |
|-------------------|--------------------------|---------------|
| A. Air Inlet      | E. Basket Handle         | I. Air Outlet |
| B. Control Screen | F. Sliding Button Guard  | J. Power Cord |
| C. Inner Basket   | G. Basket Release Button |               |
| D. Outer Basket   | H. Housing Handles       |               |


# DISPLAY DIAGRAM

**Note:** When you press a button to use a function or program, it will turn blue to show that it's active. [Figure 2.1]





Figure 2.1

## Presets

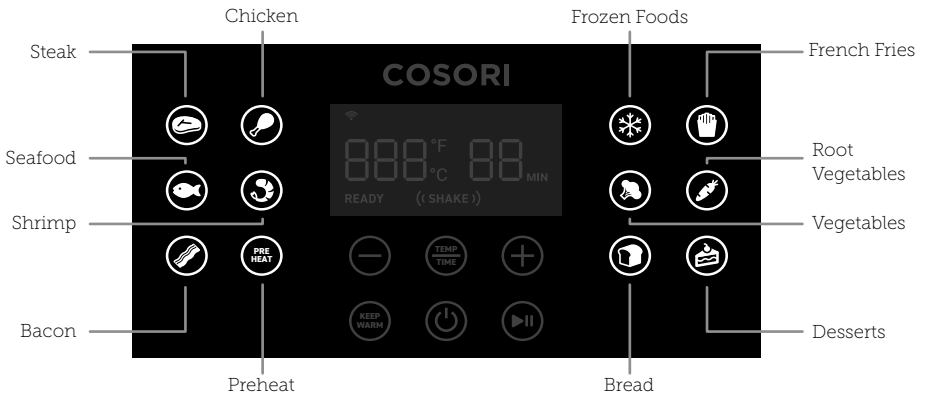

## Control Panel

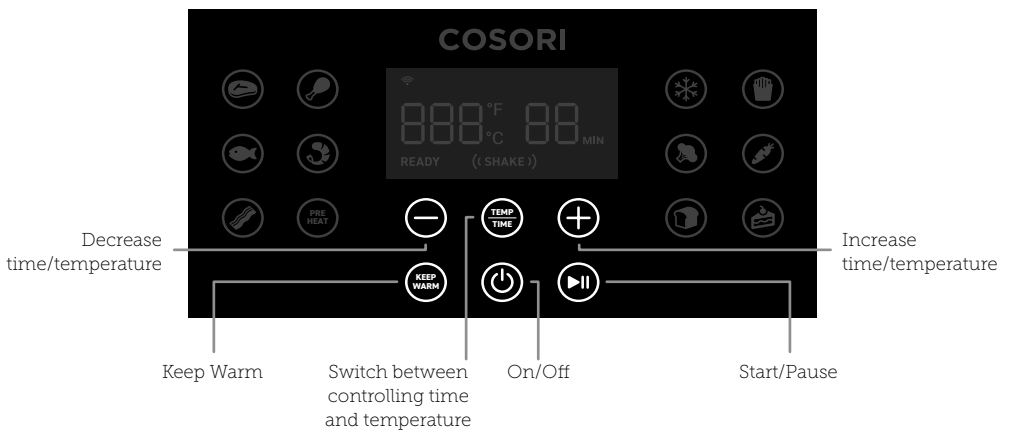


**Note:** Press and hold  to configure your air fryer. See the VeSync in-app instructions for more information.



# DISPLAY DIAGRAM (CONT.)


---

## Display

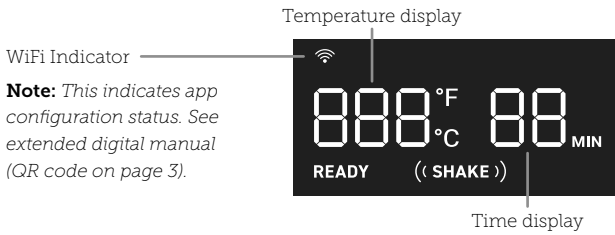


## DISPLAY MESSAGES


---

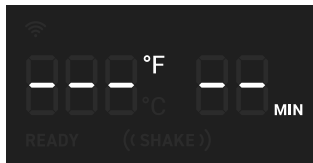

Cooking program has ended.

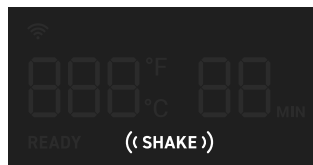

Reminder to shake or flip food.

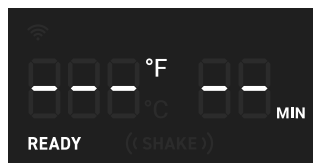

Air fryer is preheated and ready to start cooking.

# BEFORE FIRST USE

## Setting Up

1. Remove all packaging from the air fryer, including any temporary stickers.
2. Place the air fryer on a stable, level, heat-resistant surface. Keep away from areas that can be damaged by steam (such as walls or cupboards).

**Note:** Leave 5 in / 13 cm of space behind and above the air fryer. [Figure 3.1] Leave enough room to remove the baskets.

3. Pull the handle to remove the baskets. Remove all plastic from the baskets.
4. Press the basket release button to separate the inner basket from the outer basket.
5. Wash both baskets thoroughly, using either a dishwasher or a non-abrasive sponge.
6. Wipe the inside and outside of the air fryer with a slightly moist cloth. Dry with a towel.
7. Put the baskets back inside the air fryer.

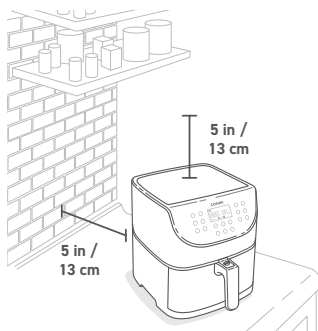


Figure 3.1

## Test Run

A test run will help you become familiar with your air fryer, make sure it's working correctly, and clean it of possible residues in the process.

1. Make sure the air fryer baskets are empty and plug in the air fryer.
2. Press **Preheat**. The display will show "400°F" and "5 MIN".
3. Press **▶||** to begin preheating. When preheating is done, the air fryer will beep.
4. Pull out the baskets and let them cool for 5 minutes. Then place the empty baskets back in the air fryer.
5. Press **👉** to select the **Steak** preset. The display will show "400°F" and "6 MIN".
6. Press **Temp/Time** twice. The time will blink on the display. Press the **-** button once to change the time to 5 minutes.
7. Press **▶||** to begin. When finished, the air fryer will beep.
8. Pull out the baskets. This time, let the baskets cool completely for 10–30 minutes.

## Basket Tips

- **Only** separate the baskets to clean or after cooking.
- The button guard protects the release button from being pressed accidentally. Slide the button guard forward to press the release button. [Figure 3.2]
- **Never** press the release button while carrying the baskets.
- **Only** press the basket release button with the baskets resting on a counter, or any level, heat-resistant surface.
- The handle is attached to the inner basket, not the outer basket. [Figure 3.3] When you press the release button, the outer basket will **drop**.

### Note:

- **Do not** unscrew the basket handle from the baskets.
- To order accessories, please contact **Customer Support** (see page 26).

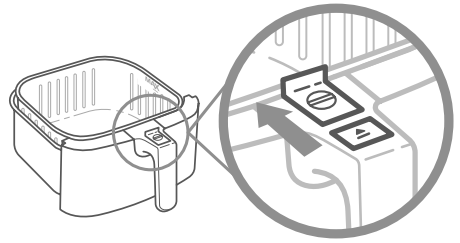


Figure 3.2

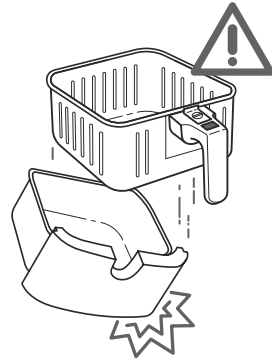


Figure 3.3

## VeSync App Setup

**Note:** Due to ongoing updates and improvements, the VeSync app may be slightly different than shown in the manual. In case of any differences, follow the in-app instructions.

1. To download the VeSync app, scan the QR code or search "VeSync" in the Apple App Store® or Google Play Store.


**Note:** For Android™ users, choose "Allow" to use VeSync.

2. Open the VeSync app. If you already have an account, tap **Log In**. To create a new account, tap **Sign Up**.

**Note:** You must create your own VeSync account to use third-party services and products. These will not work with a guest account. With a VeSync account, you can also allow your family and friends to control your smart air fryer.


3. Tap + and select your smart air fryer.
4. Follow the in-app instructions to set up your smart air fryer.

**Note:**

- You can change the name and icon at any time by going to the smart air fryer screen and tapping .
- You can use the VeSync app to connect your smart air fryer to Amazon Alexa or Google Assistant™.



## Disconnecting From Wi-Fi


- To disconnect Wi-Fi®, press and hold the  button for 15 seconds until the Wi-Fi indicator turns off. This will restore the smart air fryer's default settings and disconnect it from the VeSync app.
- To reconnect, please follow the instructions in the VeSync app for adding a device.

# USING YOUR SMART AIR FRYER

**Note:** You can use the VeSync app to monitor cooking, follow in-app recipes, and access additional features. For a list of smart features, see **VeSync App Features** (page 20).


## Preheating

We recommend preheating before placing food into the air fryer, unless your air fryer is already hot. Food will not cook thoroughly without preheating.

1. Plug in. Press  to turn on the air fryer.
2. Press **Preheat**. The display will show "**400°F**" and "**5 MIN**".
3. Optionally, press the + or – buttons to change the temperature. The time will adjust automatically.

Temperature	Time
400°F / 204°C	<b>5 minutes</b>
390°F / 199°C	<b>5 minutes</b>
380°F / 193°C	<b>5 minutes</b>
370°F / 188°C	<b>4 minutes</b>
360°F / 182°C	<b>4 minutes</b>
350°F / 177°C	<b>4 minutes</b>
340°F / 171°C	<b>4 minutes</b>
330°F / 166°C and below	<b>3 minutes</b>

4. Press  to begin preheating.
5. When preheating is done, the air fryer will beep 3 times. The display will show:

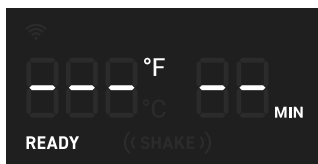

**Note:** If no buttons are pressed for 3 minutes, the air fryer will clear all settings and go into standby.

# Air Frying

## Note:

- **Do not** place anything on top of your air fryer. This will disrupt airflow and cause poor air frying results. [Figure 4.1]
- An air fryer is not a deep fryer. **Do not** fill the baskets with oil, frying fat, or any liquid.
- When taking the baskets out of the air fryer, be careful of hot steam, and **do not** press the basket release button.

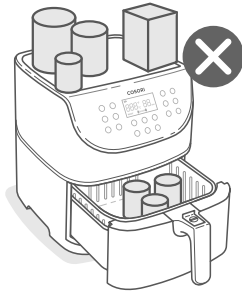


Figure 4.1

## Preset Settings

- You can customize a preset's time (1–60 minutes), and temperature (170°–400°F / 77°–204°C), unless noted.

**Note:** You can use multiple presets in one cooking session using the VeSync app.














To change a preset's default settings:

1. Choose a preset and adjust the time and/or temperature. Optionally, add or remove the Shake Reminder by pressing **SHAKE**.
2. Press and hold the preset icon until the air fryer beeps 1 time.

**Note:** You can customize the time for the Shake Reminder using the VeSync app.

- To reset a preset:
  1. Without making changes, press and hold both the preset icon and **Temp/Time** for 3 seconds until the air fryer beeps 1 time.
- To reset all presets:
  1. Press and hold both + and – for 3 seconds until the air fryer beeps 1 time.

Results may vary. Check out our Quick Reference Guide and Recipe Book for a guide to customizing presets for perfect results.

Preset	Symbol	Default Temperature	Default Time	Shake Reminder?*
Steak		400°F / 204°C	6 minutes	-
Chicken		380°F / 193°C	25 minutes	-
Seafood		350°F / 177°C	8 minutes	-
Shrimp		370°F / 188°C	6 minutes	((SHAKE))
Bacon		320°F / 160°C	8 minutes	-
Frozen Foods		350°F / 177°C	10 minutes	((SHAKE))
French Fries**		380°F / 193°C	25 minutes	((SHAKE))
Vegetables		300°F / 149°C	10 minutes	((SHAKE))
Root Vegetables		400°F / 204°C	12 minutes	((SHAKE))
Bread		320°F / 160°C	8 minutes	-
Desserts		300°F / 149°C	30 minutes	-
Preheat		400°F / 204°C	5 minutes (auto adjust)	-
Keep Warm		170°F / 77°C (cannot change)	5 minutes	-

\* See **Shaking Food** (page 17).

\*\* See **Cooking Guide** (page 18) for tips on air frying french fries.

## Preset Air Frying Programs


Using a preset is the easiest way to air fry. Presets are programmed with an ideal time and temperature for cooking certain foods.

1. **Preheat your air fryer** (see page 12).
2. When your air fryer displays **"READY"**, add food to the baskets.
3. Select a preset (see page 14).
4. Optionally, customize the temperature and time. You can do this anytime during cooking.
  - a. Press the + or – buttons to change the temperature (170°–400°F / 77°–204°C) or time (1–60 minutes).
  - b. Press **SHAKE** to add or remove a Shake Reminder during cooking.

### Note:

- To rapidly increase or decrease time or temperature, press and hold the + or – buttons.
  - If you do not press **Temp/Time**, pressing + or – will automatically change the temperature.
5. Press ►|| to begin air frying.
  6. When Shake Reminder is turned on, it will appear halfway through cooking time (unless customized on the VeSync app). The air fryer will beep 5 times, and **((SHAKE))** will blink on the display.
    - a. Take the baskets out of the air fryer, being careful of hot steam. The air fryer will pause cooking automatically, and the display will turn off until the baskets are replaced.
    - b. Shake or flip the food. Be careful not to press the basket release button.
    - c. Put the baskets back into the air fryer.

7. The air fryer will beep 3 times when finished. The display will show .

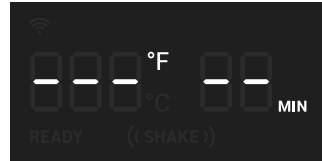

8. Optionally, press **Keep Warm**. Press the + or – buttons to change the time (1–60 minutes).
9. Take the baskets out of the air fryer, being careful of hot steam.
10. Remove the inner basket from the outer basket to serve food. When separating baskets:
  - a. Make sure the baskets are resting on a flat surface.
  - b. Watch for hot oil or fat collected in the outer basket. To avoid splashing, drain oil before replacing inner basket.
11. Allow to cool before cleaning.

**Note:** See **Shaking Food** (page 17).



## Manual Air Frying


1. **Preheat your air fryer** (see page 12).
2. When your air fryer displays **"READY"**, add food to the baskets.
3. Set the temperature and time. You can change this any time during cooking.
  - a. Press **Temp/Time** once. The temperature will blink on the display. Press the + or – buttons to change the temperature (170°–400°F / 77°–204°C).
  - b. Press **Temp/Time** a second time. The time will blink on the display. Press the + or – buttons to change the time (1–60 minutes).
6. Optionally, press **Keep Warm**. Press the + or – buttons to change the time (1–60 minutes).
7. Take the baskets out of the air fryer, being careful of hot steam.
8. Remove the inner basket from the outer basket to serve food. When separating baskets:
  - a. Make sure the baskets are resting on a flat surface.
  - b. Watch for hot oil or fat collected in the outer basket. To avoid splashing, drain oil before replacing inner basket. [Figure 4.2]
9. Allow to cool before cleaning.

**Note:** To rapidly increase or decrease time or temperature, press and hold the + or - buttons.

4. Press ►|| to begin air frying.

**Note:**

- When manually air frying, there will be no Shake Reminder. You should still shake or flip appropriate foods.
  - If you want the Shake Reminder, select a preset program with the reminder (see page 13) and change the time and temperature as desired.
5. The air fryer will beep 3 times when finished. The display will show:

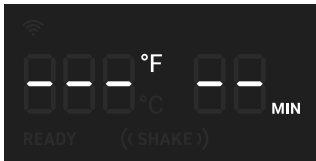

# Shaking Food

## How to Shake

- During cooking, take the baskets out of the air fryer and shake, mix, or flip the food.
  - A. To shake food:
    1. Hold the baskets just above a heat-resistant surface for safety purposes. **Do not** press the basket release button.
    2. Shake the baskets.
  - B. If the baskets are too heavy to shake:
    1. Place the baskets on a heat-resistant holder or surface.
    2. Separate the baskets. Make sure no liquids are dripping from the inner basket.
    3. Carefully shake the inner basket.

**Note:** **Do not** use this method if there is a risk of hot liquids splashing.

- C. If the baskets are too heavy to shake and there are hot liquids present:
    1. Place the baskets on a heat-resistant holder or surface.
    2. Use tongs to mix or flip the food.
- When you take the baskets out, the air fryer will pause cooking automatically. As a safety feature, the display will turn off until the baskets are replaced.
  - When you replace the baskets, cooking will automatically resume.
  - Avoid shaking longer than 30 seconds, as the air fryer may start to cool down.

## What to Shake

- Small foods that are stacked will usually need shaking, such as fries or nuggets.
- Without shaking, foods may not be crispy or evenly cooked.
- You can flip other foods, such as steak, to ensure even browning.

## When to Shake

- Shake or flip food once halfway through cooking, or more if desired.
- The Shake Reminder is designed to remind you to check on your food. Tap **SHAKE** to turn on the Shake Reminder. Certain presets use the Shake Reminder automatically (see **Preset Settings**, page 13).
- The Shake Reminder will appear halfway through cooking time. This can be changed using the VeSync app.

## Shake Reminder

- The Shake Reminder will alert you with 5 beeps, and “**((SHAKE))**” will blink on the display.
- If you do not remove the baskets, the Shake Reminder will beep again after 1 minute and the display will show a solid “**((SHAKE))**”.
- The Shake Reminder will go away once you take out the baskets.

# Cooking Guide

## Overfilling

- If the basket is overfilled, food will cook unevenly.
- Food should not be filled over the "MAX" line of the inner basket. [Figure 4.3]

**Do not** pack in food.



Figure 4.3

## Using Oil

- Adding a small amount of oil to your food will make it crispier. Use no more than 2 US tbsp / 30 mL of oil.
- Oil sprays are excellent for applying small amounts of oil evenly to all food items.

## Food Tips

- You can air fry any frozen foods or goods that can be baked in an oven.
- To make cakes, hand pies, or any food with filling or batter, place food in a heat-safe container before placing in the baskets.
- Air frying high-fat foods will cause fat to drip to the bottom of the baskets. To avoid excess smoke while cooking, pour out fat drippings after cooking.
- Liquid-marinated foods create splatter and excess smoke. Pat these foods dry before air frying.

## French Fries

- Add ½–1 US tbsp / 8–15 mL oil for crispiness.
- When making fries from raw potatoes, soak uncooked fries in water for 15 minutes to remove starch prior to frying. Pat dry with a towel before adding oil.
- Cut uncooked fries smaller for crispier results. Try cutting fries into ¼- by 3-inch / 0.6- by 7.6-cm strips.

**Note:** For more from the Cosori Kitchen, check out our *Recipe Book* and *Tips from the Chef*.

## More Functions

### Switching Temperature Units

1. Press and hold **Temp/Time** for 3 seconds.
2. The air fryer will beep once, and the temperature unit will change from Fahrenheit to Celsius.
3. Repeat to switch back to Fahrenheit.

### Pausing

- Press ►|| to pause cooking. The air fryer will stop heating, and ►|| will blink until you press ►|| to resume cooking.
- After 30 minutes of inactivity, the air fryer will turn off.
- This function allows you to pause the cooking program without removing the baskets from the air fryer.

### Automatically Resume Cooking

- If you pull out the baskets, the air fryer will pause cooking automatically. The display will turn off temporarily as a safety feature.
- When you return the baskets, the air fryer will automatically resume cooking based on your previous settings.

### Automatic Shutoff

- If the air fryer has no active cooking programs, the air fryer will clear all settings and turn off after 3 minutes of inactivity.

### Overheat Protection

- If the air fryer overheats, it will automatically shut down as a safety feature.
- Let the air fryer cool down completely before using it again.

# VeSync App Features

The VeSync app allows you to access additional smart air fryer functions, including those listed below.

## Remote Control

- All smart air fryer functions can be controlled remotely, except for starting cooking (to comply with UL safety regulations).
- Cooking progress can be monitored from a distance.

## Preset Customization

- The time that the Shake Reminder appears during cooking can be customized.
- New custom presets can be created.

## Custom Cooking Programs

- Multiple presets can be combined to make customized cooking programs for multi-phase cooking.

## In-App Recipes

- Pre-programmed recipes made by Cosori's in-house chefs are available in the app. These recipes automatically set the recommended time and temperature.
- Create and save custom recipes.

## Third-Party Voice Control

- Compatible with Amazon Alexa and Google Assistant™ for voice commands.

**Note:** *The VeSync app is continually updated and app features will expand.*

# ACCESSORIES

---

Additional and replacement accessories are available for your air fryer. For more information, contact **Customer Support** (see page 26).

# CARE & MAINTENANCE

---

## Note:

- **Always** clean the air fryer baskets and interior after every use.
  - Lining the outer basket with foil may make cleanup easier.
1. Turn off and unplug the air fryer. Allow it to cool completely before cleaning. Pull out the baskets for faster cooling.
  2. Wipe the outside of the air fryer with a moist cloth, if necessary.
  3. The baskets are dishwasher safe. You can also wash the baskets with hot, soapy water and a non-abrasive sponge. Soak if necessary.

**Note:** The baskets have a nonstick coating. Avoid using metal utensils and abrasive cleaning materials.

4. For stubborn grease:
  - a. In a small bowl, mix 2 US tbsp / 30 mL of baking soda and 1 US tbsp / 15 mL of water to form a spreadable paste.
  - b. Use a sponge to spread the paste on the baskets and scrub. Let the baskets sit for 15 minutes before rinsing.
  - c. Wash baskets with soap and water before using.
5. Clean the inside of the air fryer with a slightly moist, non-abrasive sponge or cloth. **Do not** immerse in water. [Figure 5.1] If needed, clean the heating coil to remove food debris.
6. Dry before using.

**Note:** Make sure the heating coil is completely dry before turning on the air fryer.

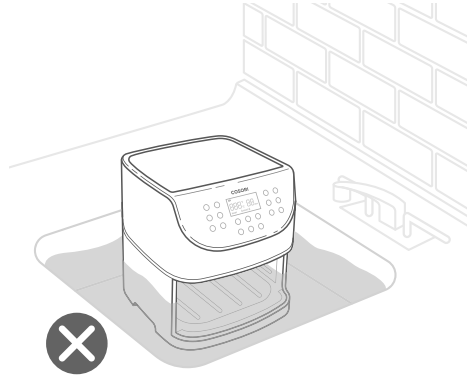


Figure 5.1

# TROUBLESHOOTING

Problem	Possible Solution
<b>The air fryer will not turn on.</b>	Make sure the air fryer is plugged in.
	Push the baskets securely into the air fryer.
<b>Foods are not completely cooked.</b>	Place smaller batches of food items into the inner basket. If the basket is overstuffed, then foods will be undercooked.
	Increase cooking temperature or time.
<b>Foods are cooked unevenly.</b>	Foods that are stacked on top of each other or close to each other need to be shaken or flipped during cooking (see <b>Shaking Food</b> , page 17).
<b>Foods are not crispy after air frying.</b>	Spraying or brushing a small amount of oil on foods can increase crispiness (see <b>Cooking Guide</b> , page 18).
<b>French fries are not cooked correctly.</b>	See <b>French Fries</b> , page 18.
<b>Baskets will not slide into the air fryer securely.</b>	Make sure the inner basket is not overfilled with food.
	Make sure the inner basket is securely inside the outer basket.
<b>White smoke is coming out of the air fryer.</b>	The air fryer may produce some white smoke when you use it for the first time. This is normal.
	Make sure the baskets and the inside of the air fryer are cleaned properly and not greasy.
	Cooking greasy foods will cause oil to leak into the outer basket. This oil will produce white smoke, and the baskets may be hotter than usual. This is normal, and should not affect cooking. Handle baskets with care.

# TROUBLESHOOTING

---

Problem	Possible Solution
<b>Dark smoke is coming out of the air fryer.</b>	Immediately unplug your air fryer. Dark smoke means that food is burning or there is a circuit problem. Wait for smoke to clear before pulling the baskets out. If the cause was not burnt food, contact <b>Customer Support</b> (page 26).
<b>The air fryer has a plastic smell.</b>	Any air fryer may have a plastic smell from the manufacturing process. This is normal. Follow the instructions for a <b>Test Run</b> (page 9) to get rid of the plastic smell. If a plastic smell is still present, please contact <b>Customer Support</b> (see page 26).
<b>Display shows Error Code "E1".</b>	There is an open circuit in the temperature monitor. Contact <b>Customer Support</b> (see page 26).
<b>Display shows Error Code "E2".</b>	There is a short circuit in the temperature monitor. Contact <b>Customer Support</b> (see page 26).

If your problem is not listed, please contact **Customer Support** (see page 26).



# FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT - PART 15

---

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

## **FCC Radiation Exposure Statement**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. To maintain compliance with FCC RF exposure compliance requirements, please follow operation instructions as documented in this manual. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body. The availability of some specific channels and/or operational frequency bands are country dependent and are firmware programmed at the factory to match the intended destination. The firmware setting is not accessible by the end user.

## **FCC SDOC SUPPLIER'S DECLARATION OF CONFORMITY**

Arovast Corporation hereby declares that this equipment is in compliance with the FCC rules. The declaration of conformity may be consulted in the support section of our Web site, accessible from [www.cosori.com](http://www.cosori.com)

# WARRANTY INFORMATION

<b>Product</b>	Pro Gen 2 5.8-Quart Smart Air Fryer
<b>Models</b>	CS168-AF
<i>For your own reference, we strongly recommend that you record your order ID and date of purchase.</i>	
<b>Order ID</b>	
<b>Date of Purchase</b>	

## TERMS & POLICY

Arovast Corporation ("Arovast") warrants this product to the original purchaser to be free from defects in material and workmanship, under normal use and conditions, for a period of 2 years from the date of original purchase.

Arovast agrees, at our option during the warranty period, to repair any defect in material or workmanship or furnish an equal product in exchange without charge, subject to verification of the defect or malfunction and proof of the date of purchase.

### **There is no other express warranty. This warranty does not apply:**

- If the product has been modified from its original condition;
- If the product has not been used in accordance with directions and instructions in the user manual;
- To damages or defects caused by accident, abuse, misuse or improper or inadequate maintenance;
- To damages or defects caused by service or repair of the product performed by an unauthorized service provider or by anyone other than Arovast;
- To damages or defects occurring during commercial use, rental use, or any use for which the product is not intended;
- To damages or defects exceeding the cost of the product.

Arovast will not be liable for indirect, incidental, or consequential damages in connection with the use of the product covered by this warranty.

This warranty extends only to the original consumer purchaser of the product and is not transferable to any subsequent owner of the product regardless of whether the product is transferred during the specified term of the warranty.

This warranty does not extend to products purchased from unauthorized sellers. Arovast's warranty extends only to products purchased from authorized sellers that are subject to Arovast's quality controls and have agreed to follow its quality controls.

All implied warranties are limited to the period of this limited warranty.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

If you discover that your product is defective within the specified warranty period, please contact Customer Support via [support@cosori.com](mailto:support@cosori.com). **DO NOT** dispose of your product before contacting us. Once our Customer Support Team has approved your request, please return the product with a copy of the invoice and order ID.

Every Cosori product automatically includes a 2-year warranty. To make the customer support process quick and easy, register your product online at [www.cosori.com/warranty](http://www.cosori.com/warranty).

This warranty is made by:

Arovast Corporation  
1202 N. Miller St., Suite A  
Anaheim, CA 92806

# CUSTOMER SUPPORT

---

If you have any questions or concerns about your new product, please contact our helpful Customer Support Team.

**Arovast Corporation**

1202 N. Miller St., Suite A  
Anaheim, CA 92806

**Email:** support@cosori.com

**Toll-Free:** (888) 402-1684

**Support Hours**

Mon–Fri, 9:00 am–5:00 pm PST/PDT

*\*Please have your invoice and order ID ready before contacting Customer Support.*

# TRADEMARK INFORMATION

---

Amazon, Alexa, and all related logos are trademarks of Amazon.com, Inc. or its affiliates.

Google, Android, Google Assistant, and Google Play are trademarks of Google LLC.

Apple App Store is a trademark of Apple Inc.

Wi-Fi® is a registered trademark of Wi-Fi Alliance®.

# SHOW US WHAT YOU'RE MAKING

---

We hope this manual has been helpful. We can't wait to see your beautiful results, and we think you'll want to share glam shots! Our community awaits your uploads—just pick your platform of choice below. Snap, tag, and hashtag away, Cosori chef!

Considering *what* to cook? Many recipe ideas are available, both from us and the Cosori community.

**#LiveLifeTastefully #iCookCosori**

**@CosoriCooks**



**@Cosori**



# COSORI®

## **Questions or Concerns?**

Mon-Fri, 9:00 am-5:00 pm PST/PDT  
support@cosori.com | (888) 402-1684