


Sous Vide Cooker


Immersion Circulator

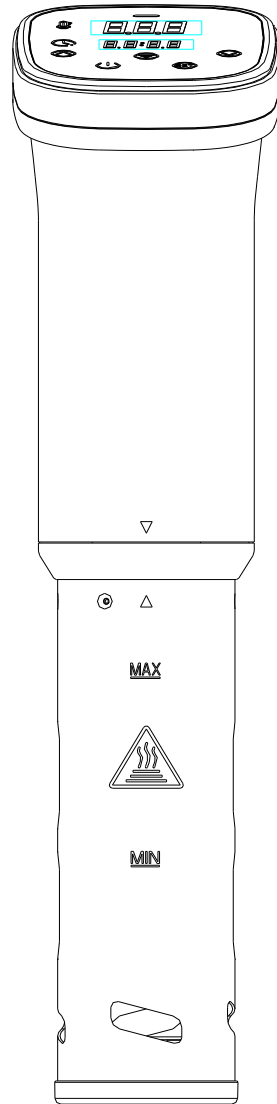

SL-611C

120V 60HZ 1000W

PRODUCT STRUCTURE

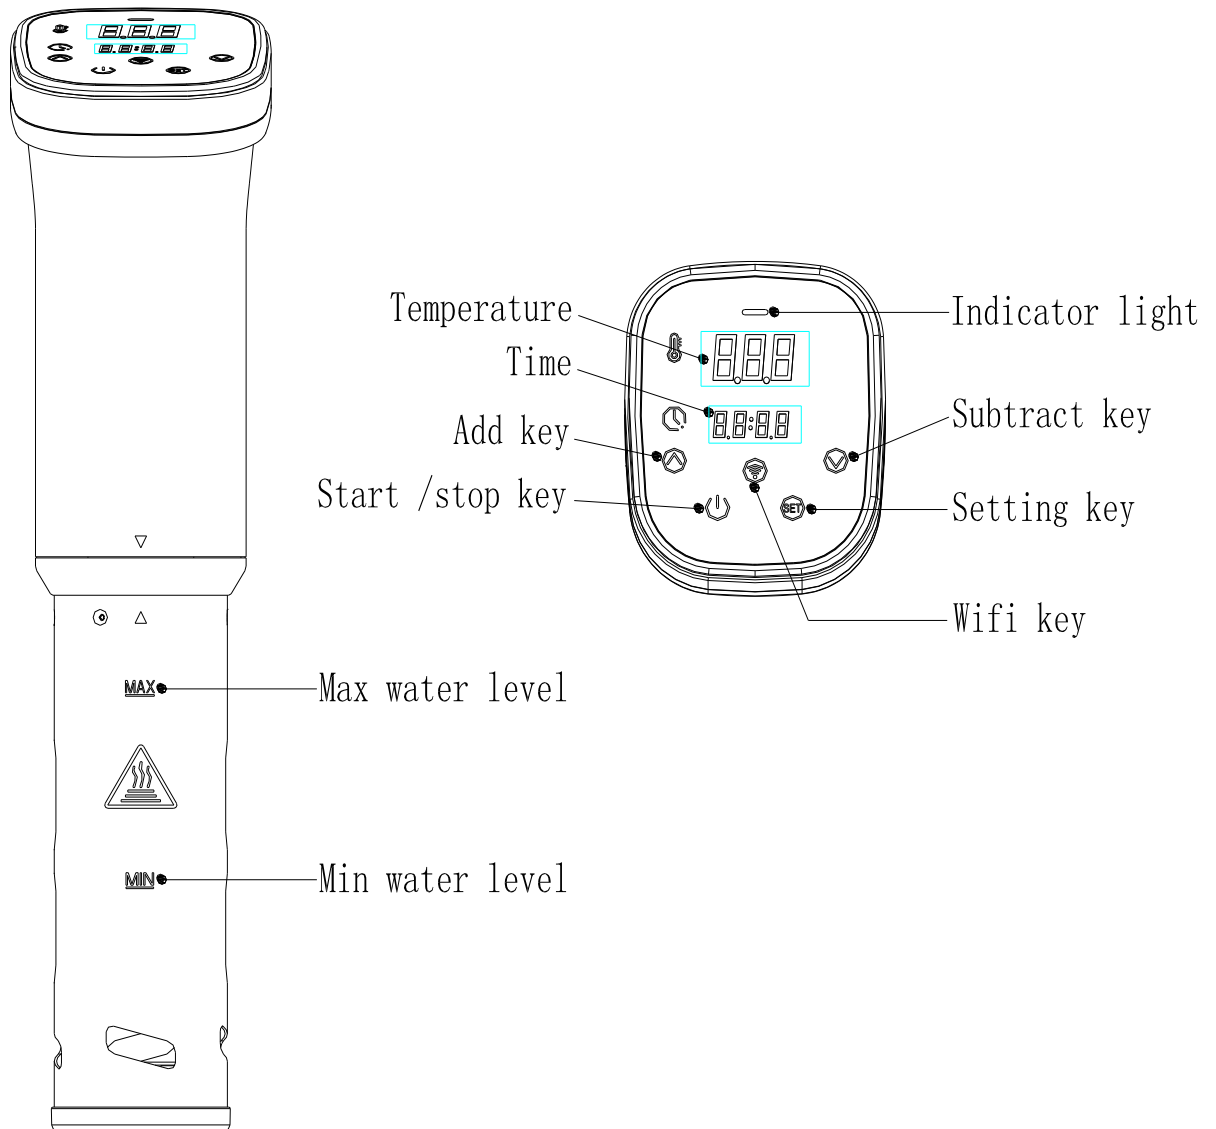

IMPORTANT SAFEGUARDS

1. Read all instructions carefully before using this unit and keep it for future reference.

2. Check the rated voltage displayed on the corresponding device before connecting the device to the main connector.
3. Use only original manufacturer's accessories. Your warranty will be void if you use such accessories or parts.
4. Confirm the appliance immediately if the cord is damaged and have it repaired by an expert.
5. Do not use the appliance if it has fallen, or if the appliance or its accessories appear to be damaged. Contact the service department.
6. The device is intended for household use only and similar applications. Do not use outdoors.
7. To keep the unit dry. Never operate unattended. Keep the water level between the "Min" and "Max" stand.
8. Circulating water can get very hot. Use kitchen taps if you want to remove something from the inside of the appliance. Take extreme caution when moving the container with hot water..
9. This device may be used by children over 8 years of age, as well as persons with reduced physical, sensory or mental abilities, or lack of experience and knowledge when supervised or instructed regarding the safe use of the equipment and the resulting dangers.
10. Children are not allowed to play with the unit. Cleaning and maintenance must not be performed by children, unless they are older than 8 years and supervised.
11. Keep away from children's packaging. There is a danger of suffocation.
12. Children younger than 8 years are to be kept away from the appliance and the connection cable.
13. The appliance receptacle must be removed before cleaning and the appliance plug must be dried before reuse.
14. Burning hazard! Hot steam comes out of the steam outlet opening in the cover. Be careful when opening the lid.
15. The device is not intended to operate with an external timer or a separate remote control system.
16. If the power cord is damaged, it must be replaced by the manufacturer, his customer service staff or similarly qualified persons.
17. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.
18. This appliance is intended to be used in household and similar applications such as:
 - In kitchens for employees in shops, offices and other commercial areas;
 - In agricultural property;
 - from customers in hotels, motels and other residential areas;
 - In breakfast buffets

OPERATION


1. You should use heat-proof 3L-15L plastic or stainless steel container to heat the food using our **SL-611D**.
2. Clip the **SL-611D** securely inside the container, on the wall of the container without touching the very bottom.
3. **Fill the container with water.** Fill the water container with water, using the water level indicator on the **SL-611D**, the water level should be between the min **MIN** and max **MAX** indicated on the front of the circulator. As Archimedes taught us, the water level will rise when you add food to the container, so don't fill it up too high.


NOTE: As the water temperature increases, the water will begin to evaporate.


the SL-611D circulator is equipped with an alarm indicating a low water level, if the water level goes below the min mark, the circulator will shut off.



Water level between max and min, but the Max is the most suitable level to work.

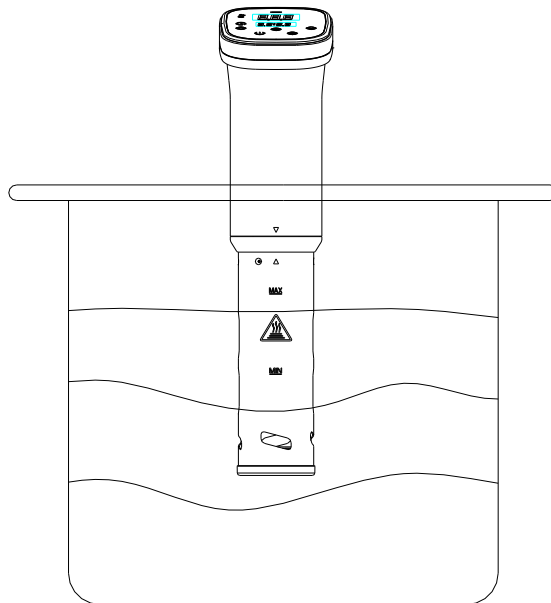Be sure the container has enough water before turning on the appliance.





4. **Connect to power.** The first line displays the "C" and "F". Press the bottom  on the screen more than three seconds. Will change the °C and °F.

Then press the power button  on the screen more than three seconds. The screen is on, the current temperature is flashing (first line).


temperature, you can use  and  to increase or decrease the setting

temperature (25°C-95°C / 77°F-203°F). Press the  button to set timer, press set button for first time,

the timer for hour is flashing. you can use  and  to increase or decrease the hour (00-99

hours). Press the set button for second time, the timer for minute is flashing. you can use  and  to increase or decrease the minute (00-59 minutes).

5. When the machine starts working, the indicator lights up the red light, and when the temperature reaches the set point, the blue light will be displayed.

6. WiFi off status lights up red. Touch the  and the WiFi light flashes blue rapidly. At this time, the WiFi function is turned on.

7. Cook your food. Press the power one time to begin heating and circulating the water, put the food into the container when the temperature arrives your setting temperature.

8. When the water temperature arrives the set temperature, The appliance will be sound "DDD" every three seconds. It informs you to put the foods in it.

9. When you finish the cooking. The time arrives the set time The appliance also sound "DDD u Every three seconds It informs you to take out the food to cook .

10. **Turn the appliance off.** Appliance should be turned off when food is done and when it is not in use. Just press the power button for (3) seconds.

Troubleshooting

The **SL-611D** will not turn on.

Make sure that the machine is properly plugged into a grounded outlet.

Check the power cord for tears and rips. Do not use the machine if the power cord is damaged.

Make sure the power button is on. The Led display screen is show the information.

Make sure the water level is between the MIN and MAX show on the **SL-611D.**

The machine will alarm when the water level drops below the MIN required for Operation.

keep the right water level and Restart the machine.

Cleaning

With frequent use, descaling should be done every month or more often in regions with hard water.

1: Put the appliance in a pot and fill the pot with water to the "Max" level indicated on appliance.

2: Set the appliance temperature to 70°C or 158°F.

3: Add 5g of citric acid powder (Food grade) per liter of water used.

4: Allow the water to circulate for 20 minutes after 70°C or 158°F is reached.

5: Turn off and unplug the appliance.

6: When appliance is cool, rinse the bottom in the cold water and dry before storage.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The distance between user and products should be no less than 20cm.