

KINGSMITH

KINGSMITH Treadmill  
User Manual



Manufacturer : Beijing Kingsmith Technology Co.,Ltd.  
Address : Floor 4, Building 25, Area 18, ABP Park, Fengtai, Beijing, China.  
After-sale service email : support@walkingpad.com  
Made in China



Please read User Manual carefully before using this product ,and keep it well.

## User Manual

---



### IMPORTANT SAFETY INSTRUCTIONS

Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d' Industrie Canada applicables aux appareils radio exempts de licence. L' exploitation est autorisée aux deux conditions suivantes :

(1) l' appareil ne doit pas produire de brouillage, et

(2) l' utilisateur de l' appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d' en compromettre le fonctionnement.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## User Manual

---

### FCC & IC Radiation Exposure Statement:

This equipment complies with FCC and Canada radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Déclaration d' IC sur l' exposition aux radiations:

Cet équipement est conforme aux limites d' exposition aux radiations définies par le Canada pour des environnements non contrôlés. Cet émetteur ne doit pas être installé au même endroit ni utilisé avec une autre antenne ou un autre émetteur.

**DANGER** – To reduce the risk of electric shock: Always unplug this appliance from the electrical outlet immediately after using and before cleaning.

**WARNING** – To reduce the risk of burns, fire, electric shock, or injury to persons: 1) An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts. 2) Close supervision is necessary when this appliance is used by, on, or near children, invalids, or disabled persons. 3) Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer. 4) Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair. 5) Do not carry this appliance by supply cord or use cord as a handle. 6) Keep the cord away from heated surfaces. 7) Never drop or insert any object into any opening. 8) Do not use outdoors. 9) Do not operate where aerosol (spray) products are being used or where oxygen is being administered. 10) To disconnect, turn all controls to the off position, then remove plug from outlet.

Connect this appliance to a properly grounded outlet only. See Grounding Instructions.

This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Keep children under the age of 13 away from this machine.

## User Manual

---

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

To reduce the risk of personal injury, read and understand all the instructions before using this product.

Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

 
## Content

---

01. Product and Accessories	02
02. Function Diagram	03
03. Instructions for Initial Operation	07
04. Learn to Use the Treadmill	09
05. Safety Notice	13
06. Maintenance and Service	16
07. Trademark and Legal Statement	17
08. After-sales Service and Warranty	18

## Welcome to use our treadmill


Thank you for choosing WalkingPad Smart Foldable Treadmill(hereinafter referred to as treadmill), which is featured with compact, simple and innovative overall design. With our treadmill, you can start your quality life at home.

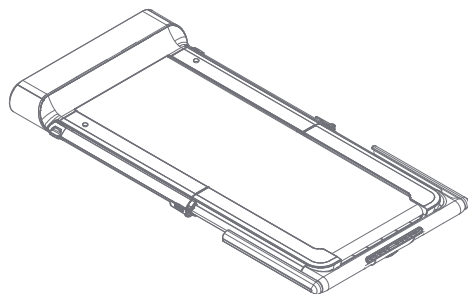

Performance indicators	Detailed parameters
Applicable age	12-60 years old
Speed range	1-9km/h (6km/h max in Walking Mode)
Running area	440×1200mm
Maximum load	110kg
Rated voltage	110-127V~
Rated frequency	746W
Gross weight	35kg
Net weight	32kg
Working dimensions	1450×750×1020mm
Folding dimensions	990×750×160mm
Sport mode	Running mode / Walking mode

## 01 Product and Accessories

 Please carefully check whether the contents of the package are complete and intact. If there is any missing or damaged, please contact the seller.

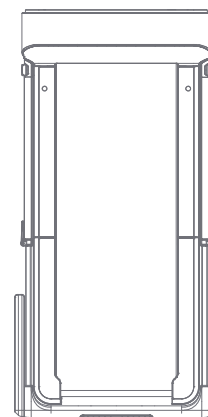

Main Product

### Parts



Power Cable



Remote Controller



Lanyard



Wrench

### Other accessories



Safety lock



Silicone Oil

 


User Manual


## 02 Function Diagram

---

### 1. Walking Mode

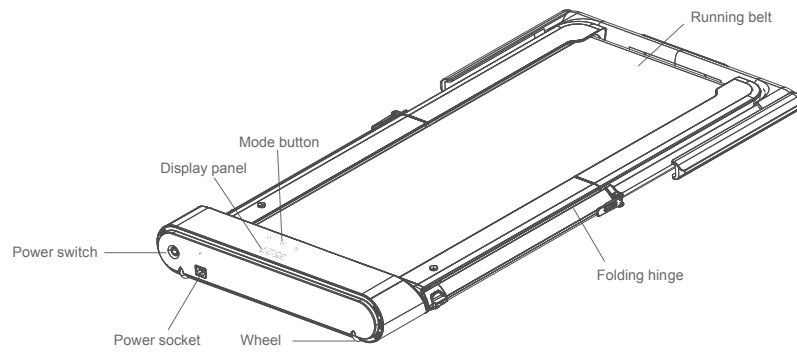

### 2. Running Mode

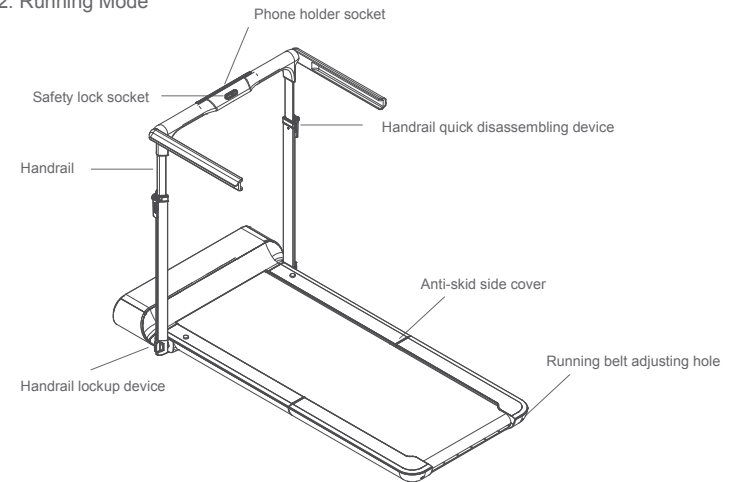 

## 02 Function Diagram

### 3. Functional introduction to display panel

TIME    KM    SPD    STEP    CAL

Time

Distance

Speed

Step

Calorie

The number of step and calorie should be set in APP so that they can be shown on display panel.

Touch button



Standby Mode



Manual Mode



Automatic Mode

 


Wi-Fi indicator light




Fault Warning Light

### 4. Remote control

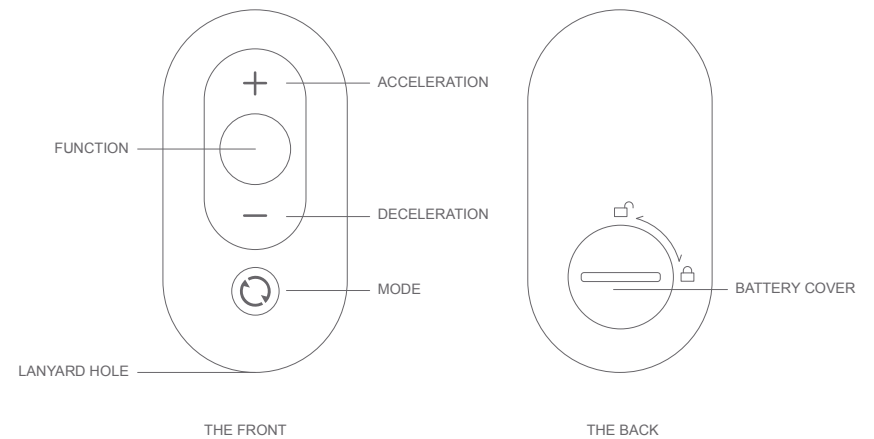


### 03 Instructions for Initial Operation

 ---

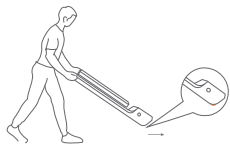

 
1. Choose flat ground to place the treadmill.  
It is forbidden to place it on thick or soft cushion.



2. Unlock the handrail lockup device, lift the handrail until it's upright, and tighten the handrail lockup device.



 
3. Unfold the treadmill slowly and press it down to completely flat.

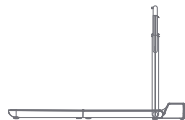

4. Loosen the handrail quick disassembling device, adjust it to an appropriate height, and lock handrail quick disassembling device.



 5. #####

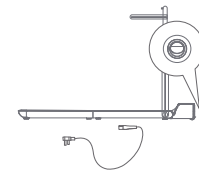

6. Insert safety lock into the safety lock socket and the phone holder into the phone holder socket. Connect the treadmill to power, and press the power switch.



7. Download "KS RECORD", complete installation and registration.



8. Open the APP, bind the treadmill according to the prompts, and the treadmill is ready for use.

## 04 Learn to Use the Treadmill

### 1. Introduction to modes



#### Standby Mode

Light of the Standby mode is on;  
Motor and sensor stop responding.



#### Manual mode

Light of the manual mode is on;  
Control the speed through the remote control or APP.



#### Automatic Mode

Light of the automatic mode is on;  
Speed is automatically controlled by intelligent algorithm.  
It follows the speed of walking.

### 2. Instructions of the standby mode control



Standby Mode

In Standby Mode, user can short press the mode button on remote control to turn on the treadmill and enter Manual Mode by default. Or touch the standby icon on the display panel to turn on the treadmill.



Under non-operating status, long press the mode button or touch the standby icon on the display panel, then the machine will enter Standby Mode.

### 3. Instructions of manual mode control (primary mode)



Manual Mode

In this mode, you can control the treadmill by the remote control. It is recommended that beginners use Manual Mode first and then use Automatic Mode, after being skilled in using the machine.



#### ACCELERATION

Short press: increase speed by 0.5 km/h

#### FUNCTION

Short press: start or stop the Treadmill

 
#### DECELERATION

Short press: reduce speed by 0.5 km/h

#### MODE

Short press: mode switch

Long press: switch to Standby Mode (non-operating status)

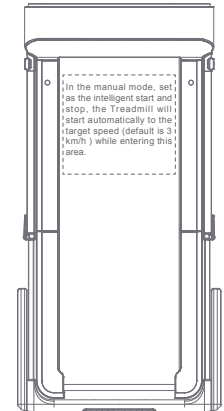



## 04 Learn to Use the Treadmill

### 4. Instructions of automatic mode control (advance mode)

 


Automatic mode

This is a challenging and higher-class mode, you can operate the treadmill completely out of remote control. It's better to use Automatic Mode after being familiar with the machine.

Function button and mode button can work in this mode.

Note: Automatic Mode is available only when the treadmill is in the walking mode.

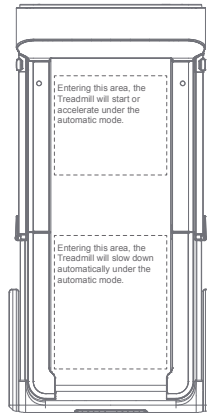

### 5. Instructions of remote control pairing

If the remote control has no response or you've changed a new one, the remote control and walking device need to re-establish communication.

Pairing method: restart the machine, and keep pressing the mode button for 5s.

### 6. Wi-Fi indicator light

Waiting for fast connection      Slow flashing

In network connection      Fast flashing

Successfully connecting to the router      Normally on

Successfully connecting to the cloud      No indicator

### 7. Error indicator light

E01: Drive communication fault

E02: Motor abnormalities.

E05: Overcurrent protection

E06: Motor protection.

E08: Sensor fault.

E09: Wi-Fi connection failure.

 
### 8. Networking and firmware upgrading

Leaving the factory, the treadmill is at waiting-for-connection status. User can bind it directly with APP.


If it is needed to configure the network again, you can long press the standby button on the display board, until the treadmill comes out the sound of "beep" and the Wi-Fi indicator light starts to flash.

Firmware upgrading: You may receive the updating prompt from your app. Please view the updating introduction, and operate on your mobile phone according to it to complete the firmware upgrading. During firmware upgrading, the display panel shows UPG.


## 05 Safety Notice

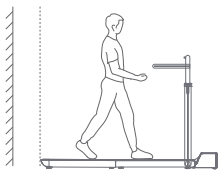

 
⚠ Please keep a rear distance 2000 mm or more.

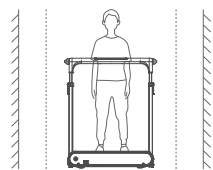

 
⚠ Please keep a distance of 500 mm or more for both sides.

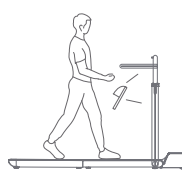


⚠ Please choose sport shoes and suit.

 

 
⚠ While using the treadmill, please clip the safety lock on the clothes. If any unexpected situation occurs, please pull out the safety lock, and the treadmill will immediately stop.

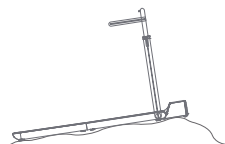

⊗ Using on uneven ground is prohibited

 

 
⚠ Unplug the power cord when the treadmill is not in use.

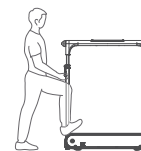

⊗ Trampling the machine head is prohibited.



 ⊗ Using machine with pet is prohibited.




⚠ Walking sideways or backwards on the machine is prohibited.




⚠ Please use it carefully for elders and pregnant women


## 05 Safety Notice

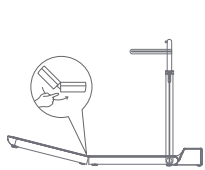 


⚠ Anti-pinch

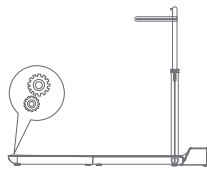 


⊗ Beware of involving your things.

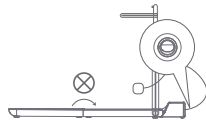 

 ⊗ Do not fold the treadmill with power-on.

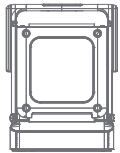

⚠ Do not store the treadmill upright.

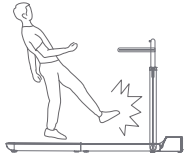 

⊗ Do not step up and down the treadmill with belt running.


## 06 Maintenance and Service
 
### 1. Clean the treadmill




- Turn off the machine and unplug the power cord.
- Wipe off dust and stains on the frame, front panel and belt.
- Do not wipe backside of the belt.
- After using for a period, dust and stains may appear on the back part, that is normal and just.
- clean them up.

### 2. Belt deviation and adjustment



- Start the treadmill, and keep the belt running at the speed of 3km/h.
- Running belt inclined left: Turn the left adjustment screw 1/4 circle clockwise.
- Running belt inclined right: Turn the right adjustment screw 1/4 circle clockwise.
- Slipping running belt: Turn the left and right adjustment screws clockwise at the same time a half circle.
- Run the running belt for a period of time (1~2 minutes) to observe the centering situation. If necessary, please adjust it again.

### 3. Lubricate the Belt

 

- Turn off the machine and unplug the power cord.
- Lift up the belt and apply silicone oil on the backside of the belt.
- Power on the treadmill again to run the running belt at 3km/hr for 10-20 seconds.
- 5-10 ml of silicone oil is needed for one time of lubrication.
- Add the silicone oil every 3 months.

## 07 Trademark and Legal Statement

---

Beijing Kingsmith Technology Co., Ltd has a number of patents covering the WalkingPad Smart Foldable Treadmill series.

This manual is copyrighted by KINGSMITH, Inc. No organization or individual may copy or distribute all or any part of this manual without the written permission of KINGSMITH, or use these patents without permission. This manual contains as much as possible the function descriptions and instructions for use when printing. However, it may still be inconsistent with the product you purchased due to continuous improvement of product functions, design changes or other.

The description in this manual may differ from the actual product in terms of color and appearance due to product updates. Please refer to the actual product.

Applicable product standard:

ASTM-F2276

ASTM-F2276

UL1647

## 08 After-sales Service and Warranty

---

The after-sales service of WalkingPad Smart Foldable Treadmill products are covered in the "Three Guarantees" service in strict accordance with the Consumer Protection Law of the People's Republic of China and Product Quality Law of the People's Republic of China. The service content is as follows: the customer can enjoy the return, exchange and repair services free of charge during the term of the Three Guarantees, wherein the repair, exchange, return should be handled by invoice.

The product can be returned without any reason within 7 days from the next date of receipt, but the user needs to bear the logistics costs; provided, however, for any performance failures listed in the WalkingPad Smart Foldable Treadmill Fault Table, the user can enjoy the following services free of charge after the fault is confirmed.

Service Type	Service Policy
Return	Return due to product quality within 7 days from the next date of receipt of the goods
Exchange	Exchange due to product quality within 15 days from the next date of receipt of the goods
Repair	Repair due to product quality within 365 days from the next date of receipt of the goods

Friendly reminder: the packing box is required to ensure the safety of the product during transportation, so it is recommended to keep the packing box at least 30 days from the date of receipt.

### Non-warranty policy

1. Repair, misuse, collision, negligence, abuse, liquid injection, accident, alteration, improper use of non-product accessories, or tearing or altering the anti-counterfeiting marks.
2. Expiration of the validity period of three guarantees
3. Damage caused by force majeure.
4. Incompliance with the performance failures listed in the Fault Table of WalkingPad Smart Foldable Treadmill.
5. Performance failures of the product and its accessories belonging to Fault Table of WalkingPad Smart Foldable Treadmill due to human reasons.

### WalkingPad Smart Foldable Treadmill

Name	Performance failure
WalkingPad Smart Foldable Treadmill	The functions listed in the manual are invalid
	No response at boot
	Power on alarm