


LÖWEX™



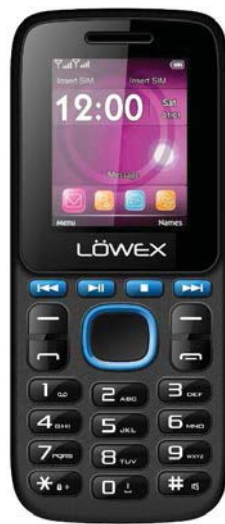

LOWEX™ Model / Modelo:

F18/F18m/F24

WELCOME TO OUR FAMILY:

Thanks for choosing LOWEX™ Products; we are proud to welcome you to our family!

You have recently purchase a LOWEX F18/F18m/F24 Feature Phone and we will help you to setup your new device in order to obtain the optimal performance of the unit, and a user friendly experience.

Please take a look of our Quick Guide in order to review some of the most useful and convenient features of your cell phone.

Remember to maintain contact with us through our website and social media accounts; we are always interested in receiving your feedbacks and comments.

LOWEX™ Limited Warranty

LOWEX™ Products and its affiliated companies worldwide (“LOWEX™”) warrants all our products against defects in material or workmanship for a period of two (2) years from the original date of purchase of the product(S) by a consumer (the “warranty period”). LOWEX™ does not warrant, and is not responsible for, any smart phone or other device made by anyone other than LOWEX™. If a material or workmanship defects arises with regard to any LOWEX™ product, and a valid claim is received within the Warranty Period, LOWEX™ will (1) repair the LOWEX™ product using new or refurbished parts or (2) replace the LOWEX™ product with a new or refurbished LOWEX™ device. For purposes of this limited warranty, “refurbished” means a product or part that has been substantially returned to its original specifications. In the event of a defect, these are your exclusive remedies. LOWEX™ reserves the right to charge a small shipping and handling fee in connection with the fulfillment of any valid claim.

For additional Information please contact us: support@LOWEX.net

USER MANUAL

Dear LOWEX™ USER:

On the standby interface, press right soft key to enter the interface of the name card holder. When the record of the name card holder is not empty, press left soft key for the following operation:

Prompt: Take the recorders in SIM card 1 for example.
Write Message

■ New SMS

You could write new message by using this function. When you input the message to be sent, press left soft key to send, to insert the templates, to add contact person information and symbol, and to save, etc.

■ New MMS

You could edit the MMS, and insert pictures or ringtones with this function. Select the "New MMS" and enter, you could edit the receiver, forwarder, confidential receiver, the title and content, and operate the functions of send, preview, save and set the timing send.

Inbox

Store the SMS, and push message you've received. The SMS, and push message could be differentiated by different icons. The icons before the message list means whether this message is SMS or Push message and which is stored in SIM1, SIM2 or the phone.

Choose one SMS and press left soft key, then you will do several operations, for example, reply the SMS, delete, dial and mark. Press OK key directly you can read this SMS, or Push message.

MULTIMEDIA

Camera

The device is equipped with webcam with high pixels. You can take photo any time and save the photo in the device or Micro SD. The photo can be used as wallpaper of your device or you can send it to your friends through Bluetooth.

Video recorder

The device is equipped with a video capture so that you can chat with your friends through it. A driver is needed to be installed when the video WAP service requires

network backup. You can consult the network operator or service supplier about the availability, rates and tax of WAP services.

Letter (Capital, Normal)

Enter edit page, press “#” and switch the input mode to “letter”, then press the keys on keypad, selected letters will appear on the screen.

Press the number key can get the first letter marked on the key; press twice quickly can get the second letter marked on the key. Similarly, if the letter you want to input have the same key with the former letter, please wait until the cursor appears again, and then input the new letter.

Number

Enter “edit” mode, press “#” key you can change the input way to “number”. Then press the keys, number will appear on the screen. The key 0-9 separately represents the figure from 0 to 9. You can press corresponding key to get desired number. Press right soft key can delete the number you input.

ACCESSORIES

You may choose following enhancements of the device.
You can also check with your dealer.

Additional battery (the customer is suggested to confirm whether it is supplied.)

You can purchase the lithium batteries with different capacity provided by this company.

Travel or car charger (The customer is suggested to confirm whether it is supplied.)

Earphone (The customer is suggested to confirm whether it is supplied.)

CARE & MAINTENANCE

Maintenance of battery

Your device is powered by a rechargeable battery. It is necessary to have the battery charged when it is going to wear out. The full performance of a new battery is achieved only when it is fully wore out.

Unplug the charger from the electrical plug and the device when not in use. Do not leave fully a charged battery connected to a charger over a week, since

overcharging may shorten its lifetime

Temperature tends to affect the limit of battery to be charged. Therefore, it is necessary for the battery to be cooled or warmed before it is charged. If the temperature of battery exceed 40°C, the battery cannot be charged.

Capture function is used. The details can be found in driver installation guide.

Audio player

This phone could play the MP3 stored in the phone memory and support the background play.

Press up key and down key to adjust volume. Press left soft key to access Options:

On the audio player interface, move cursor to the shortcut keys on the screen, you could rapidly operate the MP3 functions.

Under the MP3 list interface, press left soft key, then you can do operations as follow ways:

--- Music lists: Display all the MP3 or the play list

you've saved.

Recorder

Use this function you can record or listen to your own record. The record file format way:

Press left soft key and select "record". You can also do the following.

Enter "record" interface, move the cursor to the record icon and press OK key to record. During the process, press left soft key can make a pause, press it again will continue the record. Press right soft key can stop and save the record. You can press left soft key again and do the following:

FM Radio

You can listen to Fm radio freely. Enter the radio interface; search the frequency automatically by pressing the up and down direction keys, and change previous or next channel by pressing the left and right direction keys.

On the interface of the radio playing, press left soft key you could enter the options menu and do operations as follows:

Setting

You can customize the settings, such as time and date, language, call setting etc.

Network selection:

This function can let you select the network manually or automatically when the phone is in the roaming state. You can use this function only after you have made an effective roaming.

Select SIM1/SIM2 and then access:

- Auto select: Press the left key and OK, the mobile phone will search various networks, this operation will let your phone register the most suitable network.
- Manual Select: Press the left soft key and OK, the mobile phone will search various networks, You can select the suitable network from the listed networks.

Internet

The device is compatible with WAP service. You can visit various WAP services, for instance, news, weather forecast and airlines etc. The services are specially designed for the device and are maintained by WAP service supplier.

Dial a call

In standby mode, press numerical keys to input phone number to dial phone number. When you finish inputting phone number, press the dial key to make a call. If you're making a long distance call, add the area code preceding the telephone number.

Reject a call

You can press End key to reject an incoming call.

Receive a call

When an incoming call arrives, the phone will give out the corresponding prompt (such as vibration, ringtone, and etc.); if network support, the phone screen will show the name and telephone number of the caller; at this time, you can press Dial key to receive an incoming call.

End a call

After finishing a call, you can press End key to end a call.

Emergency Services

You can directly dial an emergency service call without

SIM card. Different network uses different emergency numbers, please consult your network operations company for more details.

Function Menu

File manager

Your mobile phone support T card function. You can check the specific content and service condition of the phone memory via this function. Meanwhile, you can format memory, too.

Phonebook

This function could help you browse the name card holder, store, edit and delete names and phone numbers in the phone and SIM card. To facilitate the management of the records, this phone sets the group

Use the battery only for its intended purpose and avoid short-circuiting. Accidental short-circuiting can occur when a metallic object causes direct connection of the positive (+) and negative (-) terminals of the battery.

Do not use damaged battery.

Leave the battery in hot or cold places will reduce the

capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily, even when the battery is fully charged.

Do not dispose of batteries in a fire as they may explode. Dispose of batteries according to local regulations. Care of maintenance of your device.

The suggestions below will help you protect your warranty coverage.

- Keep the device and accessories out of the reach of small children;
- Keep the device dry. All types of liquids or moisture will corrode electronic circuits.

Additional Safety Information

Traffic Safety

Unless there is an emergency, otherwise do not sue the device.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information (SAR)

This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the EUT transmitting at the specified power level in different channels. The FCC has granted an Equipment Authorization for this device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this device is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid. To ensure that RF exposure levels remain at or below the tested levels, use a beltclip, holster, or similar accessory that have no metallic component in the assembly and must maintains a minimum separation distance of 15mm between your body and the device.