 




HÖGTALARE BIGGIE

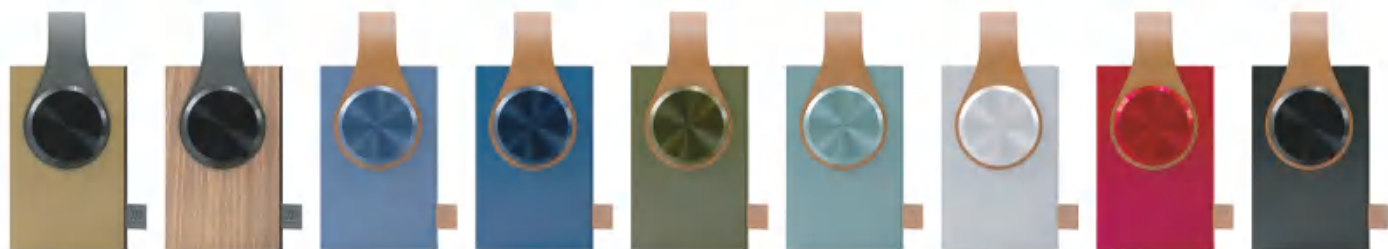

User manual



Index

Important safety instructions	4
Box contents	5
De	11
Fi	
Au	
Ch	
Co	
TV	
AL	
Ac	
Us	
Re	
Re	
W	
Te	
Fu	
Tr	

We sincerely thank you for choosing MOREL for your home.

Over four decades of innovation and handmade craftsmanship are the core of every speaker we manufacture. The Biggie is a labor of love and unparalleled passion that pushes design and acoustic boundaries to create a speaker that will unleash the raw emotions in music.

Every Biggie speaker is built with great attention to detail to meet the demands and expectations of the most discerning listeners. We urge you to read the manual and consider our guidance in order to achieve optimal performance. It is always recommended to seek the advice of an authorized Morel retailer or contact us directly at info@morelhifi.com for any questions you may have.

We wish you many years of listening enjoyment.

Forged for MUSIC

INSTALLATION

- Keep the device away from direct heat (radiators, stoves, kettles, ovens, etc...).
- Keep the device away from fire and flames (candles, fireplace, bonfire, etc...).
- Do not cover the front speaker grills.
- Place the speaker on a flat and stable surface.
- Plug in the supplied AC power cable the speaker.
- Plug in the supplier AC power cable to the wall outlet.

CONNECTION

- Only connect the device to the compatible audio sources as instructed in this manual.
- Only connect the device to the correct mains voltage as specified on the equipment.
- Be mindful to any damage to the power cord, plugs and sockets. Do not use faulty electrical equipment under any circumstances.
- Only use the supplied power supply and cable.
- Always unplug the device during lighting storms or when left unused for extended periods of time.
- The device does not have a mechanical power switch, unplugging the power supply in the only way to completely disconnect mains power to the device. Always make sure the power plug is readily accessible.

Important safety instructions

Read the safety and operation instructions before using the product.

Follow all the instructions and heed all warnings.

Keep the instructions handy for your future reference.

WARNING!

- **WARNINGS** - to reduce the risk of fire or electric shock, do not expose the device to water. The device is not waterproof.
- **WARNINGS** - do not cover the device.
- **WARNINGS** - only use the accessories specified by the manufacturer that have been supplied with the device (power supply, adapter, etc.).
- **WARNINGS** - the power plug and adapter should remain readily accessible at all times and disconnected when the device is not in use or malfunctioning.
- **WARNINGS** - this device may cause hearing damage. Always adjust the volume to a safe listening level and keep a safe listening distance.
- **WARNINGS** - do not attempt to open, repair or modify the device. There are no user serviceable parts inside.
- **WARNINGS** - do not plug a guitar into the speaker Aux input.
- **DANGER** - always make sure the device is placed on a flat and steady surface. Be mindful of the product sliding to avoid accidental drops.

CLEANING AND MAINTENANCE

- Keep the device away from dustm clean regularly with dry cloth and vacuum cleaner.
- All servicing should be done by qualified service personnel. Servicing is required if the device: has been damaged in any way, submerged or soaked in water, does not operate normally, or has been dropped.

- FCC STATEMENT

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference
2. this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try correct the interference by one

or more of the following measures:

- Reorient the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into and outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void

your authority to operate the equipment.

The distance between user and products should be no less than 20cm

The BIGGIE is In door use only.

CAUTION

- Risk of electric shock! Do not open or disassemble the
- device. There are no user serviceable parts inside.
- Refer servicing to qualified service personnel.
- The equipment should be installed and operated with minimum distance 20cm between the radiator and your body.
- This equipment is a Class II or double insulated electrical appliance.
- The max. operation temperature is 45°C,



! WARNING!

The mains plug or appliance coupler is used and disconnect device, the disconnect device shall remain readily operable.

This may not be treated as regular household waste.

Management of the WEEE (Waste Electrical and Electronic Equipment) is applicable in member states of European Union and other European countries with individual national policies of management of WEEE. If you need more information on the collection, reuse and recycling systems, please contact your local or regional waste administration facility.



 
For the declaration of conformity, visit this website: Morelhifi.com




Box contents

1. Power cord and interchangeable plugs.
2. Quick start user manual and safety information.
3. Biggie active stereo loudspeaker, handle and grill.


1

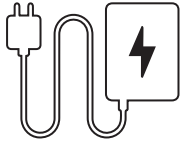

2

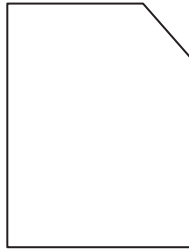 


3

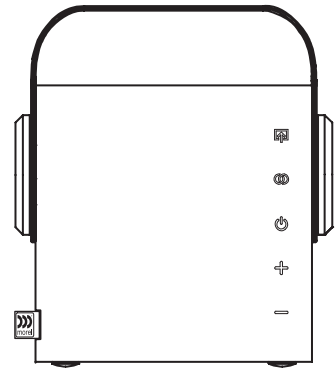 

Device layout


FRONT

 1. Input selection button / indicator
2. BT tws pairing button / input indicator
3. Power button / indicator
4. Sound level up button
5. Sound level down button
6. Woofer
7. Tweeter
8. Basse reflex port

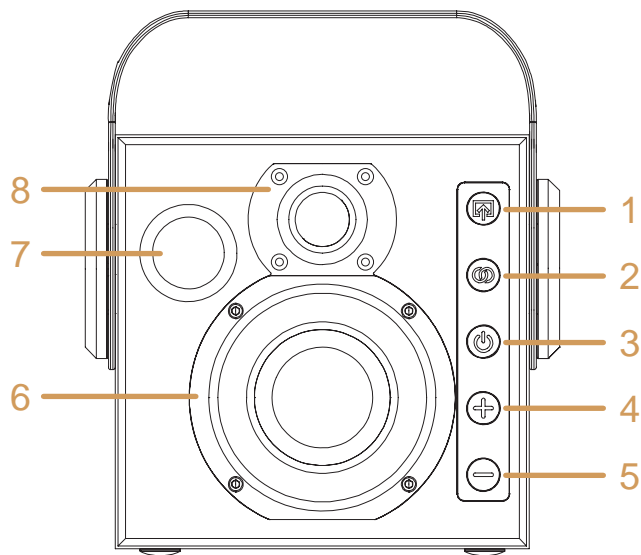

BACK

 
1. USB-C power input
2. Aux input for 3.5mm stereo plug

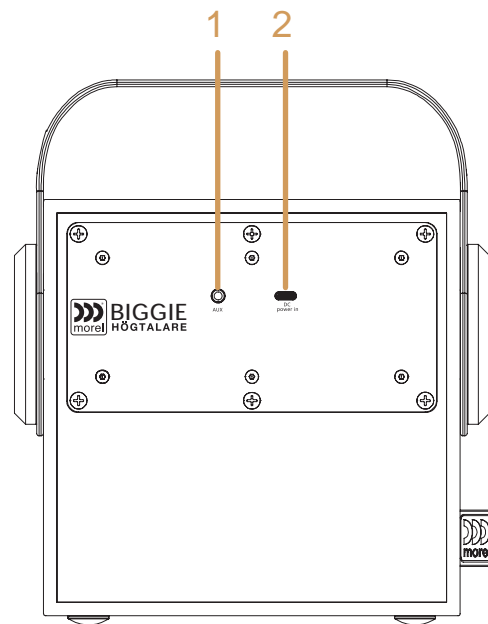

Interface


POWER ON

 1. Long press the power button for 2 seconds.
2. BT Mode: all indicators light up.
3. Line in mode: pairing light off, all lights on.

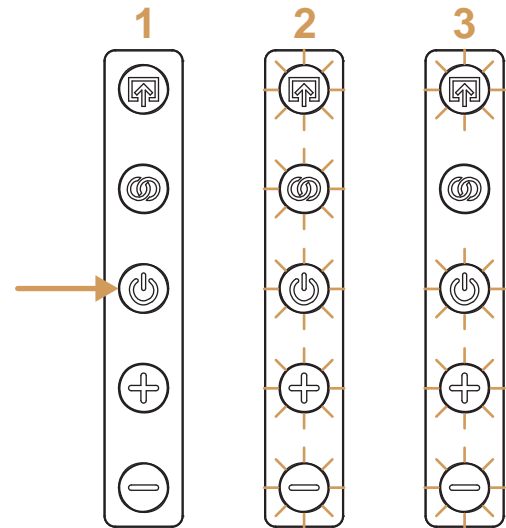


POWER OFF

 1. Long press the power button for 2 seconds.
2. All indicators light off.

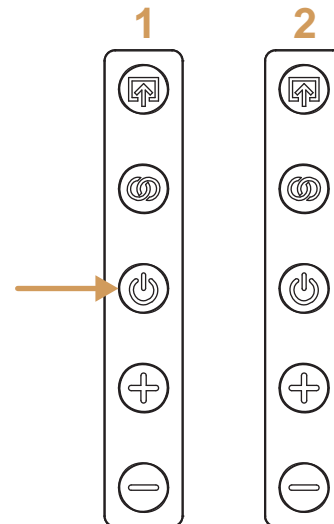


LOW BATTERY SHUT DOWN

 1. When the battery is low the power indicator light flashes fast.
2. When the battery is lower than 10% the speaker will shut down.

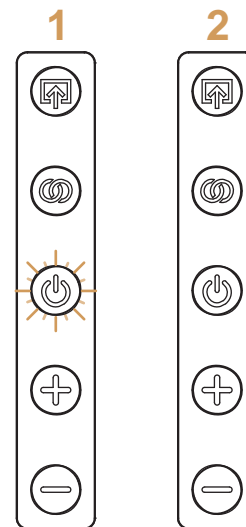


POWER OFF

 1. Long press the power button for 2 seconds
2. All indicators light off.

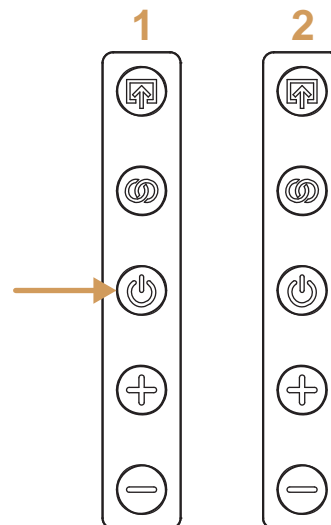


STANDBY MODE

 1. After 5 minutes of connection, the speaker will go on stand by, to activate playback
2. Battery output: power button will be on for 1 hour, then will shut down
3. Connected to charger: power button with weaker light is on with no time limit

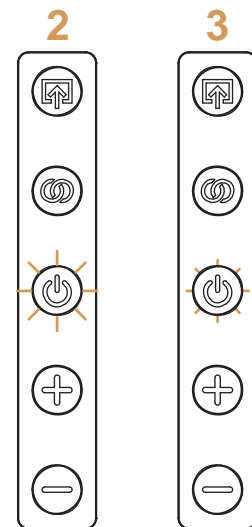


BT PAIRING-CONNECTING

 1. Press the pairing button to enter the BT mode, the device name "Hogtalare Hogtalare Biggie" can be scanned.
2. The Pairing LED will flash quickly, other will be on.
3. When connected to the device, all the lights are on.

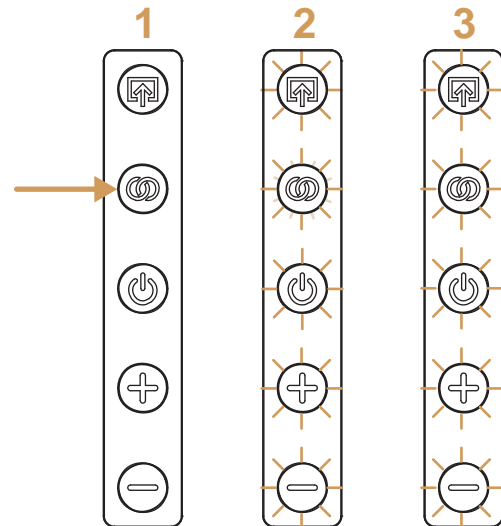


BT UNPAIRING

 1. Press the pairing button to enter the BT mode, the device name "Hogtalare Hogtalare Biggie" can be scanned.
2. The Pairing LED will flash quickly, other will be on.

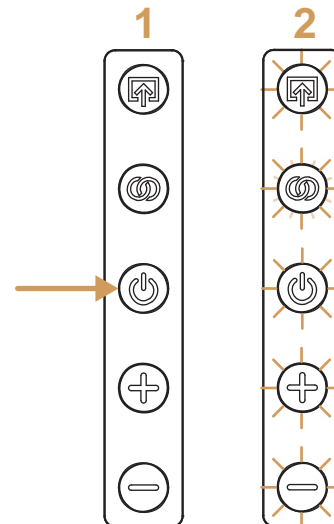


AUX MODE SWITCHING

 1. Press the source button
2. AUX pairing light off and other lights on

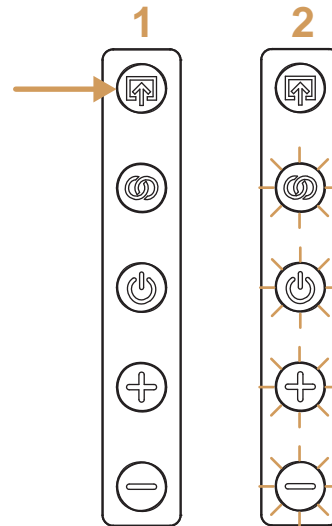


BT MODE SWITCHING

 1. Press the source button
2. Pairing button flashes quickly and other buttons are on
3. Connected: all lights are on

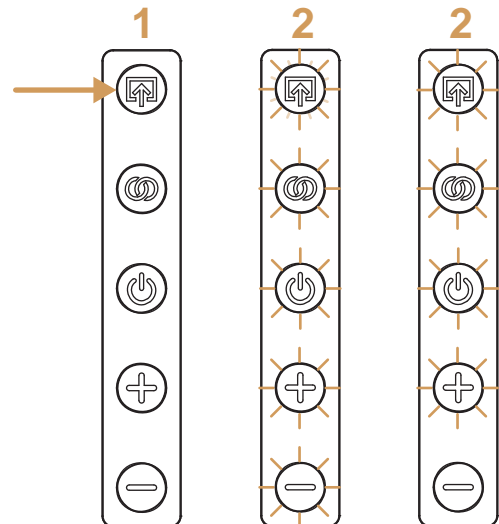


VOLUME CONTROL

 1. Press + the indicator flash one time
2. Press - the indicator flash one time

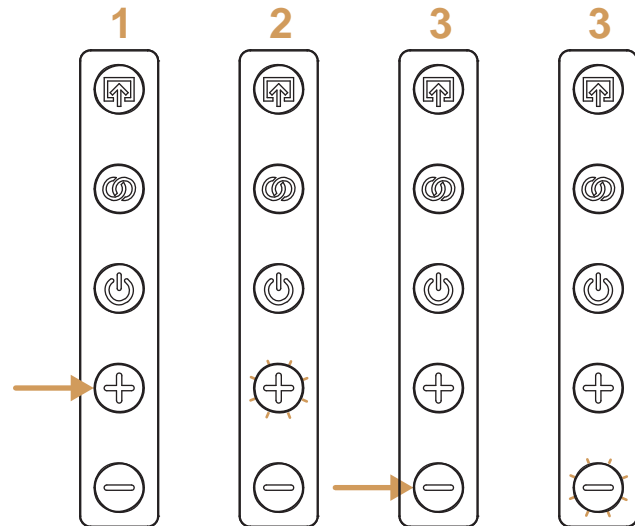


TWS PAIR

 1. Press on both master and slave the pairing button for 2 seconds
2. Pairing led in both speakers will flash
3. Pairing led will be light on for both speakers

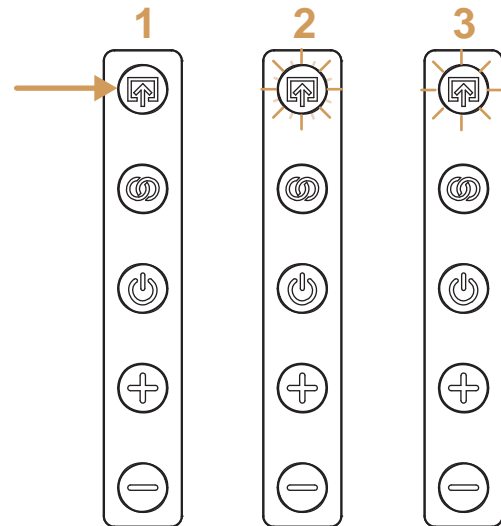


TWS UNPAIR

 1. Press on both master and slave the pairing button for 2 seconds
2. Pairing led in both speakers will flash

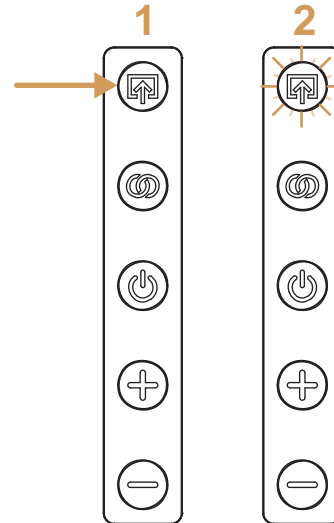


BATTERY INDICATOR

 1. Press the “+” and “-” together for 2 seconds
2. 81%-100% all buttond are off 1 second and light for 3 second (5 buttons)
3. 61%-80% all buttond are off 1 second and 4 from the bottom light for 3 second (4 buttons)
4. 41%-60% all buttond are off 1 second and 3 from the bottom light for 3 second (3 buttons)
5. 21%-40% all buttond are off 1 second and 2 from the bottom light for 3 second (2 buttons)
6. 10%-20% all buttond are off 1 second and 1 from the bottom light for 3 second (1 button)
7. Less than 10% the speaker shuts down

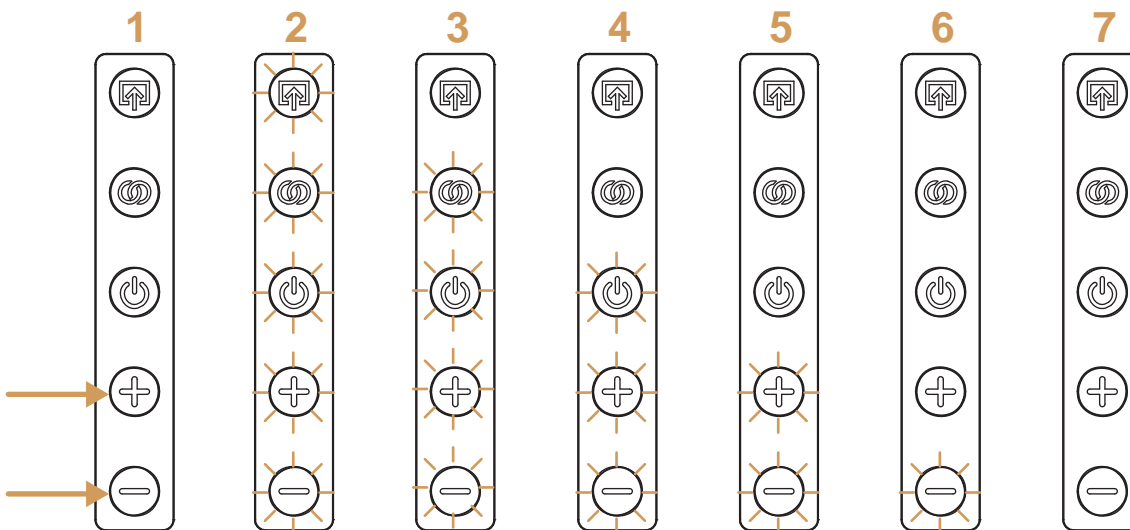

CHARGING INDICATOR

 
1. Insert the power supply
2. Power indicator flashes every 2 seconds
3. When fully charged all lights on

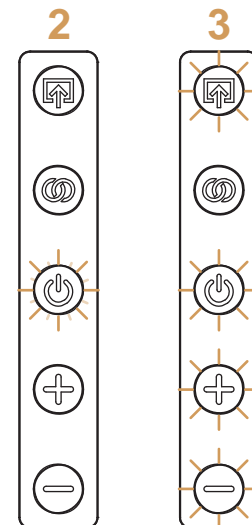

Removing/Attaching the grill

Biggie wireless stereo speaker comes with a removable grill that attaches to place with hidden magnets.


 
1. To remove the grill, gently pull the leather logo tag found at the bottom left side.
2. To place the grill back on, just put the grill into place and the magnets will automatically lock in place.

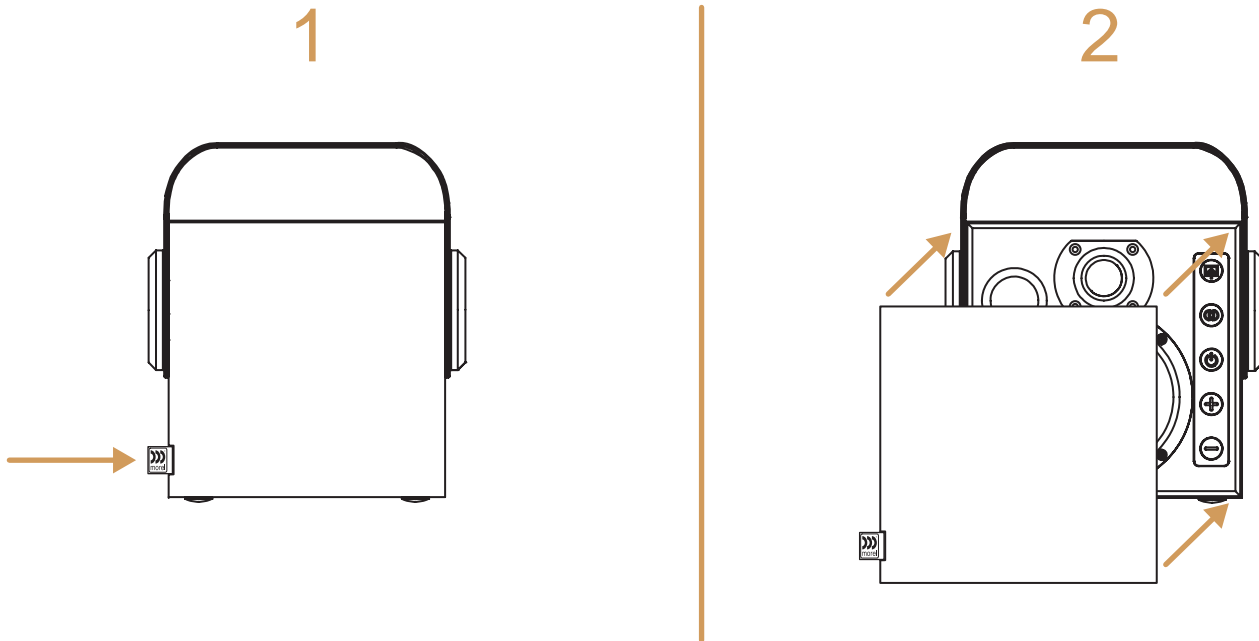

Removing/Attaching the handle

Biggie wireless stereo speaker comes with a removable handle that attaches to place with a screw side circle.

  
1. To remove the handle, gently unscrew the side circle in each side counterclock direction. After removing the handle, screw the side circle clockwise on both sides.
2. To mount the handle, gently unscrew the side circle in each side counterclock direction. After removing the sides, position the handle and screw the side circle clockwise on both sides.

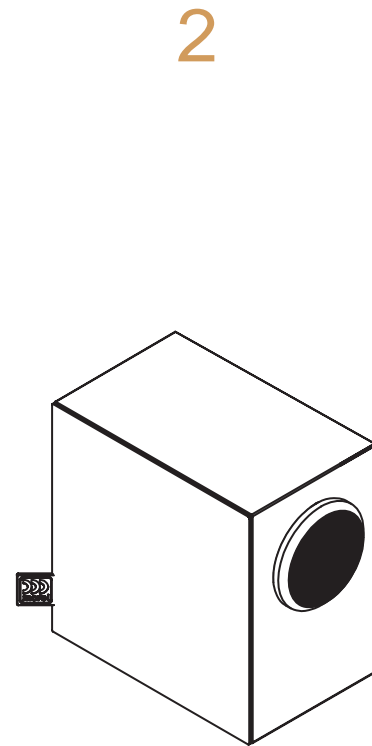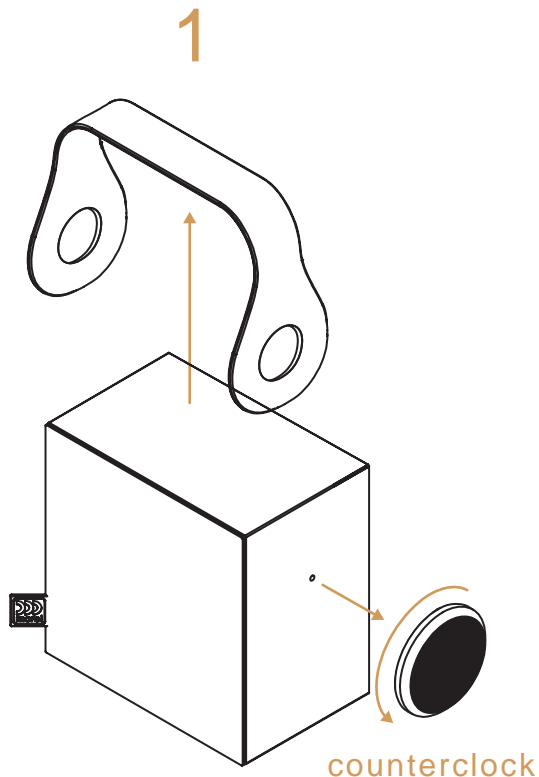

Wall mount (optional accessory)

Biggie wireless stereo speaker can also be wall mounted with a specific designed bracket (sold separately)

 1. To add the bracket start by removing the handle (as showed in the “Removing/Attaching the handle” section)
2. Turn the sides tight and the wall mount accessory is fixed

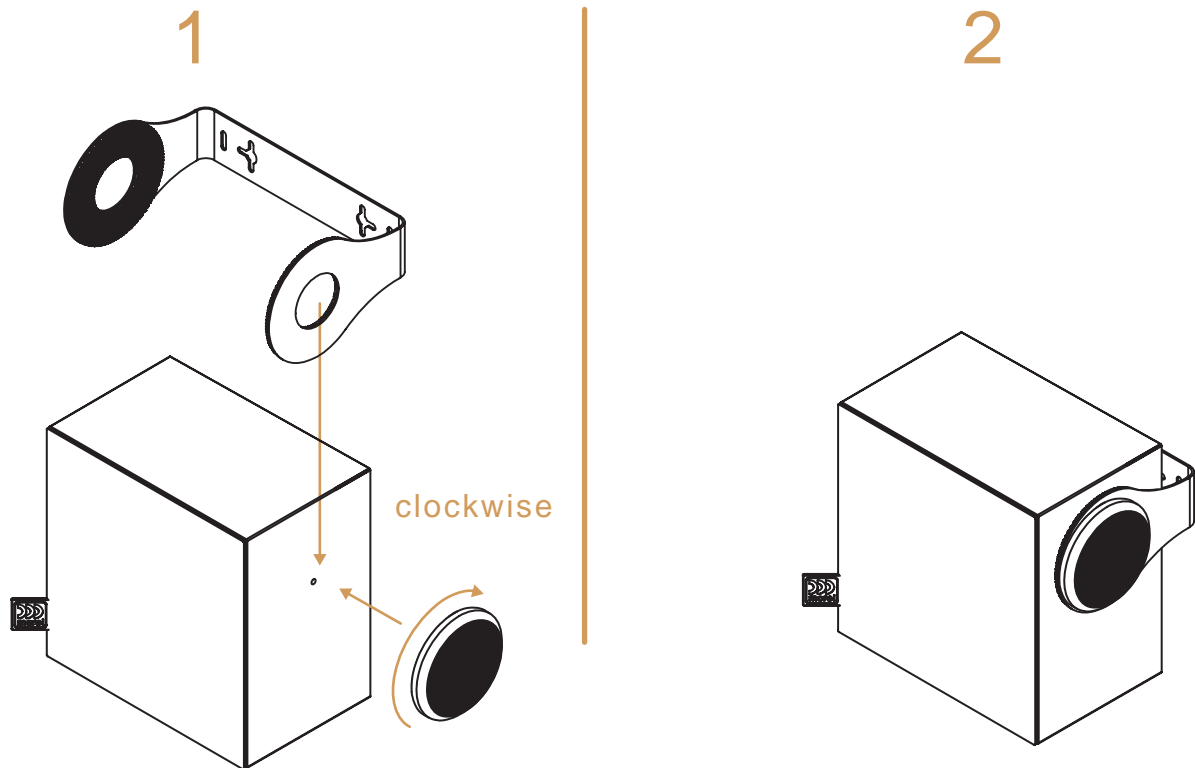

Technical information

All specifications are subject to change without prior notice

- **DRIVER AND BUILD**

1 x 4" woofer

1 x 0.9" Soft dome tweeter (LR Stereo)

CONNECTIVITY

- BT

UNLEASH THE MUSIC



Morel, Ness Ziona, 70400 Israel.

Tel: +972-8-9301161

Fax: +972-8-9301312

E-mail: info@morelhifi.com

Morel America, Chandler, AZ, USA

Toll free number: 1-877-667-3511

Fax: 1-718-721-1560

E-mail: info@morelamerica.com

www.morelhifi.com