
110g书写纸 4C 尺寸:76.2*152.4mm 装订方式:骑马钉 红色框不做印刷

> Bentonville, AR 72716 Walmart.com

page 12 page 1 page 2 page 3

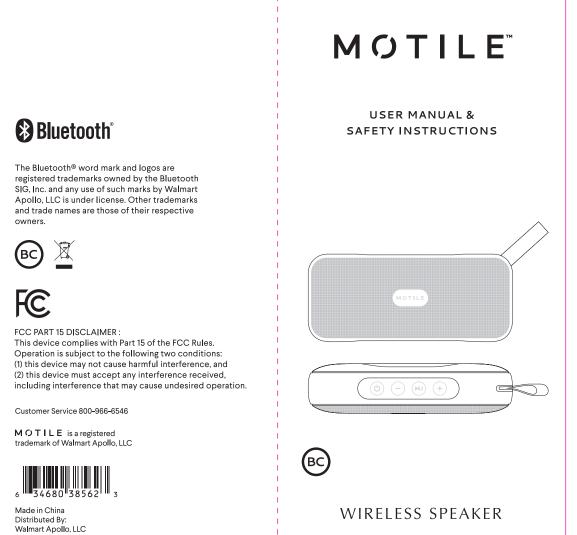

Who We Are.

MOTILE is a design-driven lifestyle brand of smart accessories.


We exist to simplify our people's lives and encourage them to actively explore and express their lifestyle aspirations.

Our products marry form and function, taking inspiration from both the tech world and the fashion world to enhance our people's personal stories with thoughtful, unexpected, and empathetic solutions.

WIRELESS SPEAKER

Our sleek speaker is chic and low-profile, complementing any room. Bluetooth® wireless technology allows you to stream music on the go. Our water resistant design enables your active lifestyle.

page 4 page 5 page 6 page 7

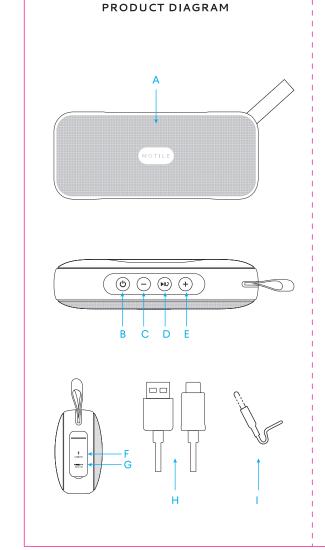

Bluetooth® MODE

- A LED Indicator
- Power ON/OFF C 1. Short press it for volume down:
- 2. Long press it for the previous track. 1. Short press it to Play/Pause;
- 2. For an incoming call, short press to pick up: 3. For an incoming call, long press to reject; 4. When in a call, short press to hang up;
- 1. Short press it for volume up; 2. Long press it for the next track.
- USB Port
- AUX Port Micro USB to USB Cord
- AUX Cord

Bluetooth® PAIRING

- 1. Long press (b) for 2 second to power ON; The speaker goes into Bluetooth® searching mode automatically. The white LED indicator light blinks.
- 2. In your device's Bluetooth® menu, find "Motile Speaker" in the list and select it. 3. Pairing is successful when the LED indicator light stays white.



AUX MODE

- A LED Indicator
- Power ON/OFF С
- Volume down Volume up
- USB Port
- G AUX Port
- Micro USB to USB Cord AUX Cord

The speaker also features 1*AUX audio in port, simply connect the speaker with your mobile phone/MP3 player/PC/Laptop with the 3.5 mm jack audio cable. The green light will be on and you can play music via wired connection. Note: In AUX mode, the stereo sound will be invalid.

LED DEFINITIONS

- 1. Power ON: When power ON, the default is Bluetooth® mode. The white LED flashes quickly under Bluetooth searching mode. Once the AUX cable is inserted, it goes to AUX mode automatically. 2. Bluetooth®: The white LED stays lit
- when Play/Pause. When the phone is beyond the Bluetooth® range, the white LED flashes quickly back to searching mode. It powers OFF after 10 minutes without any connection.
- 3. Bluetooth® Searching: White LED flashes quickly.

- 4. Pairing Successful: White LED stays lit
- 5. Low Power: Blue LED flashes every 5 seconds
- 6. AUX IN: Green LED stays lit
- 7. Charging: Blue LED stays lit. After full charge, the Blue LED turns off.

COMPATIBILITY

Compatible with Bluetooth® wireless technology enabled products.

SPECIFICATIONS

- 1. Product Name: Motile
- 2. Bluetooth® Version: Bluetooth® 4.2 3. Transmission Distance: 10 m/33 ft
- 4. Battery Capacity: 2600 mAh
- 5. Driver Units: 4Ω 12W=6Wx2 6. Audio Input: Bluetooth / 3.5 mm AUX-IN
- 7. Play Time: 6-8 hours (70% volume)
- 8. Charge Time: 4-5 hours (Input: 5 V=1 A)
- 9. S/N Ratio: 2 60 dB 10. Hands-free: Support
- 11. Product Size: 200 mm x 85 mm x 48 mm

page 10 page 11 page 8 page 9

FREQUENTLY ASKED QUESTIONS

- Q: The speaker cannot connect the once-paired cellphone. A: First, remove the speaker's pairing name from the cellphone's Bluetooth® list and then turn off speaker. Turn speaker on and follow the steps to pair cellphone.
- Q: What if there is noise or discontinuous sound when playing?
- A: The speaker can be normally used within 10m under no obstruction environment. If it is over 10m or with obstruction, there might be noise or discontinuous sound.
- working? A: When there is no Bluetooth® pairing or AUX IN within 10

Q: Why will the speaker shut down automatically when it is

- minutes, the speaker will shut down automatically to reduce power consumption.
- A: First, remove the speaker's pairing name from the cellphone's Bluetooth® list and then short press the Bluetooth Disconnection Button to restart paring mode.

Q: The speaker cannot connect the once-paired cellphone.

Q: What is the working sequence of the speaker? A: The priority is AUX IN input, phone call in Bluetooth® mode and then playing music Bluetooth® mode.

A: Please plug in the charger and try in a few minutes.

Q: The speaker cannot be started up in a normal situation.

* This speaker supports mobile phones and tablet PCs etc. Here this User Manual is illustrated based on mobile phones.

WARNINGS, SAFETY & COMPLIANCE

READ THE FOLLOWING RECOMMENDATIONS BEFORE USING THE Bluetooth® SPEAKER.

- 1. Keep product dry and don't take it to damp places to avoid the product's internal circuit being affected.
- 2. Keep the product away from direct sunlight or hot places. High temperatures will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- 3. Don't expose the product to extremely cold area. It may damage the internal circuit board.
- 4. Don't try to disassemble the product as it may get damaged if you are not a professional. The internal circuit might get damaged.
- 5. Don't use intensive chemical products or detergent to clean the product. 6. Don't scratch the surface with sharp tips.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna. • Increase the separation between the equipment and
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced technician for help. • The cable matched with this device is only for the use of charging.