




BOYA


BY-AP4

True Wireless Stereo Earbuds

 
FCC ID: 2ARN3BY-AP4

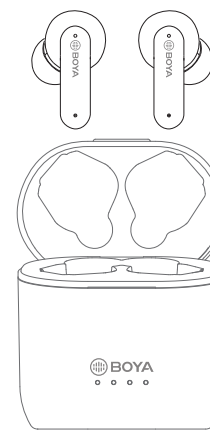


Package Content

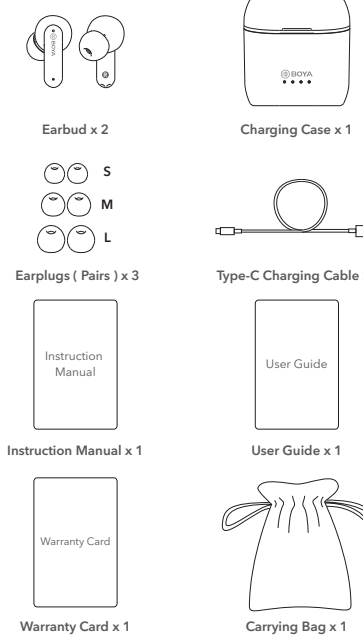 

Product Structure

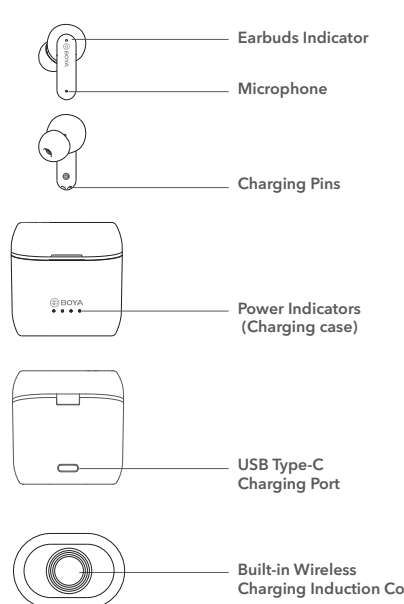 

Earplugs Wearing

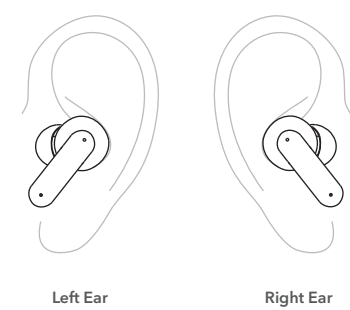 

Please choose the pair of earplug with most appropriate size. Insert the earbuds into ear canals as shown above, rotate it to your most suitable, comfortable position.

Power ON / OFF

Auto Power ON: Open the case, and the earbuds turn on automatically. Auto Power OFF: Haven't operate or connect the earbuds beyond 5 minutes. Being in ultra-low battery status. Power ON / OFF Manually: 1 Turn ON: long press left / right earbud for 2.5 seconds, left / right earbud will turn on. 2 Turn OFF: long press left / right earbud for 8 seconds, left / right earbud will turn off. Reconnect the device: The earbuds will automatically reconnect to recent connected device, after turn back on.

Bluetooth Pairing

AUTO ON/Bluetooth Pairing: 1 Open the case, the earbuds turn on and automatically pair with each other. After paired successfully, the main earbud prompts "Du", the auxiliary earbud prompts "DuDu". (main / auxiliary earbud switch automatically) Blue lights on left / right earbuds flash per 0.5s indicates pairing pending. 2 Open the Bluetooth on your device, searching for the Bluetooth named "BY-AP4" and select it to enter the pairing mode. NOTE: for single-ear mode, take either left / right earbud out from charging case until blue light flash per 0.5s, then search "BY-AP4" for connection.

Earbuds Resetting / Restore Factory Setting

This mode is for the pairing failed condition of earbuds only. 1 Long press left/right earbuds for 12s under off state, the earbuds prompt "Power On", "Pairing", "DuDuDuDu" in turn, the red light of earbuds steady 2.5s and then turn off, indicates the earbuds successfully restored to factory setting. 2 Place both earbuds back to the charging case, close the cover and take them out after a short period, the earbuds will turn on, automatically pair into binaural mode and re-search for pairing. (earbuds red/blue light steady 2.5s, then blue light flash every 0.5s)

Charging Guidance

Use the charging case for charging: Place earbuds back into charging case, close cover, the left end / right end indicators flash 5s and then turn off, respectively indicates the left / right earbuds is charging. Use wireless charger to charge the case: the indicators on the charging case flash white in sequence. When fully charged, the indicators glow solid white. Use the USB Type-C charging cable to charge the case: The indicators on the charging case flash white in sequence. When fully charged, the indicators glow solid white.

Basic Operation

- 1 Play / Pause: Double tap left/right earbud
2 Volume + / Volume -: Long press left earbud for 1.5s
3 Previous Track / Next Track: Triple tap left earbud
4 Wake Up Voice Assistant: Tap left / right earbud 4 times
5 Calling Operation: Answer / Hang Up. Tap left / right earbud. Reject. Long press left / right earbud for 1.5s

Indicator Light

Table with 2 columns: Indicator Light and Description. Rows include Power On, Power Off, Connection Pending, Connected, Reconnection Pending, Successful Connected, Incoming Call, Earbuds Charging, Earbuds Fully Charged, Earbuds Low Power, Charging Case Charging, and Charging Case Fully Charged.

Sound Prompt

Table with 2 columns: Sound Prompt and Description. Rows include Power On, Power Off, Bluetooth Connecting, Bluetooth Connected, Bluetooth Disconnected, Low Battery, Incoming Calling, Reject a Call, Over Distance, Restore Factory Setting, Maximum Volume, and Minimum Volume.

Product Parameters

Table with 2 columns: Product Parameters and Value. Rows include Bluetooth Name, Bluetooth Version, Frequency Response, Transmission Range, Earbud Battery Capacity, Charging Case Battery Capacity, Power Supply, Music Play time, Charging Time, Bluetooth Profile, and Weight.

The above specification is sourced from the BOYA laboratory, and the actual specification depends on the product or other factors. If you have any doubt, please contact our support team

Hearing Protection

- 1 Do not use it too long under high volume as it may damage your hearing
2 Do not use too high volume in case surrounding sound cannot be heard
Safety Precautions: 1 Please avoid heavy drop or bump
2 Please use original or qualified charging cable
3 Do not disassemble or modify the earbuds yourself to prevent damage or danger
4 Please avoid the earbuds from water contact and keep it dry
5 Please keep the earbuds away from children as it may damage their hearing
6 Do not use earbuds in lightning weather to prevent accidents
7 Wipe with a soft, dry cloth to avoid irritating chemicals or strong detergents
8 Do not use this product in severely hot / wet / corrosive environments.

Contact Us

- 1 Contact number: 4006131096
2 Official website: www.jayz.com
3 Address: Building A16, Silicon Valley Power Intelligent Terminal Industrial Park, Guanlan Dalu Industrial District, Shenzhen

Common Problem

- Q: The earbuds cannot turn on automatically?
A: 1 Check if the charging case has power
2 Check if the earbuds are low powered
3 Check if the earbuds can be turned on manually
4 Bluetooth signal is not stable?
A: 1 Check if there's electromagnetic interference surrounded
2 Check if the earbuds are too far from device
3 Restart the phone, to prevent the problem of mobile phone signal instability
4 Turn off the wifi and try again
Q: How to tell if the earbuds are fully charged?
A: 1 The earbuds charging time is about 1.5 hour.
2 When fully charged, the earbuds blue light will steady for 7s and then turn off
Q: The earbuds cannot be charged?
A: 1 Make sure the earbuds charging contacts are clean
2 Whether the earbuds are placed in the charging case.
3 Whether the charging case has sufficient power.

Warranty Service

- 12-Month Quality Warranty
Lifetime Technical Service Support
1 Within 1 year since the customer purchase this product, we will provide free warranty service in case the damage is caused during normal use.
2 Under the following circumstances, the free warranty will be refused. We will however provide free repair service but charging fees for parts.
A. The product has been mishandled, inadvertently used, or damaged due to irresistible movement.
B. The product is disassembled and repaired privately without the company's permission.
C. The head unit is in the form of debris or impact, which causes the diaphragm to deform, crush, and soak for a long time. Damage to the casing, deformation, etc.
D. The using time exceed 1 year.
3 The free service provided by this warranty does not include product accessories and other packaging, gifts products and so on.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.