



**Table of Contents**

1. Introduction

2. Safety Instructions

3. Assembly

4. Operation

5. Maintenance

6. Troubleshooting

7. Specifications

8. Warranty

9. Contact Information

**Introduction**

The XC88 is a powerful, multi-functional tool designed for professional use. It features a robust construction and advanced safety features to ensure reliable performance and user safety.

**Key Features:**

- High torque output
- Variable speed control
- Overload protection
- Compact and ergonomic design

**Safety Instructions**

Read and understand all safety instructions before using the XC88. Failure to follow these instructions may result in personal injury or property damage.

**General Safety:**

- Do not use the tool if you are tired, under the influence of alcohol, or taking medication.
- Wear appropriate personal protective equipment (PPE), including safety glasses and gloves.
- Keep the tool and work area clean and free of clutter.
- Do not use the tool in explosive or flammable environments.

**Assembly**

Follow the steps below to assemble the XC88. Ensure all components are correctly installed and tightened to the specified torque.

**Tools Required:**

- Hex key
- Wrench

**Steps:**

- Remove the protective cap from the motor housing.
- Insert the drive shaft into the motor housing and secure it with the provided nut.
- Attach the handle to the drive shaft and tighten the handle nut.
- Check the tool for proper operation and ensure all components are secure.

**Operation**

Before operating the XC88, ensure the tool is properly assembled and the battery is fully charged. The tool should be used in a well-ventilated area.

**Operating Modes:**

- Normal Mode:** Used for general-purpose tasks.
- High Torque Mode:** Used for heavy-duty applications.
- Low Speed Mode:** Used for precision work.

**Maintenance**

Regular maintenance is essential to ensure the optimal performance and longevity of the XC88. Follow the instructions below for cleaning, lubrication, and inspection.

**Cleaning:**

- Use a soft cloth to clean the tool's exterior.
- Do not use harsh chemicals or solvents.

**Lubrication:**

- Apply a small amount of oil to the drive shaft and gears.
- Check the oil level in the motor housing.

**Troubleshooting**

If the XC88 is not operating correctly, refer to the following troubleshooting steps to identify and resolve the issue.

**Problem: Tool does not start.**

- Check the battery charge level.
- Ensure the tool is properly assembled.
- Check the power switch and trigger.

**Problem: Tool stalls or overheats.**

- Reduce the load on the tool.
- Allow the tool to cool down before resuming use.
- Check for obstructions in the work area.

**Specifications**

The XC88 is designed to meet the demands of professional users. Its specifications are as follows:

- Power: 1000W
- Speed: 0-1500 RPM
- Weight: 2.5kg
- Dimensions: 200mm x 100mm x 150mm

**Warranty**

The XC88 is covered by a 3-year warranty. This warranty covers manufacturing defects and provides for repair or replacement of the tool.

**Conditions:**

- The warranty is void if the tool is used for unauthorized applications.
- The warranty is void if the tool is damaged due to misuse or neglect.

**Contact Information**

For more information, please contact our customer support team.

**Hyperikon Customer Support:**

- Phone: +31 20 123 4567
- Email: support@hyperikon.com
- Website: www.hyperikon.com

**CE Marking**

The XC88 complies with the CE marking requirements, indicating that it meets the necessary safety and performance standards.

**Hyperikon**

Hyperikon is a leading manufacturer of professional power tools, committed to innovation and quality.