

# 说明书尺寸：700MMX85MM

**MINISO**

**USER MANUAL  
MANUEL D'UTILISATION  
دليل المستخدم  
MANUAL DE USUARIO**

**IN-EAR EARPHONES  
FOR GAMING WITH RGB LIGHTING  
ÉCOUTEURS INTRA-AURICULAIRE POUR  
JEUX AVEC ÉCLAIRAGE RGB**

MODEL: 2001

PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THE PRODUCT AND KEEP IT PROPERLY.

4. Les écouteurs sans fil ont été déconnectés du téléphone dans un rayon de 10 mètres.  
**Solution :** La technologie BT étant sans fil, elle est très sensible aux objets situés entre les écouteurs et l'appareil appareillé. Vérifiez si y a des objets métalliques ou autres qui peuvent affecter l'appareil dans la distance d'émission.

5. Impossible d'entendre la lecture audio lorsque les écouteurs sont appareillés à l'ordinateur ou au téléphone.  
**Solution :** Vérifiez si la sortie audio de l'ordinateur est déjà appareillée à un périphérique sans fil et si le Bluetooth de l'ordinateur prend en charge le protocole A2DP. Assurez-vous que le volume est élevé sur votre téléphone ou votre ordinateur.


6. Puis-je utiliser les applications de mon téléphone avec les écouteurs après avoir appareillé les écouteurs sans fil au téléphone ?  
**Réponse :** Il se peut que certaines applications ne puissent pas être utilisées via les écouteurs en raison de leurs paramètres.

**ACCESSOIRES**

Produit x1:  
Manuel d'utilisation x1.

**Avertissement IC :**  
Cet appareil est conforme à la ou aux normes RSS exemptées de licence d'Industrie Canada. Son fonctionnement est soumis aux deux conditions suivantes :  
(1) Ce dispositif ne doit pas causer d'interférences, et  
(2) Ce dispositif doit accepter toute interférence, y compris les interférences susceptibles de provoquer un fonctionnement indésirable du dispositif.

**PRODUCT OVERVIEW**

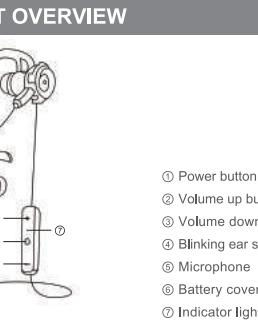

**PARAMETERS**

BT VERSION	5.0	FREQUENCY RANGE	20Hz-20KHz
NAME OF BLUETOOTH DEVICE	MINISO-2001	SENSITIVITY	≥98±3dB
FUNCTION	Media player, phone call.	CHARGING PORT	Micro USB
INPUT	DC 5V 50mA	TRANSMISSION DISTANCE	10 meters

**INSTRUCTIONS**

FUNCTIONS	INSTRUCTIONS
TURN ON	Long press the power button for 3s.
TURN OFF	Long press the power button for 5s.
PAIRING MODE	The indicator light blinks in red and blue alternately when it enters pairing mode. When pairing is successful, the light will flash slowly in blue.
PREVIOUS TRACK / VOLUME DOWN	Long press volume down button to skip to previous track. Short press volume down button to lower the volume.
PLAY/Pause	Short press power button to play/pause the music.
NEXT TRACK / VOLUME UP	Long press volume up button to skip to next track. Short press volume up button to raise the volume.
ANSWER/ END A CALL	Short press the power button to answer or end a call.
REJECT A CALL	Double click the power button to reject a call.

**CAUTIONS**

1. Reasonable control of the volume and time of usage is required to avoid hearing damage.  
2. For your safety, do not use it in potentially hazardous condition.  
3. Do not listen to music, call up or answer the phone while driving to avoid danger caused by distraction.  
4. Keep it out of reach of children to avoid danger caused by improper use.  
5. Do not store or use it under -20°C or above 45°C to avoid shortening the lifespan of earphones and battery.  
6. Do not modify, disassemble or repair the product.  
8. Irreplaceable battery. It should be disposed of according to local rules & regulations or be recycled by professional institute. Do not throw away or toss it into fire.  
9. When not in use for a long time, charge the earphones every 3 months to extend its service life.

**INSTRUCTIONS**

FUNCTIONS	INSTRUCTIONS
TURN ON	Long press the power button for 3s.
TURN OFF	Long press the power button for 5s.
PAIRING MODE	The indicator light blinks in red and blue alternately when it enters pairing mode. When pairing is successful, the light will flash slowly in blue.
PREVIOUS TRACK / VOLUME DOWN	Long press volume down button to skip to previous track. Short press volume down button to lower the volume.
PLAY/Pause	Short press power button to play/pause the music.
NEXT TRACK / VOLUME UP	Long press volume up button to skip to next track. Short press volume up button to raise the volume.
ANSWER/ END A CALL	Short press the power button to answer or end a call.
REJECT A CALL	Double click the power button to reject a call.

**INSTRUCTIONS**

FUNCTIONS	INSTRUCTIONS
TURN ON	Long press the power button for 3s.
TURN OFF	Long press the power button for 5s.
PAIRING MODE	The indicator light blinks in red and blue alternately when it enters pairing mode. When pairing is successful, the light will flash slowly in blue.
PREVIOUS TRACK / VOLUME DOWN	Long press volume down button to skip to previous track. Short press volume down button to lower the volume.
PLAY/Pause	Short press power button to play/pause the music.
NEXT TRACK / VOLUME UP	Long press volume up button to skip to next track. Short press volume up button to raise the volume.
ANSWER/ END A CALL	Short press the power button to answer or end a call.
REJECT A CALL	Double click the power button to reject a call.

**INSTRUCTIONS**

FUNCTIONS	INSTRUCTIONS
TURN ON	Long press the power button for 3s.
TURN OFF	Long press the power button for 5s.
PAIRING MODE	The indicator light blinks in red and blue alternately when it enters pairing mode. When pairing is successful, the light will flash slowly in blue.
PREVIOUS TRACK / VOLUME DOWN	Long press volume down button to skip to previous track. Short press volume down button to lower the volume.
PLAY/Pause	Short press power button to play/pause the music.
NEXT TRACK / VOLUME UP	Long press volume up button to skip to next track. Short press volume up button to raise the volume.
ANSWER/ END A CALL	Short press the power button to answer or end a call.
REJECT A CALL	Double click the power button to reject a call.

**INSTRUCTIONS**

FUNCTIONS	INSTRUCTIONS
TURN ON	Long press the power button for 3s.
TURN OFF	Long press the power button for 5s.
PAIRING MODE	The indicator light blinks in red and blue alternately when it enters pairing mode. When pairing is successful, the light will flash slowly in blue.
PREVIOUS TRACK / VOLUME DOWN	Long press volume down button to skip to previous track. Short press volume down button to lower the volume.
PLAY/Pause	Short press power button to play/pause the music.
NEXT TRACK / VOLUME UP	Long press volume up button to skip to next track. Short press volume up button to raise the volume.
ANSWER/ END A CALL	Short press the power button to answer or end a call.
REJECT A CALL	Double click the power button to reject a call.

**INSTRUCTIONS**

FUNCTIONS	INSTRUCTIONS
TURN ON	Long press the power button for 3s.
TURN OFF	Long press the power button for 5s.
PAIRING MODE	The indicator light blinks in red and blue alternately when it enters pairing mode. When pairing is successful, the light will flash slowly in blue.
PREVIOUS TRACK / VOLUME DOWN	Long press volume down button to skip to previous track. Short press volume down button to lower the volume.
PLAY/Pause	Short press power button to play/pause the music.
NEXT TRACK / VOLUME UP	Long press volume up button to skip to next track. Short press volume up button to raise the volume.
ANSWER/ END A CALL	Short press the power button to answer or end a call.
REJECT A CALL	Double click the power button to reject a call.

**INSTRUCTIONS**

FUNCTIONS	INSTRUCTIONS
TURN ON	Long press the power button for 3s.
TURN OFF	Long press the power button for 5s.
PAIRING MODE	The indicator light blinks in red and blue alternately when it enters pairing mode. When pairing is successful, the light will flash slowly in blue.
PREVIOUS TRACK / VOLUME DOWN	Long press volume down button to skip to previous track. Short press volume down button to lower the volume.
PLAY/Pause	Short press power button to play/pause the music.
NEXT TRACK / VOLUME UP	Long press volume up button to skip to next track. Short press volume up button to raise the volume.
ANSWER/ END A CALL	Short press the power button to answer or end a call.
REJECT A CALL	Double click the power button to reject a call.

**INSTRUCTIONS**

FUNCTIONS	INSTRUCTIONS
TURN ON	Long press the power button for 3s.
TURN OFF	Long press the power button for 5s.
PAIRING MODE	The indicator light blinks in red and blue alternately when it enters pairing mode. When pairing is successful, the light will flash slowly in blue.
PREVIOUS TRACK / VOLUME DOWN	Long press volume down button to skip to previous track. Short press volume down button to lower the volume.
PLAY/Pause	Short press power button to play/pause the music.
NEXT TRACK / VOLUME UP	Long press volume up button to skip to next track. Short press volume up button to raise the volume.
ANSWER/ END A CALL	Short press the power button to answer or end a call.
REJECT A CALL	Double click the power button to reject a call.

**INSTRUCTIONS**

FUNCTIONS	INSTRUCTIONS
TURN ON	Long press the power button for 3s.
TURN OFF	Long press the power button for 5s.
PAIRING MODE	The indicator light blinks in red and blue alternately when it enters pairing mode. When pairing is successful, the light will flash slowly in blue.
PREVIOUS TRACK / VOLUME DOWN	Long press volume down button to skip to previous track. Short press volume down button to lower the volume.
PLAY/Pause	Short press power button to play/pause the music.
NEXT TRACK / VOLUME UP	Long press volume up button to skip to next track. Short press volume up button to raise the volume.
ANSWER/ END A CALL	Short press the power button to answer or end a call.
REJECT A CALL	Double click the power button to reject a call.

**INSTRUCTIONS**

FUNCTIONS	INSTRUCTIONS
TURN ON	Long press the power button for 3s.
TURN OFF	Long press the power button for 5s.
PAIRING MODE	The indicator light blinks in red and blue alternately when it enters pairing mode. When pairing is successful, the light will flash slowly in blue.
PREVIOUS TRACK / VOLUME DOWN	Long press volume down button to skip to previous track. Short press volume down button to lower the volume.
PLAY/Pause	Short press power button to play/pause the music.
NEXT TRACK / VOLUME UP	Long press volume up button to skip to next track. Short press volume up button to raise the volume.
ANSWER/ END A CALL	Short press the power button to answer or end a call.
REJECT A CALL	Double click the power button to reject a call.

**INSTRUCTIONS**

FUNCTIONS	INSTRUCTIONS
TURN ON	Long press the power button for 3s.
TURN OFF	Long press the power button for 5s.
PAIRING MODE	The indicator light blinks in red and blue alternately when it enters pairing mode. When pairing is successful, the light will flash slowly in blue.
PREVIOUS TRACK / VOLUME DOWN	Long press volume down button to skip to previous track. Short press volume down button to lower the volume.
PLAY/Pause	Short press power button to play/pause the music.
NEXT TRACK / VOLUME UP	Long press volume up button to skip to next track. Short press volume up button to raise the volume.
ANSWER/ END A CALL	Short press the power button to answer or end a call.
REJECT A CALL	Double click the power button to reject a call.

**INSTRUCTIONS**

FUNCTIONS	INSTRUCTIONS
TURN ON	Long press the power button for 3s.
TURN OFF	Long press the power button for 5s.
PAIRING MODE	The indicator light blinks in red and blue alternately when it enters pairing mode. When pairing is successful, the light will flash slowly in blue.
PREVIOUS TRACK / VOLUME DOWN	Long press volume down button to skip to previous track. Short press volume down button to lower the volume.
PLAY/Pause	Short press power button to play/pause the music.
NEXT TRACK / VOLUME UP	Long press volume up button to skip to next track. Short press volume up button to raise the volume.
ANSWER/ END A CALL	Short press the power button to answer or end a call.
REJECT A CALL	Double click the power button to reject a call.

**INSTRUCTIONS**

FUNCTIONS	INSTRUCTIONS
TURN ON	Long press the power button for 3s.
TURN OFF	Long press the power button for 5s.
PAIRING MODE	The indicator light blinks in red and blue alternately when it enters pairing mode. When pairing is successful, the light will flash slowly in blue.
PREVIOUS TRACK / VOLUME DOWN	Long press volume down button to skip to previous track. Short press volume down button to lower the volume.
PLAY/Pause	Short press power button to play/pause the music.
NEXT TRACK / VOLUME UP	Long press volume up button to skip to next track. Short press volume up button to raise the volume.
ANSWER/ END A CALL	Short press the power button to answer or end a call.
REJECT A CALL	Double click the power button to reject a call.

**INSTRUCTIONS**

FUNCTIONS	INSTRUCTIONS
TURN ON	Long press the power button for 3s.
TURN OFF	Long press the power button for 5s.
PAIRING MODE	The indicator light blinks in red and blue alternately when it enters pairing mode. When pairing is successful, the light will flash slowly in blue.
PREVIOUS TRACK / VOLUME DOWN	Long press volume down button to skip to previous track. Short press volume down button to lower the volume.
PLAY/Pause	Short press power button to play/pause the music.
NEXT TRACK / VOLUME UP	Long press volume up button to skip to next track. Short press volume up button to raise the volume.
ANSWER/ END A CALL	Short press the power button to answer or end a call.
REJECT A CALL	Double click the power button to reject a call.

**INSTRUCTIONS**

FUNCTIONS	INSTRUCTIONS
TURN ON	Long press the power button for 3s.
TURN OFF	Long press the power button for 5s.
PAIRING MODE	The indicator light blinks in red and blue alternately when it enters pairing mode. When pairing is successful, the light will flash slowly in blue.
PREVIOUS TRACK / VOLUME DOWN	Long press volume down button to skip to previous track. Short press volume down button to lower the volume.
PLAY/Pause	Short press power button to play/pause the music.
NEXT TRACK / VOLUME UP	Long press volume up button to skip to next track. Short press volume up button to raise the volume.
ANSWER/ END A CALL	Short press the power button to answer or end a call.
REJECT A CALL	Double click the power button to reject a call.

**INSTRUCTIONS**

FUNCTIONS	INSTRUCTIONS
TURN ON	Long press the power button for 3s.
TURN OFF	Long press the power button for 5s.
PAIRING MODE	The indicator light blinks in red and blue alternately when it enters pairing mode. When pairing is successful, the light will flash slowly in blue.
PREVIOUS TRACK / VOLUME DOWN	Long press volume down button to skip to previous track. Short press volume down button to lower the volume.
PLAY/Pause	Short press power button to play/pause the music.
NEXT TRACK / VOLUME UP	Long press volume up button to skip to next track. Short press volume up button to raise the volume.
ANSWER/ END A CALL	Short press the power button to answer or end a call.
REJECT A CALL	Double click the power button to reject a call.

**INSTRUCTIONS**

FUNCTIONS	INSTRUCTIONS
TURN ON	Long press the power button for 3s.
TURN OFF	Long press the power button for 5s.
PAIRING MODE	The indicator light blinks in red and blue alternately when it enters pairing mode. When pairing is successful, the light will flash slowly in blue.
PREVIOUS TRACK / VOLUME DOWN	Long press volume down button to skip to previous track. Short press volume down button to lower the volume.
PLAY/Pause	Short press power button to play/pause the music.
NEXT TRACK / VOLUME UP	Long press volume up button to skip to next track. Short press volume up button to raise the volume.
ANSWER/ END A CALL	Short press the power button to answer or end a call.
REJECT A CALL	Double click the power button to reject a call.

**INSTRUCTIONS**

FUNCTIONS	INSTRUCTIONS
TURN ON	Long press the power button for 3s.
TURN OFF	Long press the power button for 5s.
PAIRING MODE	The indicator light blinks in red and blue alternately when it enters pairing mode. When pairing is successful, the light will flash slowly in blue.
PREVIOUS TRACK / VOLUME DOWN	Long press volume down button to skip to previous track. Short press volume down button to lower the volume.
PLAY/Pause	Short press power button to play/pause the music.
NEXT TRACK / VOLUME UP	Long press volume up button to skip to next track. Short press volume up button to raise the volume.
ANSWER/ END A CALL	Short press the power button to answer or end a call.
REJECT A CALL	Double click the power button to reject a call.

**INSTRUCTIONS**

FUNCTIONS	INSTRUCTIONS
TURN ON	Long press the power button for 3s.
TURN OFF	Long press the power button for 5s.
PAIRING MODE	The indicator light blinks in red and blue alternately when it enters pairing mode. When pairing is successful, the light will flash slowly in blue.
PREVIOUS TRACK / VOLUME DOWN	Long press volume down button to skip to previous track. Short press volume down button to lower the volume.
PLAY/Pause	Short press power button to play/pause the music.
NEXT TRACK / VOLUME UP	Long press volume up button to skip to next track. Short press volume up button to raise the volume.
ANSWER/ END A CALL	Short press the power button to answer or end a call.
REJECT A CALL	Double click the power button to reject a call.

**INSTRUCTIONS**

FUNCTIONS	INSTRUCTIONS
TURN ON	Long press the power button for 3s.
TURN OFF	Long press the power button for 5s.
PAIRING MODE	The indicator light blinks in red and blue alternately when it enters pairing mode. When pairing is successful, the light will flash slowly in blue.
PREVIOUS TRACK / VOLUME DOWN	Long press volume down button to skip to previous track. Short press volume down button to lower the volume.
PLAY/Pause	Short press power button to play/pause the music.
NEXT TRACK / VOLUME UP	Long press volume up button to skip to next track. Short press volume up button to raise the volume.
ANSWER/ END A CALL	Short press the power button to answer or end a call.
REJECT A CALL	Double click the power button to reject a call.

**INSTRUCTIONS**

FUNCTIONS	INSTRUCTIONS
TURN ON	Long press the power button for 3s.
TURN OFF	Long press the power button for 5s.
PAIRING MODE	The indicator light blinks in red and blue alternately when it enters pairing mode. When pairing is successful, the light will flash slowly in blue.
PREVIOUS TRACK / VOLUME DOWN	Long press volume down button to skip to previous track. Short press volume down button to lower the volume.
PLAY/Pause	Short press power button to play/pause the music.
NEXT TRACK / VOLUME UP	Long press volume up button to skip to next track. Short press volume up button to raise the volume.
ANSWER/ END A CALL	Short press the power button to answer or end a call.
REJECT A CALL	Double click the power button to reject a call.

**INSTRUCTIONS**

FUNCTIONS	INSTRUCTIONS
TURN ON	Long press the power button for 3s.
TURN OFF	Long press the power button for 5s.
PAIRING MODE	The indicator light blinks in red and blue alternately when it enters pairing mode. When pairing is successful, the light will flash slowly in blue.
PREVIOUS TRACK / VOLUME DOWN	Long press volume down button to skip to previous track. Short press volume down button to lower the volume.
PLAY/Pause	Short press power button to play/pause the music.
NEXT TRACK / VOLUME UP	Long press volume up button to skip to next track. Short press volume up button to raise the volume.
ANSWER/ END A CALL	Short press the power button to answer or end a call.
REJECT A CALL	Double click the power button to reject a call.

**INSTRUCTIONS**

FUNCTIONS	INSTRUCTIONS
TURN ON	Long press the power button for 3s.