

2.1 Channel Sound Bar with Dolby Atmos & Dual Built-in Subwoofers

Alto 8i

User Manual

Contents

1	Before you begin	3
2	Welcome	4
	What's in the box	4
	Overview of the Sound Bar	6
	Set up your Sound Bar system	
	Mount your Sound Bar on the wall	8
	Position Your Sound Bar	12
	Install/replace the remote control batteries	.12
	Overview of the Remote Control	. 14
3	Connect your Sound Bar system	16
•	Connect with the HDMI cable	
	Optional: Connect your Blu-ray player	
	Connect with the optical cable	
	Direction for setting up your Sound Bar using an	
	optical cable	.20
	Connect with the 3.5mm-to-3.5mm audio cable	21
	Connect your Sound Bar to power supply	22
	Connect the Sound Bar with your Bluetooth device	23
4	Use your Sound Bar system Use your Sound Bar with the top panel or remote	25
	control	25

5	Specifications 30		
	Notice	31	
	Notice for USA		
	Notice for Canada	. 32	
	Disposal of your old product and battery	. 33	
	Trademarks	34	

1 Before you begin


- Carefully read and observe all safety instructions in the safety leaflet.
- This soundbar is intended for indoor use only. In case it accidentally gets in contact with small amounts of water, unplug immediately and use a dry cloth to remove the water.
- Unplug the soundbar if it is not used for long periods of time or during lightning storms.
- Make sure the soundbar is installed on a solid surface or solidly wall-mounted below your TV for the best experience.
- Only use AAA 1.5V non-rechargeable batteries for the remote control.
- In case any of the cables are visibly damaged or pinched, unplug the soundbar and replace the cable.
- Be careful not to sharply bend the HDMI and optical cable as they may affect the performance.
- Protect your hearing by adjusting to a proper volume. Predefined and customizable sound settings are available for your listening comfort.

З

2 Welcome

Congratulations on the purchase of your new TCL Sound Bar! After it is set up and connected, you can experience a superb sound quality and state-of-the-art design to best fit your home entertainment system. You are recommended to read through this user manual which helps you set up, connect and operate the product easily and properly.

Let's get started.

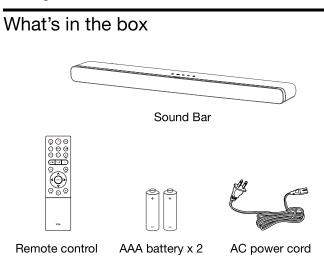



Optical cable



Wall mount bracket x 2



Wall mounting screw x 2



Warranty card



Quick Start Guide



HDMI cable



Wall anchor x 2



Sleeve x 2




Safety leaflet

	× .	705	
\square			-

Wall mount template

Overview of the Sound Bar

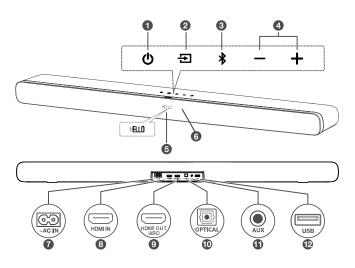

1 ①

Short press to enter Sleep or Standby mode. Long press to enter Standby mode.

2 군

Press to switch the audio source among HDMI ARC/HDMI IN/OPT/BT/AUX/USB modes.

3 🔧

Press to select the Bluetooth function. Press and hold to enter the pairing mode.

4 **+**/-

Press to increase or decrease the volume level.

5 LED indicator

It indicates the Sound Bar status (e.g. volume level, sound bar status).

- 6 White LED: It indicates standby/sleep mode.
- 7 AC input power connector
- 8 HDMI IN connector
- 9 HDMI OUT (ARC) connector
- 10 Optical input connector
- 11 AUX input connector
- 12 USB Type A connector (only for music playback)

Set up your Sound Bar system


Notes


- Make sure you read all the safety information before you mount the Sound Bar main unit on the wall.
- Make sure you use screws provided or specified by the authorized manufacturer.
- TCL Overseas Marketing Limited bears no responsibility for accidents or damage caused by improper wall mounting and screws installation or insufficient wall strength, etc.
- Additional tools (not supplied) are required for installation.
- You can choose to place your Sound Bar below the center of your TV or mount it on the wall.

Mount your Sound Bar on the wall


- 1 Place the supplied wall mount template on the wall. Make sure the wall mount template is at least 2 inches (5cm) below the center of the TV.
- 2 Use a level to make sure the wall mount template is positioned accurately.
- 3 Use the tape to stick the wall mount template firmly on the wall.

- 4 Mark on the wall using each marking on the template through the mounting holes.
- 5 Take away the wall mount template.
- 6 Drill a screw hole at each marking on the wall.

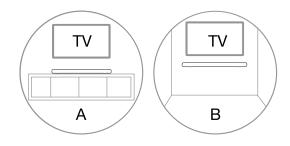


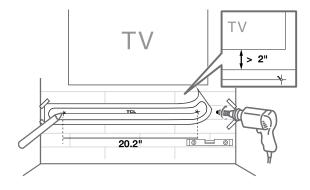

- 7 Screw off the rubber cushions from the soundbar. (Reserve the rubber cushions for future use)
 - * The rubber cushions can be used as soundbar mats when you put the soundbar on the table
- 8 Screw on the wall mount brackets to the soundbar.
- 9 Insert the supplied screws with the sleeves into the hole of the wall anchors.

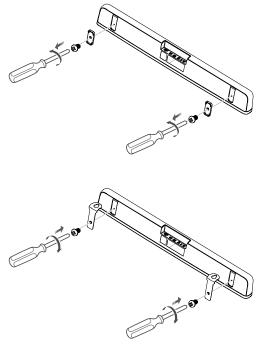

- 10 Fix and tighten the wall bracket screws on the wall.
- 11 Hang the Sound Bar on the screws.

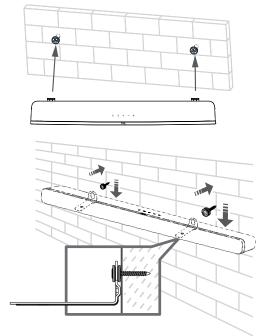

Notes

- Check the installation location before you mount the Sound Bar on the wall (see 'Mount your Sound Bar on the wall' on page 8).
- You may consider to connect the cables first before mounting the Sound Bar on the wall.

Position Your Sound Bar

You are recommended to place the Sound Bar on the top of the table and right below the center of your TV.



Install/replace the remote control batteries


Warnings

• Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.



Caution


- The battery contains perchlorate material, handle it with care. For information, refer to www.dtsc.ca.gov/hazardouswaste/perchlorate
- 1 Open the battery compartment, remove the old batteries if necessary.
- 2 Place two new AAA batteries into the battery compartment with the correct polarity (+/-).
- 3 Close the battery compartment.

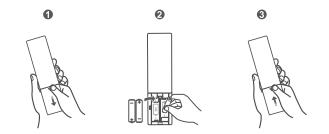

Setup is complete. Your Sound Bar is ready to use. For more information about how to access different connection options on your Sound Bar, see the following chapter.



Overview of the Remote Control

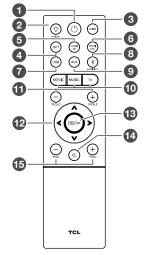

0 ()

Short press to enter Sleep or Standby mode. Long press to enter Standby mode.

Đ Č

Press to adjust the lightness of the display. Press and hold for 3 seconds to enter Night mode or close Night mode.

SURR

Press to turn on/off Dolby vertical surround.

OPT

Press to switch the audio source to Optical mode.

6 HDMI IN

Press to switch the audio source to HDMI IN source.

¹⁴

6 HDMI ARC

Press to switch the audio source to HDMI OUT (ARC) source.

USB

Press to switch the audio source to USB source.

8 *

Press to switch the audio source to Bluetooth mode. Press and hold to enter pairing mode.

O AUX

Press to switch the audio source to AUX mode.

MOVIE / MUSIC / TV

Press to select the equalizer (EQ) effect when you are watching **TV**, **movie** or listening to **music**.

1 TREBLE +/-

Increase or decrease the treble sound effect.

⑫ </>>

Switch to previous or next music. (Under Bluetooth or USB mode) \checkmark/\land

Decrease or increase the volume level.

Press to play/pause the music. (Under Bluetooth or USB mode) In Standby or Sleep mode, press and hold for 5 seconds to enter Menu, and then press $\langle \rangle \rangle \langle \rangle \langle \rangle$ to view options. And press OK to confirm.

12 义

Press to mute or unmute the sound.

BASS + / −

Increase or decrease the bass sound effect.

3 Connect your Sound Bar system

After you have fixed the position of the Sound Bar, you can start connecting it to your TV or other devices and listen to the audio through your Sound Bar. Make sure you have muted the audio of your TV or device. For information, check the user manual of your TV or device.

Connect with the HDMI cable


Note

 Make sure your TV or device supports the HDMI ARC feature. For information, check the user manual of your TV or device.

Connect one end of the HDMI cable to the HDMI ARC input connector on your Sound Bar and another end to the HDMI ARC output connector of your TV or device.

To get the best possible audio experience using the HDMI cable, follow below given steps:

- 1 Connect your Sound Bar to HDMI input marked (ARC) on your TCL TV.
- 2 Press the **Settings** button on your TCL TV remote.
- **3** Navigate to System options.
- 4 Set T-Link to **On**. (This feature may be called, Anynet+, SimpLink, BRAVIA Link, EasyLink or VIERA Link*.)

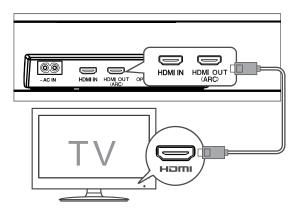


★ All technology names mentioned are the trademarks or registered trademarks of their respective companies.

Optional: Connect your Blu-ray player

For ease of use, you are advised to connect a Blu-ray player to the TV and enjoy the Sound Bar through HDMI-ARC. However, in order to enjoy **Dolby TrueHD** based **Atmos** content that not all TVs may support through HDMI-ARC, you can optionally connect your Blu-ray player directly to the Sound Bar using the HDMI-in port.


Notes

- The Sound Bar will pass on the video signal to the TV. If it is not successful, turn on the Sound Bar and try again.
- The HDMI input supports UHD (4K) and that it can also be used for game console to enjoy Dolby Atmos audio.

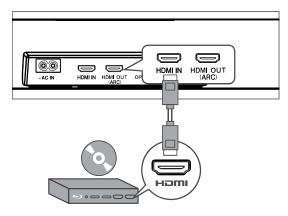

Connect with the optical cable

- **1** Remove the protective caps from the optical cable when necessary.
- 2 Connect one end of the optical cable to the optical input connector on your Sound Bar and another end to the optical output connector of your TV or device.

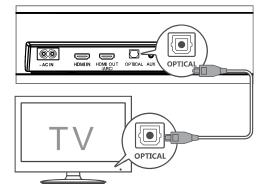

Note

 If there is no sound output from the Sound Bar, try to activate the PCM signal output on your TV or device.
 PCM is used to convert analog audio signals into digital audio signals in most devices. For more information of how to activate the PCM signal output, check the user manual of your TV or device.

Direction for setting up your Sound Bar using an optical cable

Do not bend or kink the optical cable (SPDIF) as it is fragile and can easily get damaged and broken.




To get the best possible audio experience using the optical cable:

- **1** Press the **Settings** button on your TCL TV remote.
- 2 Navigate to Audio options.
- 3 Set TV speakers to Off.

Connect with the 3.5mm-to-3.5mm audio cable


You can either:

- connect one end of th 3.5mm-to-3.5mm audio cable (sold separately) to the AUX input connector on your Sound Bar and another end to the headphone or audio output connector on your TV or device. This will disable the sound of your TV built-in speakers; or
- connect one end of an RCA-to-3.5mm audio cable (sold separately) to the AUX input connector on your Sound Bar and other ends to the TV's audio output connectors.

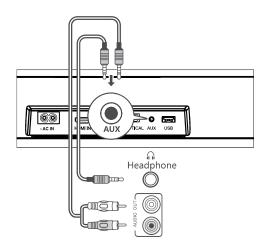

Connect your Sound Bar to power supply

- 1 Make sure that you have completed all other connections before connecting the Sound Bar to power supply.
- 2 Make sure the power supply voltage complies with your country's safety standards (see 'Specifications' on page 31)
- 3 Connect one end of a supplied AC power cord to the AC input connector on your Sound Bar and another end to the power socket on the wall.

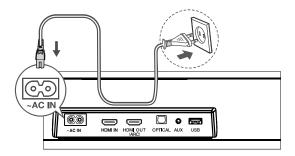


Connect the Sound Bar with your Bluetooth device

Notes

- Make sure your wireless device supports the Bluetooth function.
- The operational range between the Sound Bar and your Bluetooth device is approximately 32.8" (without any obstacle between the Bluetooth device and the Sound Bar).
- 1 Press () on the top panel of your Sound Bar or remote control to power on the Sound Bar.
- 2 Press and hold ***** on the top panel of your Sound Bar or remote control.
 - →PAIR is flashes on the LED display. The Sound Bar is ready to pair.
- **3** Power on your Bluetooth device and activate its Bluetooth function.
- 4 Select **TCL Alto 8i** on the pairing list of your Bluetooth device.
 - → You hear distinct double beep sound.

Tip

• If you cannot find the model name **TCL Alto 8i** on your Bluetooth device, press and hold **≵** on the remote control. You will see PRIR . Now the Sound Bar is entering the pairing mode.

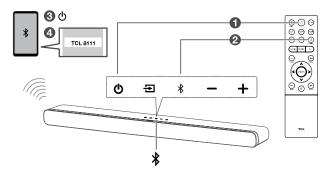

Your Sound Bar system is now set up and ready to be used.

- 5 To disconnect the Bluetooth function, you can:
 - press
 on the Sound Bar or remote control to switch to another source; or
 - disable the Bluetooth function on your device; or
 - press and hold **\$** on the remote control for 3 seconds.

4 Use your Sound Bar system

Use your Sound Bar with the top panel or remote control

- **1** Make sure the Sound Bar is properly connected to the power supply and sources.

	Sound Bar status	LED display
Power	Power on	HELLO
	Standby	STDBY
	Sleep	SLEEP
	Sleep mode	 White LED flashes slowly
	Standby mode	White LED
	HDMI IN	HDMI1 IN
Source	HDMI ARC	HIMI2 ARC
000100	USB	US3
	BLUETOOTH	BT
	AUX	AUX
	OPTICAL	OPT

LED behaviors under different source modes

Bluetooth	Normal	II flashing
	Pairing mode	PAIR
USB	Normal	USB
	Without a USB	NOUS18
	Play	Show playing time
	Pause	PRUSE
OPT	Normal	OPT
	Audio format	PCM AUDIO/DOLBY AUDIO
HDMI	Normal	HIMI
112111	Audio format	PCM RUDIO/JOLBY RUDIO/
		DOL BY ATMOS
ARC(EARC)	Normal	885
/ 110(2/110)	Audio format	PCM 8UNTO/100 11Y 8UNTO/
	, dalo format	DOLBY ATMOS
Audio Setting	Volume display	 65 V
/ date cetting	Max&Min Volume	
	Mute	MUTE
	Treble	TRE-3 ~ TRE+3
	Bass	185-3 ~ 185+3
	Vertical Surround	SURR ON/SURR OFF
	EQ Setup	MOVIE/MUSIC/TV
	Night Setup	NIGHT
	DIM Setup	DIM 1(100%)/DIM 2(50%)
Menu	Sleep mode switch	SLEEP ON/SLEEP OF
	Factory Reset	ERCTORY RESET

Note

 After powering on your Sound Bar, if there is no operation performed on either the Sound Bar or remote control within 10 seconds, all LED indicators on the Sound Bar will turn off and light up again when the operation is resumed.

You can use more advanced functions on the remote

Tip

• You can use more advanced functions on the remote control (see 'Overview of the remote control' on page 14).

Listen to music from your Bluetooth device


- Make sure that your device supports A2DP and/or AVRCP. For information, check the specification of your device.
- 2 Pair your Bluetooth device with the Sound Bar (see 'Connect the Sound Bar with your Bluetooth device' on page 23).
- **3** Start listening to music stored in your Bluetooth device through the Sound Bar.
 - If your Bluetooth device supports A2DP, you can listen to music, but you cannot control the playback.
 - If your Bluetooth device supports AVRCP, you can listen to music and control music playback with the remote control. Press ▷III to pause or resume music playback. Press </>
 </>

Note

 The operational range between the Sound Bar and your Bluetooth device is approximately 32.8" (without any obstacle between the Bluetooth device and Sound Bar).

Use the USB cable or device for music playback

- Press ⋈।)/oκ on the remote control to listen to/pause/ resume the music.
- Press < or > on the remote control to skip to the previous or next track.
- Press A or v to increase or decrease the volume level.

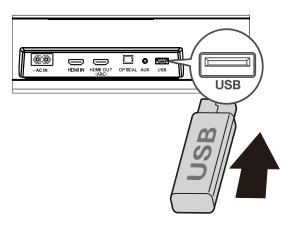

Tip

 This Sound Bar can support USB devices of up to 64GB memory and the supported file format are MP3 and FLAC.



5 Specifications

Product Name

2.1 Dolby Atmos Sound Bar with Built-in Subwoofers

Sound Bar

- Power adapter: AC~100-240V, 50/60Hz
- Power consumption: 40W
- Power consumption at standby mode: ≤ 0.5W
- Impedance: 8 Ω
- Frequency response: 40 Hz-20 kHz
- Dimensions (WxHxD): 39.4"x2.6"x5.0" / 1000x65x128mm
- Weight: 6.4 lbs (2.9 kg)
- Operating temperature: 0°C 45°C

Bluetooth

- Bluetooth version: 4.2, Bluetooth profile Bluetooth stereo supported (Advanced Audio Distribution Profile -A2DP; Audio Video Remote Control Profile - AVRCP)
- Frequency range: 2402 Mhz 2480 Mhz
- Max transmitting power: 6.5dBm

Remote control

- Distance/Angle: 6m/ 30°
- Battery type: 1.5V AAA battery x 2, user replaceable.

6 Notice

Notice for USA

FCC Information

Warning

 Changes or modifications to this unit not expresslyapproved by the party responsible for compliance could void the user's authority to operate the equipment.

Note

 This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- . Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

FCC Supplier's Declaration of Conformity

2.1 Dolby Atmos Soundbar with Built-in Subwoofers, Model TS8111

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference, and
 this device must accept any interference received, including interference that may cause

undesired operation.

Supplier Name: TTE Technology, Inc. (dba TCL North America)

Supplier Address: 1860 Compton Ave, Corona, CA 92881, USA

Supplier phone number and internet contact information:

1-877-300-9223 https://support.tclusa.com

FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.



6 Notice

Notice for Canada

Class B Clause

This Class B digital apparatus complies with Canadian ICES-003

IC Radiation Exposure Statement

This equipment complies with ISED RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.

Warning: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Disposal of your old product and battery



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

Remove the disposable battery

To remove the disposable batteries, see the section 'Replace the remote control battery'.

Environmental protection and sustainability

We have omitted all unnecessary packaging and make sure it is eco-friendly and sustainable.

Trademarks

Bluetooth

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by TTE Corporation is under license. Other trademarks and trade names are those of their respective owners.

Dolby Atmos

Dolby, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012-2020 Dolby Laboratories. All rights reserved.



The Adopted Trademarks HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.



7 FAQ

No power

- Make sure the AC power cord and AC input connector are connected properly.
- Make sure there is power supply.
- Make sure the Sound Bar has turned on.

No sound

- Make sure the audio cable is connected to the Sound Bar and your device.
- Make sure you have selected the correct source.
- Press ▲ to increase the volume level.
- Make sure the Sound Bar is not muted.

Low voice

- Use the remote control to adjust the volume.
- May opend Night mode, please press 'Q' for 3 seconds to exit the Night mode.
- * Other EQs cannot be selected in Night Mode.

The remote control does not work.

- Make sure you have selected the correct source.
- Make sure the distance of remote control and the Sound Bar is within operational range.
- Make sure the battery is correctly inserted and is working.
- Make sure the remote control is close to the remote control sensor of the Sound Bar.

I hear distorted sound.

- Make sure all cables are properly connected.
- Make sure you have selected the correct source.
- Make sure the TV is muted if you play audio from the TV.

I cannot find the Bluetooth name of this Sound Bar on my Bluetooth device.

- Make sure the Bluetooth function is activated on your Bluetooth device.
- Make sure the Sound Bar has paired with your Bluetooth device.

TCL support:

visit <u>support.tclusa.com</u> or <u>support.tclcanada.com</u> Or call 1-877-300-9223

WE ARE READY TO HELP contact us first with any questions

A TAKE CARE WHEN REMOVING THE SOUNDBAR

 $2020\@$ TCL Overseas Marketing Limited. All rights reserved. This product has been manufactured by and is sold under the responsibility of TCL Overseas Marketing Limited.

TS8111_NA_EN_UM_V0.10



CE