


Magic Motion



# Equinox SMV14

APP-CONTROLLED SILICONE BUTT PLUG

Equinox, an App-controlled anal plug with sucker, bring you a pleasant experience.

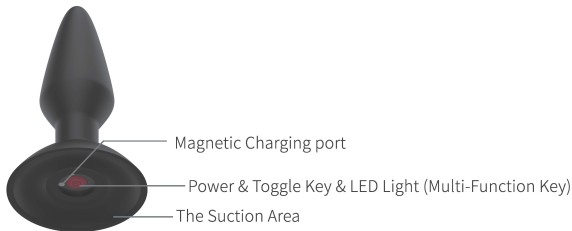

\*Size description: Maximum diameter of the body: 35mm, Maximum length of the body: 88mm  
Diameter of the suction area: 67mm, Total length of the product: 108mm

## Specification:

Product name: Equinox | Model: SMV14 | Size:  $\phi 35(67) \times 88(108)$ mm | Weight: 88g  
Color: black | Max. Charging Current: 300mA | Charging Voltage: 5V | Materials: Body-safe silicon/ABS  
Charging Time: about 120 minutes | Operating Time: about 60 minutes | Battery: 220mAh Li-Ion Polymer

\*Multi-function key definition: On/OFF Key: Short press to turn on the device;  
Long press over 3 seconds to turn off the device.  
Pattern Key: Short press to switch pattern mode after device power

## Product package:

Equinox x1    User Manual x1    Magnetic Charge Cable x1    Pouch x1

## Use steps:

### Step 1: App Download

1. Search for “Whats Sense” in IOS App Store or Google Play.
2. Scan below QR code to download the App.



Whats Sense


### Step 2: Turn on & Turn off



Press the multi-function button to turn on the device.  
Long press the multi-function button for 3 seconds to turn off the device

Tips: Equinox will turn off automatically when it disconnected with App in 15 minutes.

### Step 3: Run Whats Sense App.

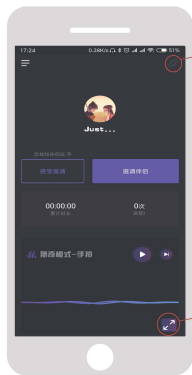

Click the button to connect device



Connected

Click for more play modes

## Independent Modes(Without Smartphone)



Press the multi-function key to enter mode 1,  
Press the multi-function button again to switch to mode 2,  
There are seven vibration patterns to switch.



## Charging :

Attach the magnetic charging cable to charging port, the LED light will be on when charging, the LED light will be off after long time charging.



Tip: please run out of battery capacity in the first-time usage, and charging about 120 minutes continuously.

## Before Usage

Please clean device with cleanser or warm water and anti-bacterial soap before first use.

## After Usage

Please clean device with cleanser or warm water and anti-bacterial soap and dry it.

## Storage

Keep device in a cool and ventilated place. Avoid direct sunlight and keep it away from children.

## Notice

This product is only suitable for adults over the age of 18, please keep away from children, please stop using if you feel unwell during use.

## Fault Diagnosis

1. In offline mode, turn on the product. If you press the multi-function button again and fail to enter the vibration mode, please check if you need to charge.
2. In the phone control mode, open the magic motion product, if you are unable to establish a connection with the app, please check the phone and power.

## Risk of injury

Remove piercings or jewelry in the genital area before use.

Do not use the toy on irritated or damaged skin.

Stop using the toy if you experience pain or feel unwell during use.

Do not use the toy if it is in unusually hot or damaged or deformed.

#### FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.