 


文件编码(material code) : B6C-US-344-005

打样版本	修改内容	修改人	日期	受控版本	备注
V1	新图发布	胡晨翔	2018.11.28	A0	

正面

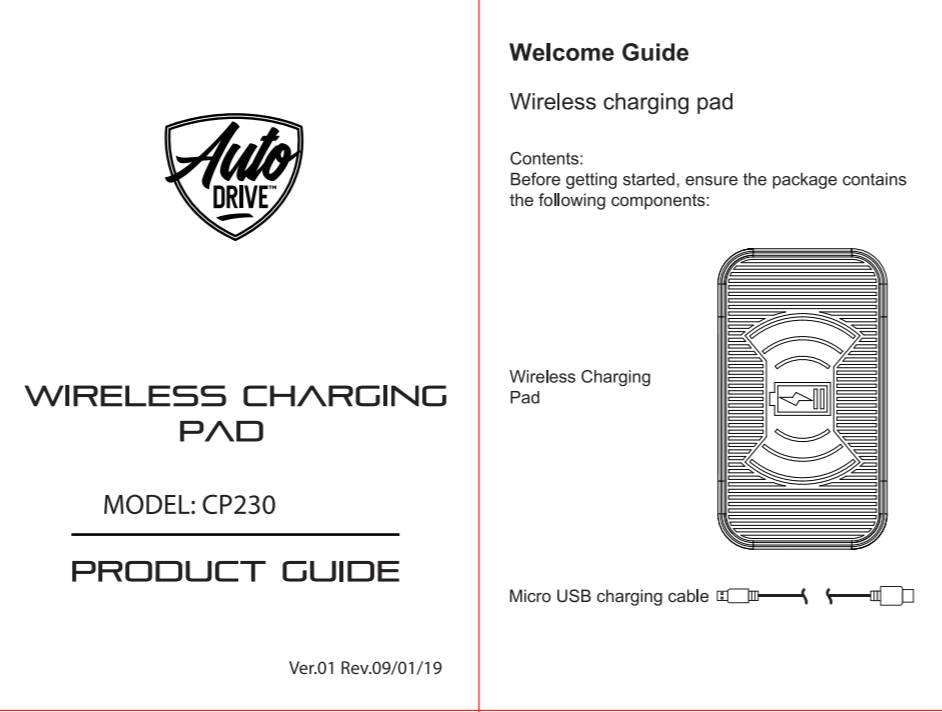


WIRELESS CHARGING PAD
MODEL: CP230
PRODUCT GUIDE

Ver 01 Rev 09/01/19


Welcome Guide

Wireless charging pad

Contents:
Before getting started, ensure the package contains the following components:

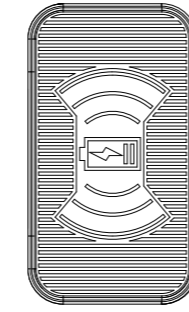

Wireless Charging Pad

 

Micro USB charging cable

Safety and Compliance

Read all the instructions before using the product.

- To reduce the risk of injury, close supervision is necessary when the product is used near children.
- Don't put finger or hand into product.
- Do not expose product to rain or snow.
- Use of a power supply or charger not recommended or sold by this product manufacturer may result in a risk of fire or injury to persons.
- Do not use the wireless charging pad in excess of its output rating. Overload outputs above rating may result in a risk of fire or injury to persons.
- Do not use the wireless charging pad that is damaged or modified. Damaged or modified charging pad may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not disassemble the wireless charging pad. Take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or injury to persons.
- Do not expose the wireless charging pad to fire or excessive temperature. Exposure to fire or temperature above 100°C may cause explosion.
- Disconnect the cable from AC adapter or laptop when wireless charging pad not in use.
- If your wireless charging pad will not be used for an extended time, please store it in a cool and dry place to avoid damaging the product.

190mm


双面印刷

印刷尺寸: 256*190mm
成品尺寸65*95mm
折叠方式: 风琴折
材质: 80g书纸

背面

Note:
When the LED indicator turns red, it indicates that there is problem with wireless charging, or a foreign object is detected.

Charging Devices

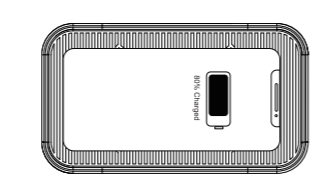

Put your Qi-enabled phone on the center of wireless charging area on charging pad and not moved. The distance can be charged is less than 10mm.

Note:

- To charge your device we recommend that you use the original cable(included) for wireless charging input.
- Do not use 5V/1A car charger/adaptor to power your wireless charging pad.
- Quick Charge 2.0 / 3.0 car charger/adaptor required for Fast Charge Mode.
- To stop the charging process, disconnect the cable from your charging pad, the wireless charging pad will automatically turn off.

LED Indicator

LED Indicator	Your wireless charging pad
Blue (Solid)	Stand-by or phone is fully charged
Blue (Pulse)	Wireless charging active
Red	Problem with wireless charging

Troubleshooting

My charging pad doesn't charge.

- Make sure that the USB charging cable is connected correctly.
- If you're using an AC power outlet, make sure that the outlet is properly powered.
- If you're using a car charger/USB port, make sure that your car charger has a steady current output.
- If none of the above solves the issue, your charging pad may be damaged. Replace your charging pad.

My charging pad doesn't charge a device

- Make sure that your phone is Qi-enabled.
- Make sure that your phone is centered on the wireless charging area on the charging pad. See chapter **Charging Devices**.
- Make sure that your charging pad is connected to a power source correctly. See chapter **Connect Charging Pad to Power Source**.
- Your wireless charging pad has overvoltage protection, under voltage protection, over current protection, short circuit protection, temperature control and foreign object detection. Charging stops in above situation in order to protect your wireless charging pad and connected device.

190mm

设计(design): 胡晨翔
审核(check):
批准(approve):
版本(version): V1

数量(quantity): 1
单位(units): mm
比例(scale): 1:1
页数(page): 1

产品型号(model): CP230
产品名称(name): 充电器
包装类型(type): 说明书
设计日期(date): 2019.09.03

颜色(colour): 白底黑字
尺寸(size): 如图
材料(material): 80g书纸
表面处理(surface finish): //