

Earmuff Vanquish Pro Elite



- 1.Power Button
- 2.BT Button
- 3.Volume+
- 4.Volume-;
- 5.Power Led(Red);
- 6.BT light (Blue/Red)
- 7.Shooting Mic
- 8.BT Mic

1. BT Spec:

Frequency	2402-2480MHz
Transmission Spec	Class2
Scope of work (open environment)	> 10m
Display mode	LED Display
Call answering method	Press 2 Function key to answer/hang up
Antenna	Built
Continuous Talk Time	>30 h
Standby time	>1000 h
Product Appearance Dimensions	See drawings

2. Operation:

Power supply (shooting) boot	Short press 1 key for one second	Headphones beep a shot switch (the main switch opens and the gun function is turned on) 5 red lights at the light
BT Open	press 2 keys three seconds	Headphone beep beep, blue light shining
BT Pair	When the Bluetooth boot is pressed for 2 keys for three seconds, continue to press the 2 key for 2 seconds	<ul style="list-style-type: none"> The blue light shines, the red light flashes 1 times, then the blue light flashes (2 times a second), the headset drops a hint, when the pairing succeeds, the red light flashes two times in a row, the headset beeps a hint
BT Shutdown	Press and press 2 key times for three seconds	Blue Lamp long bright three seconds and then extinguished, headphones beep beep prompt shutdown
Bluetooth hibernation	Bluetooth goes into hibernation after 35 seconds without any action after Bluetooth pairing is successful	Blue light flashes once in 13 seconds.
Bluetooth hibernation Wake up	Press 2 key to wake up at a time	Flashing at the red light once
Volume adjustment (can only adjust the shooting function volume, Bluetooth volume adjustment on the phone side)	Press Volume 3, 4 key (+ heel-) to control sound size	Press the volume key +/- to increase or attenuate the volume status once, press the button once there is a "beep" beep, when the volume to the maximum or minimum, there is a "doodle" two beep tone
Music Playback/Pause	In Bluetooth hibernation after successful pairing, tap 2 keys to wake up Bluetooth, and then click 2 Keys once to automatically enter the music playback state, in the Music playback state Click once 2 key to pause playback	
Redail	Quickly double-click two times 2 keys	The headset has a "beep" beep.
Closing line (hanging machine)	Press 2 Key once	
Answer	Press 2 Key once	The ringtone stops automatically after answering

Note: When the battery is out of power, the headset has a quick beep prompt

3. a. Operating current:

Bluetooth section: Call & amp; music playback current: 30 mA -35mA

Standby current: 2 mA -3mA

Shooting part: Boot current: 20mA-30mA

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 5mm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter