



**S0002 Tennis Launcher Component:**

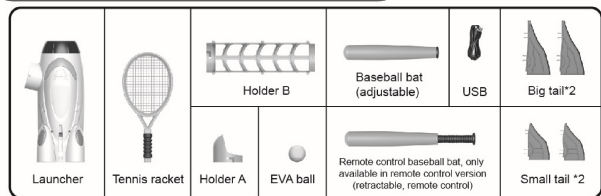

**S0002 Installation diagram:**

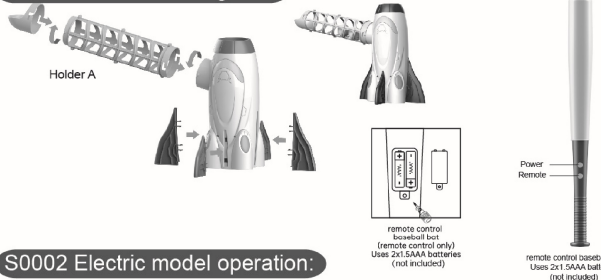

**S0002 Electric model operation:**

**Use occasions**  
Find an open area away from breakables, windows and furniture. Recommended for outdoor use.  
**Note:** Do not stay over the tee after starting to prevent injury from the ball, must be used under adult supervision.

1. Make sure all parts are securely connected and make sure the TEE switch is in the "OFF" position.
2. Put the ball in from fairway A, then flip the switch to "B/O", the ball will slide into the firing mechanism and shoot upwards.
3. Hit the ball with a tennis racket or baseball bat.
4. When the power is too low, turn the switch to "OFF", connect the USB charging cable to charge, the indicator light will be on, and the indicator light will be off when fully charged.

**S0002 Remote Control Operation:**

**Use occasions**  
Find an open area away from breakables, windows and furniture. Recommended for outdoor use.  
**Note:** Do not stay over the tee after starting to prevent injury from the ball, must be used under adult supervision.

1. With all parts securely attached, place the ball from fairway A and the ball will slide into the firing mechanism.
2. Turn the server switch to "R/C", and turn on the power switch of the baseball bat. The light changes from blinking to steady light, that is, the frequency pairing is completed. Through the remote control button, you can control the serving and closing.
3. When using a tennis racket alone, turn the server switch to "B/O", then the ball will fall in sequence and hit upwards.
4. When the power is too low, turn the switch to "OFF", connect the USB to charge, the indicator light is on, and the full indicator light is off.


The transformer, power supply or battery charger used with the electric toy shall be regularly examined for damage to the supply cord, plug, enclosure or other parts, and in the event of damage, it shall not be used until the damage has been repaired.

- ⊗ Non-rechargeable batteries are not to be recharged.
- ⊗ The batteries should be charged under adult supervision.
- ⊗ Different types of batteries or new and used batteries are not to be mixed.
- ⊗ Batteries are to be inserted with correct polarity.
- ⊗ The batteries should be charged under adult supervision.
- ⊗ Exhausted batteries are to be removed from the toy.
- ⊗ The supply terminals are not to be short-circuited.


This toy contains batteries that non-replaceable

If you do not need the remote control function of the baseball bat, turn the launcher switch from "R/C" to "B/O", then it will enter the electric mode, and you will not be able to remotely control the launcher.

**S0005 Baseball And Tennis Launcher Component:**

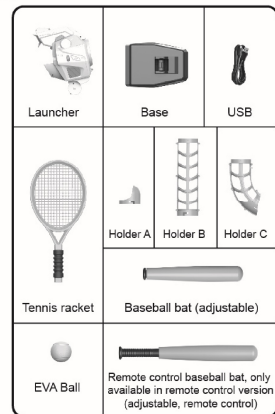

**S0005 Installation diagram:**

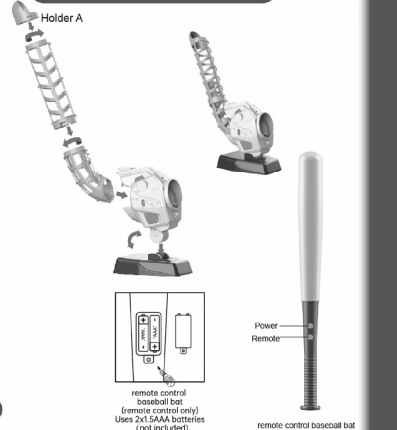

**S0005 Electric model operation:**

**Use occasions**  
Find an open area away from breakables, windows and furniture. Recommended for outdoor use.  
**Note:** Never aim at other people's eyes and face, must be used under adult supervision.

1. Make sure all components are securely connected. Make sure the tee switch is in the "OFF" position.
2. Put the ball in from fairway A.
3. Adjust the ball forward or backward to adjust the pitch angle and distance of the ball.
4. Turn the ball machine switch to "B/O". Under normal conditions, the ball is thrown every 5-7 seconds.
5. When the battery is too low, turn the switch to "OFF", connect the USB charging cable to charge, the indicator light is on, and the full indicator light is off.

**S0005 Remote Control Operation:**

**Use occasions**  
Find an open area away from breakables, windows and furniture. Recommended for outdoor use.  
**Note:** Never aim at other people's eyes and face, must be used under adult supervision.

1. The user needs to keep at least 3 meters away from the product to avoid being injured by the ball.
2. Put the ball in from fairway A.
3. Adjust the ball forward or backward to adjust the pitch angle and distance of the ball.
4. Turn the switch of the server to "R/C", and turn on the power switch of the baseball bat. The light changes from flickering to steady light, that is, the frequency matching is completed. Through the remote control button, you can control the serving and closing.
5. When using the tennis racket alone, turn the server switch to "B/O", then the balls will fall and be fired in sequence.
6. When the battery is too low, turn the switch to "OFF", connect the USB to charge, the indicator light is on, and the full indicator light is off.


The transformer, power supply or battery charger used with the electric toy shall be regularly examined for damage to the supply cord, plug, enclosure or other parts, and in the event of damage, it shall not be used until the damage has been repaired.

- ⊗ Non-rechargeable batteries are not to be recharged.
- ⊗ The batteries should be charged under adult supervision.
- ⊗ Different types of batteries or new and used batteries are not to be mixed.
- ⊗ Batteries are to be inserted with correct polarity.
- ⊗ The batteries should be charged under adult supervision.
- ⊗ Exhausted batteries are to be removed from the toy.
- ⊗ The supply terminals are not to be short-circuited.


This toy contains batteries that non-replaceable

If you do not need the remote control function of the baseball bat, turn the launcher switch from "R/C" to "B/O", then it will enter the electric mode, and you will not be able to remotely control the launcher.

**S0003 spaceship golf Launcher Component:**

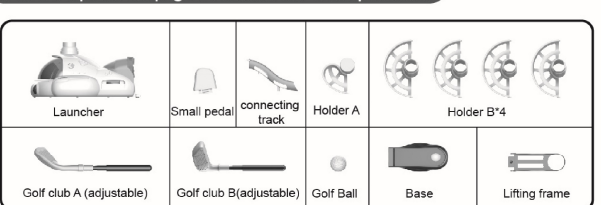

**S0003 Installation diagram:**

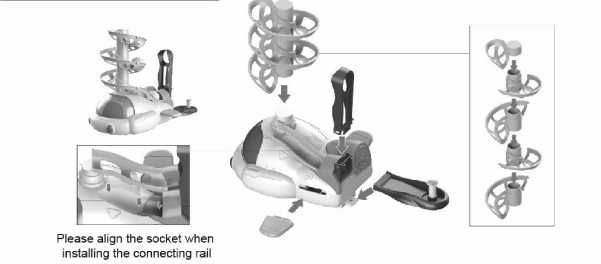

**S0003 Golf Operation:**

**Use occasions**  
Find an open area away from breakables, windows and furniture. Recommended for outdoor use.  
**Note:** Never aim at other people's eyes and face, must be used under adult supervision.

1. Make sure all components are securely connected.
2. Put the ball in from fairway A.
3. Depress the left foot pedal of the spacecraft and lower the elevator to place the golf ball.
4. Hit the ball with the golf club.

**Cautions:** Noted: Please turn off the power of the device before every shot.

1. Hair may be caught in the ball reel unit, please tie long hair behind your back and keep away from moving parts.
2. Do not modify the product.
3. Do not keep your eyes and face in front of the emitter.
4. Do not use other styles or models of balls. To prevent damage to equipment and baseballs, or even personal injury.

**Common problem:**

1. The ball cannot be shot far enough.  
The battery may be low, turn off the power and connect the USB charging cable to charge.
  2. The ball cannot be shot.  
Check the ball delivery mechanism to make sure the ball is in the position to be fired. Make sure the switch is in the "B/O" position.
- This toy contains batteries that non-replaceable

File NO.:S0005B UM-V1.1

**6+**  
Ages

**SINOVAN®**

GUANGDONG SINOVAN CULTURE CO.,LTD.  
Address: XINAN INDUSTRIAL AREA, CHENGHAI, SHANTOU, GUANGDONG, CHINA

This toy contains batteries that non-replaceable

Importer: XXXXXXX  
Address: XXXXXX

# INSTRUCTION

**AUTOMATIC LAUNCH**

**SAVE THESE INSTRUCTIONS. READ COMPLETE INSTRUCTIONS BEFORE USE.**

Instruction must be retained since it contains important information.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) this device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
—Reorient or relocate the receiving antenna.  
—Increase the separation between the equipment and receiver.  
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
—Consult the dealer or an experienced radio/TV technician for help.