

 
# INSTRUCTION MANUAL

## 4X4 CLIMBING DRIFT

360°

SAVE THESE INSTRUCTIONS. READ COMPLETE INSTRUCTIONS BEFORE USE.


### 1. Product configuration diagram (For reference only, optional)

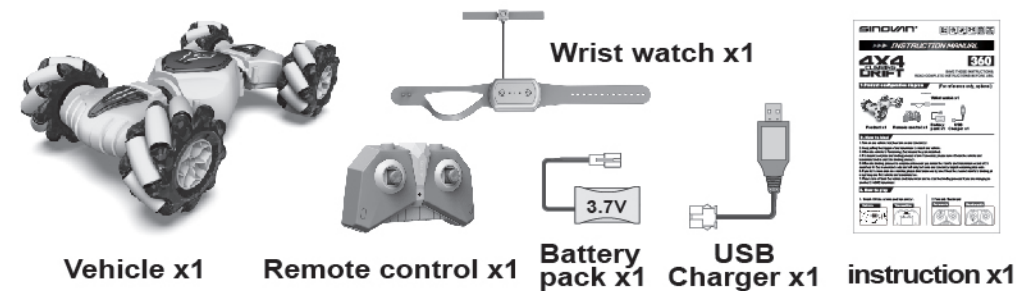

### 2. How to pair


1. Turn on the vehicle first, then turn on the transmitter.
2. Keep pulling the trigger of the transmitter to match the vehicle.
3. When the vehicle is functioning, that means they are matched.
4. If pairing is not complete within 8 seconds, please turn off both the vehicle and transmitter and re-start the pairing process.
5. When the pairing process is complete, whenever you switch the vehicle and transmitter on and off, it searches for the memorised code and will only lock onto the transmitter signal containing that code.
6. If you have more than two vehicles, please pair them one by one. When the second vehicle is pairing, always keep the first vehicle and transmitter on.
7. Please turn off both the vehicle and transmitter and re-start the pairing process if you are changing to another 2.4GHZ transmitter.
 
### 3. How to play

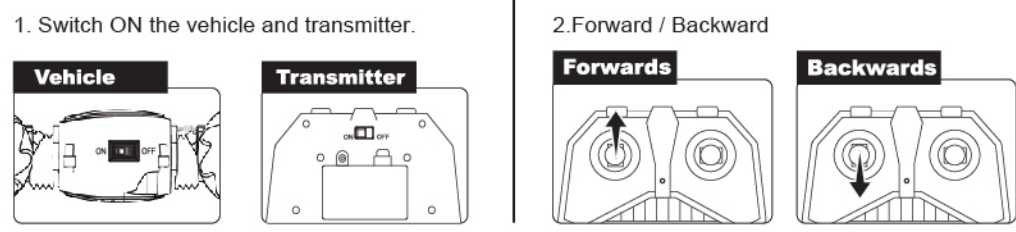

### 5. Remote control operation instructions

 
1. Turn on the switch, the vehicle twists up and down, the light is single colour flashing. After pair, the light will be flashed colourfully.
2. By default, button 1 is forward and backward, and button 2 is Pan left and right.
3. After long pressing the function buttons:  
Button 2 is for rotation;  
Button 1 and button 2 at the same time are for 45 degree diagonal run.

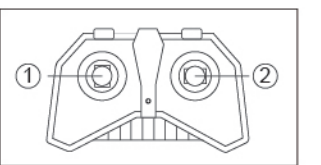

### 6. Operation tips


1. The effective control distance of the Radio-controlled car is about 30 meters. If the distance is exceeded, the Radio-controlled car may stop or Uncontrolled phenomenon.
2. The operation time of the Radio-controlled car is about 12 minutes after it is fully charged.
 
### 7. Watch remote control

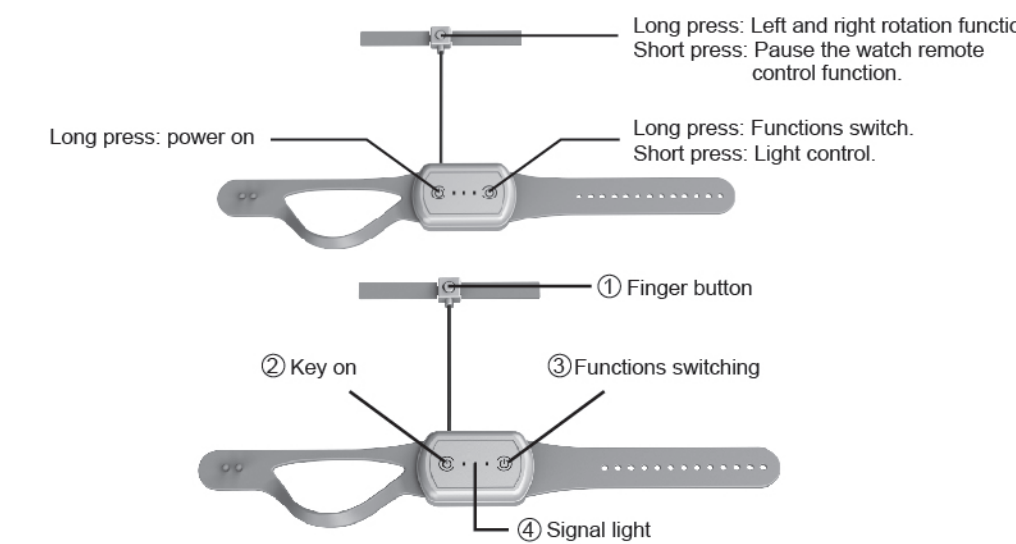


### 8. Watch remote control operation

 1. The fist tilts downwards, the vehicle moves forward.
2. The fist tilts upwards, the vehicle moves backward.
3. The fist tilts left, the vehicle moves / rotates left.
4. The fist tilts right, the vehicle moves / rotates right.
5. The fist level up, the vehicle twists upwards.
6. The fist level down, the vehicle twists downwards.
7. The finger button ① :  
Long press: Left and right rotation function,  
Short press: Pause the watch remote control functions.
8. Functions switch button ③ :  
Long press: Pan left or right function will turn to Rotate left or right function. Then the fist tilts forward or backward, the vehicle will run 45 degree diagonal.  
Short press: Light control.

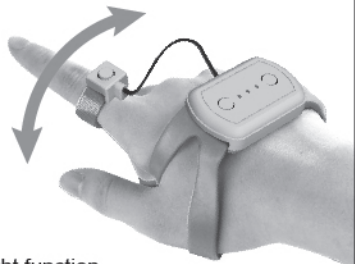

3. Pan left or right (rotate left or right after switching functions)
4. Power indicator light / Frequency indicator light
5. Long press: function switch / Short press: light control
6. Torsion

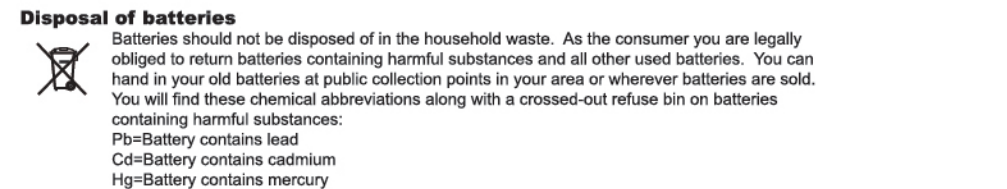

### 4. Battery installation

 
 
#### 4.1 For below items



NO.: S8908A, S8908B

#### 4.2 Battery included

- Contents**
- RC Vehicle x 1
  - RC Transmitter x 1
  - Instruction Manual x 1
  - 3.7V rechargeable Battery Pack x 1
  - USB Charger cable x 1

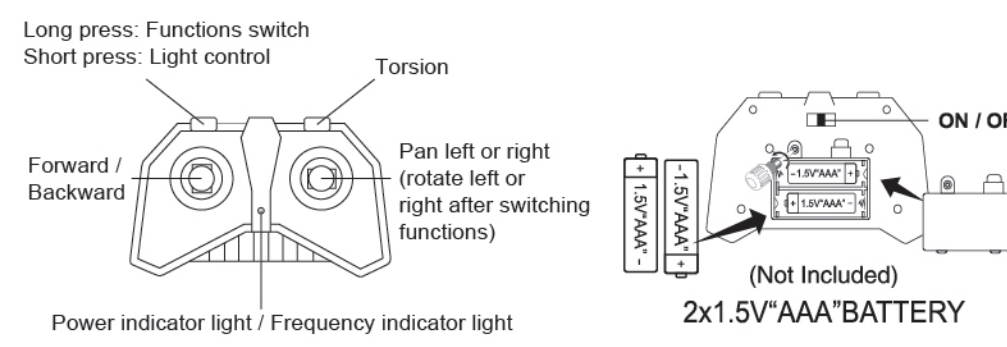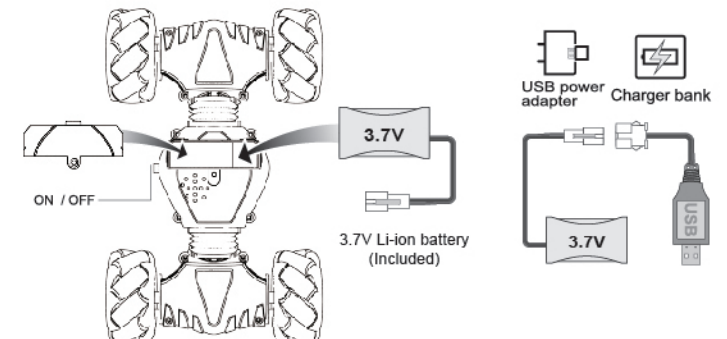

### BATTERY WARNING

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Insert batteries using the correct polarity. Do not short-circuit the supply terminal.
- Remove batteries when not in use. Recycle or dispose of exhausted batteries according to federal, state, and local laws.
- Do not dispose of batteries in a fire—they may leak or explode.
- Only use manufacture specified battery(ies), charger(s) and/or adapter, if applicable, specified by the manufacturer.
- Always use, replace, and recharge (if applicable) batteries under adult supervision.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged;
- Rechargeable batteries are only to be charged under adult supervision;
- Exhausted batteries are to be removed from the toy;
- The supply terminals are not to be short-circuited.
- Packaging has to be kept since it contains important information.
- Product may vary slightly from image shown.
- Do not drive the vehicle on grass, sand rocks or go through water.
- Do not drive the vehicle into any hard object.

### SAFETY PRECAUTIONS

- Do not operate during thunderstorms or rain.
- Avoid water, sand and snow when operating the car.
- Do not submerge car or controller in water.
- Never operate your car on the street or highway.
- Never operate your car in a confined or crowded area and do not use people or animals as obstacles.
- Do not run your car into furniture, objects or hard surfaces, as this will cause damage to both the objects and the car.
- Keep fingers, hair and loose clothing away from the tires, gears and motor while the car is switched to "ON".
- Do not leave the car or transmitter near sources of heat or under direct sunlight for long periods of time.
- Do not leave the car or transmitter outside overnight. Dampness is harmful to interior components.
- Remove all batteries when not in use to avoid accidental operation.
- Adult supervision is recommended when operating this car.

### Performance tips

1. Do not drive on grass, dirt, sand, dust, carpet or through water.
2. Do not drive in windy or rainy weather.
3. Avoid the vehicle directly impacting with obstacles.
4. Switch OFF the power when not in use to prevent damage to the vehicle or transmitter.
5. Remove all batteries from the vehicle and transmitter when not in use for a long period of time.
6. Keep fingers, hair and loose clothing away from the wheels.
7. The operating range can be affected by a variety of factors.
  - a) Low Voltage of batteries in the transmitter or vehicle.
  - b) Interference from other items that emit radio frequency signals.
8. Outdoor usage is recommended in order to get optimum control range.
9. It is recommended to play with the vehicle on a clean and smooth surface
10. Clean the battery compartment to make sure it is free from dust to prevent poor contact of batteries.

### Cautions

1. The charger to be used with the toy should be regularly examined for potential hazards, such as damage to the cable or cord, plug, enclosure of other parts. In the event of such damage, the toy must not be used.
  2. Do not attempt to disassemble the vehicle or transmitter.
  3. Do not operate the vehicle with the same frequency as other player(s) in the same location as this will interfere and make the vehicle go out of control.
  4. Make sure the batteries are installed with correct polarities (+/-) as shown inside the battery compartment.
  5. Remove the package and take out all accessories before giving the Vehicle and Transmitter to a child to play with.
- The packaging and instruction manual contains important information. Please keep them for future reference.
- Warning! Choking Hazard. Not suitable for children under the age of 3 years due to small parts.
- We reserve the right to improve/amend specifications and colour without notice.
- Warning! The Antenna of the vehicle is not to be inserted into socket outlets.
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) this device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.
- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.
- These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
- However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.