YSS004 BS081RL1 英文说明书 展开尺寸: 420*140mm 成品尺寸: 105*140mm 颜色: 4C+4C 材质: 128g 双铜纸 工艺:无特殊工艺

420mm - 105mm What' s in the box? **Product Sketch GXCITRUS**™ User Guide Smart Wireless Ear buds AW-20 Smart Wireless Ear Buds × 1 Pouch × 1 (1) Speakers (2) Battery Box 正面 140mm Controller Micro USB Cable× 1 User Guide × 1 D Eartips × 3 (L, M S)

Charging

- Prior to using the ear buds for the first time or no use for a long time, please fully charge the battery.
- Approximately 2 hours are required to fully charge the ear buds. • The indicator light turns red while being charged, and will turn blue automatically
- after being fully charged. • When the ear buds is running out of battery, the indicator light will flash red (the ear buds will switch off automatically when the battery is drained). Please charge the ear buds as above steps in time to prolong the battery's useful life (Charging
- indication will be delayed for a few minutes if the ear buds has not been used for a long time or the battery is drained).. **Note 1**: Use only the gualified charger to charge the ear buds, if use other device
- may violate the validation or the maintenance article of this product and may cause danger. Note 2 : Do not attempt to force open the built-in battery as this could damage the
- Answering a Call

ear buds.

反伯

- When a call is coming, you can answer it with the ways as follows:
- Way 1 : Press MFB once. Way 2 : Separate the magnetic ear buds and answer (When magnet stay together) Way 3 : Answer the call with your phone.

Ending a Call

- You can end the call you are answering with the ways as follows: Way 1 : Press MFB once.
- Way 2 : Separate the magnetic ear buds and answer (When magnet stay together) Way 3 : Answer the call with your phone.
- **Rejecting a Call** Press and hold MFB for 2 seconds to reject the call.

Mute During a call, press and hold "V+" for 3 seconds, the ear buds will enter into MUTE MODE. In MUTE MODE, the speaker will sound "Beep" twice every 10 seconds, you could cancel the MUTE MODE if press and hold "V+" for 3 seconds again...

The Last Number Redialing

- Press MFB twice to redial the last phone number (when connect with phone).
- Calling Transferring During a call, press "V-" for 2 seconds and you will hear "Beep" prompt voice and can shift the call between cellphone and ear buds.

Two-call Handling

- When you are answering a call, there is another call coming: • Press MFB 2 seconds to end the current call and answer another one. • Shortly press MFB once to answer another call and hold on the current one. • After the above operation "2" settled, shortly press MFB to transfer one call to another.
- Note: All the above operations have to respect the precondition that Phone supports Bluetooth hands free profile V1.5 and Phones are running under call holding function(Network service) from telecom.

Music Pause /Playing

Way 1 : Shortly press MFB to PLAY music(paired and standby condition), press MFB again to PAUSE music. Way 2 : Pull apart the magnetic ear buds to play music while click them together to PAUSE.

Note:

- When the magnetic ear buds click together to PAUSE music while separate it to PLAY. It's not suitable to use this function frequently unless delay about 10 seconds. • When playing music, it' s suggested to use MFB to answer a call, it' s normal for music keep on playing if use magnetic function to hang up the call under this circumstance(lt' s suggested not use magnetic function to hang up calls in this circumstance).
- During playing music, the magnetic ear bud is separated, shortly press MFB or use phone to pause music, you should delay 10 seconds to stick together ear buds then it will not re-start music.

Adjusting the Volume

In call or music playing state, shortly press "V+" or "V-" once to adjust the volume. When the volume up to maximum or minimum, you could hear "Beep" voice prompt.

Forward/Backward Press and hold "V+" the previous song. Note:


blue light flashes tv press and hold MFE • When all the pairing

connected autom **Headset Resetting**

In any state, as long Maintenance

• Do not use abrasiv • Do not allow the

Product Name: Sma Model Number: AW Bluetooth Version: Bluetooth Profile: H Frequency Response

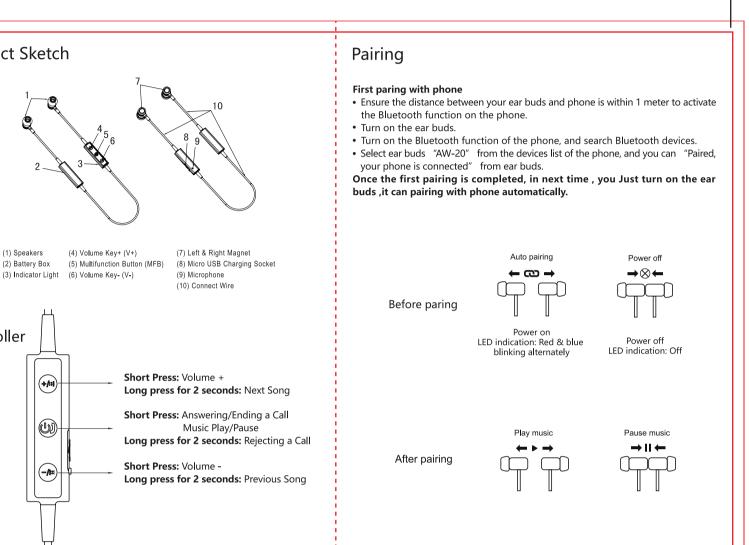

 Forward/Backward Press and hold "V+" or "V-" for 2 seconds to forward the next song or backward the previous song. Note: Due to technology of difference phones, it's not sure for all phones can go back to the previous song, it may be back to the beginning. Delete Pairing Record on the Ear Buds In ON and not connected mode, press and hold "V+" and "V-" until the red and blue light flashes twice at the same time, you will hear "Beep" prompt voice, then press and hold MFB for 3 seconds, the pairing record on the ear buds turn on again, it couldn't connected automatically and enter into pairing mode directly. 	oting	Troubleshooting	Charing ear buds for 2-3 hours	Charge the ear buds to reset	Paring again	Please charge the ear buds immediately	Check whether the MicroUSB charging cable is plugged in or DC power switch is turned on	Charge the ear buds for 2 to 3 hours	Turn down the volume	Charge and reset	Clean the dirty and sweat on the horn head magnets	Move to another place, or reducing the distance between ear buds and devices or turning down the volume	Adjust the position of the ear buds	Delete the pairing record as user guide
 Headset Resetting In any state, as long as the ear buds is charging, it will be reset. Maintenance Do not use abrasive cleaning solvents to clean the ear buds. Do not allow the ear buds to touch with any sharp objects as this will cause scratching and damage. Please keep headset away from high-temperature, humidity and dust. Specification Product Name: Smart Wireless Ear Buds Model Number: AW-20 Bluetooth Version: Bluetooth 4.1 Bluetooth Profile: HSP,HFP,A2DP,AVRCP Frequency Response: 20Hz-20KHz Supported Audio Format(s): SBC , MP3 , AAC 	Troubles and Troubleshooting	Cause	Low battery	Can't turn off when turned on	Incorrect paring	Battery low	MicroUSB charging cable has no voltage Cr output or DC power supply does not output is	Low battery	g Music issue or the volume is too loud	Due to too frequent operations	Check if have dirty nd sweat on both horn head magnets	Caused by environmental interference or the distance between the earphone and the device is too far or the volume is too loud	Ear buds are not equipped correctly	Too many pairing records
Battery: 60mAh Lithium Battery Charging Connector: Micro-USB Charging Time : 2 hours NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and i. for installed and used in accordance with the institutions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. This equipment does cause harmful interference to radio or television neception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Roreate the separation between the equipment and receiver. Connect the equipment into an outed on a circuit different from that to which the receiver is connected. Connect the equipment inden outed on a circuit different from that to which the receiver is connected. Connect the equipment inden an outfort different from the to which the receiver is connected. Connect the equipment inden an outfort to expressly approved by the party responsible for compliance could voli the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device must accept any interference received, including interference that may cause undesired operation.		Troubles	Unable to turn on	Unable to turn off	No sounds after paring	Flashing red light when calling	No indication when charging	Turn off automatically	Tremolo in music playing and calling	Magnetic function disorder	No magnetic control function	Noise or echo when calling	Low voice of the calling party	Pairing and connecting slowly