

Safety Regulations

Before using this product, please read the following safety instructions and follow all routine safety precautions.

Please read the instructions carefully, please keep the instructions.

Any operation inconsistent with this instruction manual may cause damage to this product.

Note:

1. Only authorized technicians can disassemble this product. Users are not recommended to disassemble this product by themselves.
2. This product can only use the power adapter provided by the factory. If other adapters are used, the product may be damaged.
3. Do not touch wires, sockets or power adapters when your hands are wet.
4. Do not use cloth curtains or body parts to roll into the product drive wheels.
5. Do not place this product near cigarette butts, lighters and other smoldering fires.
6. Please clean the product after charging.
7. Do not bend wires excessively or place heavy objects and sharp objects on the machine.
8. This product is an indoor household product. Do not use it outdoors.
9. Do not sit on the product.
10. Do not use this product (e.g. bathroom) in wet environment.
11. Before using this product, please remove all vulnerable items (e.g. glasses, lamps, etc.) on the ground as well as items (e.g. wires, paper sheets, curtains) that may entangle the side brushes and air suction passages.
12. Do not put this product in a place where it is easy to fall (e.g. on desks and chairs).
13. Please carefully check whether the power adapter is connected to the socket before use, otherwise the battery may be damaged.
14. To prevent tripping, please inform other members of the house when this product works.
15. Please empty the dust box before using this product when the dust box is full.
16. The temperature used for this product is 0 to 40 degrees celsius.
17. Do not use this product in high temperature environment.
18. Please remove the battery from the machine before the product is scrapped.
19. Please make sure that this product is not powered on when removing the battery.
20. Please recycle the discarded batteries safely.

 
Warn:

1. Use only the original rechargeable battery and charging seat specially equipped by the manufacturer. Non - rechargeable batteries are strictly prohibited. please refer to " product parameters" for battery specification information.
2. It is forbidden to use products in environments with open flames or fragile objects.
3. It is forbidden to use products in extremely hot (above 40 °C) or extremely cold (below 0 °C).
4. It is forbidden for human hair, clothes, fingers and other parts to approach the opening and operating parts of the product.
5. It is forbidden to use products on wet or stagnant ground.
6. It is forbidden for products to absorb any articles such as stones and waste paper that may clog products.
7. It is forbidden for products to absorb any inflammable substances, such as petrol, toner and toner for printers or photocopies. Prohibit the use of products in clean areas with flammable items.
8. It is forbidden for products to absorb any burning articles, such as cigarettes, matches, ashes and other articles that may cause fire.
9. It is forbidden to place articles at the suction opening. Do not use the product when the suction port is blocked. Clean up dust, cotton wool, hair, etc. at the suction opening to ensure smooth air circulation at the suction opening.
10. Use the power cord carefully to avoid damage. It is forbidden to use the power cord to drag or pull the product and the product charging seat. It is forbidden to use the power cord as a handle. It is forbidden to clamp the power cord in the crack of the door. It is forbidden to pull the power cord at sharp corners and corners. It is forbidden for the product to run on the power cord while the power cord should be far away from the heat source.
11. Do not use damaged charging seat .
12. Even if the product has been severely damaged, burning of the product is prohibited, which may lead to explosion of the battery of the product.


Contents

Product Composition / Package Contents	3
Product Composition/Part Name	4
Product Use / Preparation	6
Product Use / Host Charging	7
Product Use / Start Cleaning	8
Product Use/Pause, Wake Up and Shutdown	10
Product Use/Reservation Settings	10
Product Use / Water Tank Use	11
Component Maintenance / Dust box	12
Component Maintenance / Water Tanks and dishcloth	15
Component Maintenance / Roller Brush and Side Brush.....	16
Component Maintenance / Charging Pole piece, Down view Sensor, Drive Wheel and Universal Wheel	17
Investigation of Common Problems	18
Product Parameter.....	19


Product Composition / Package Contents

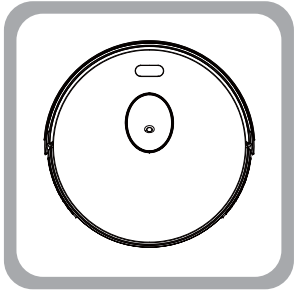


Host

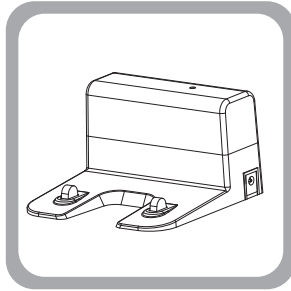 


Charging Seat

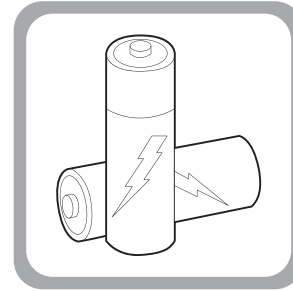 


Battery

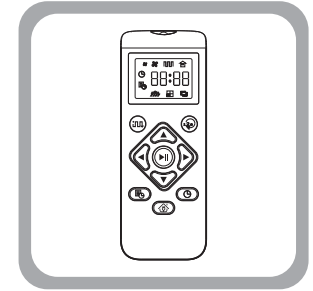 


Remote Control

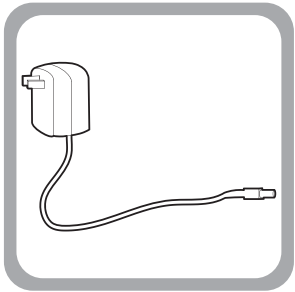 


Power Adapter

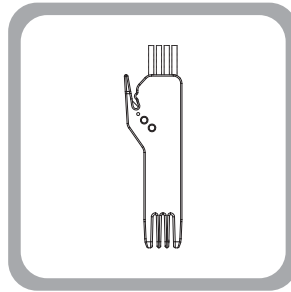 


Cleaning Brush

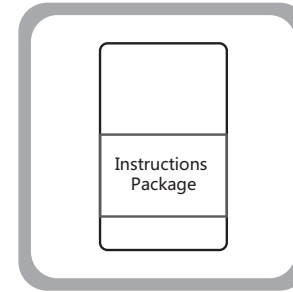 


Instructions Package

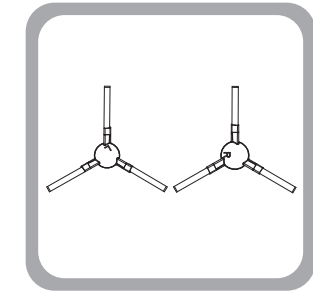 


Side Brush

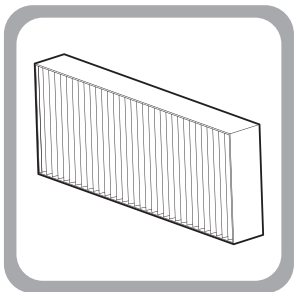 


High efficiency filter

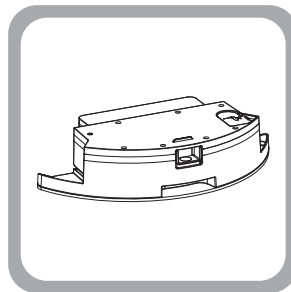 

Water Tank

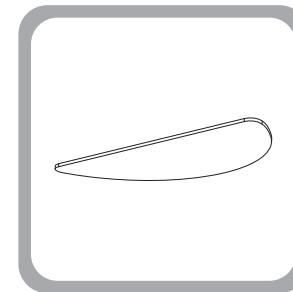 


Dishcloth

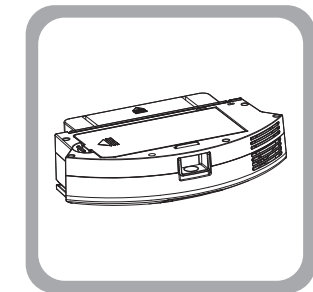 



Dust Box

Product Composition / Part Name

 
Front of Host

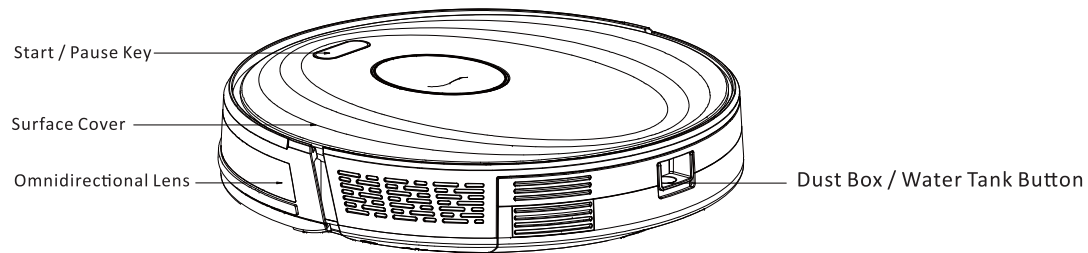


Back of Host

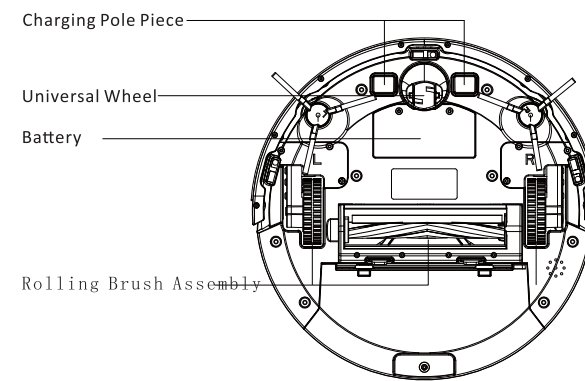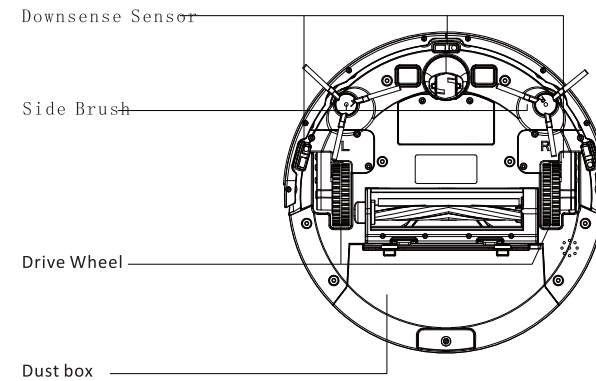  


Dust box

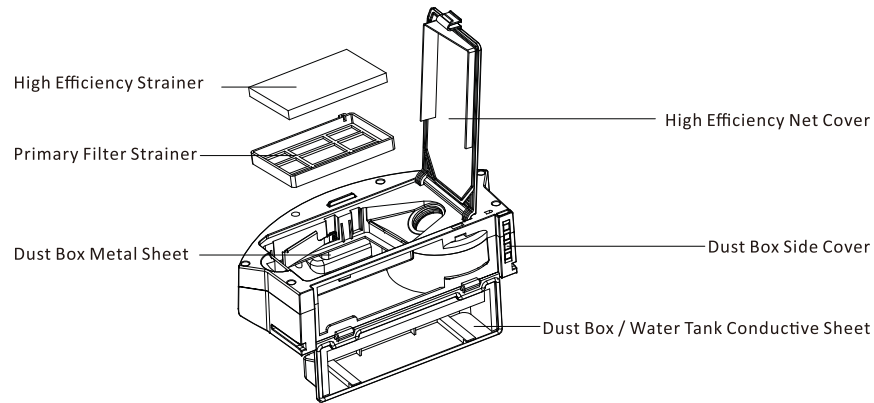 


Charging Pile

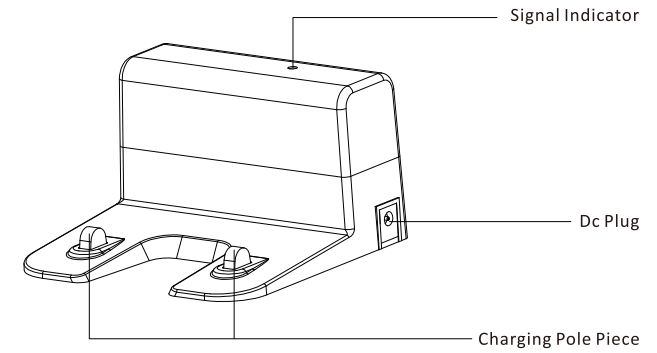 

Water Tank and Dishcloth Assembly

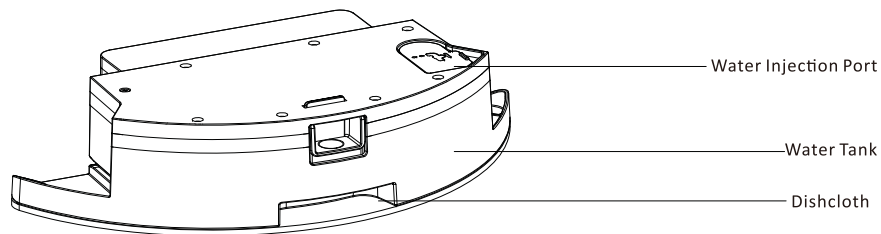 

Remote Control

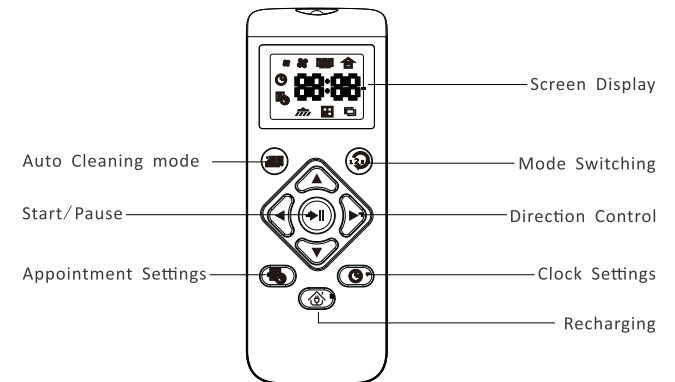 


Product Usage / Preparation


Remove Protection

Before using the host, remove the protective strip on the host and the protective film on the charging seat.

 Remove the protective strip

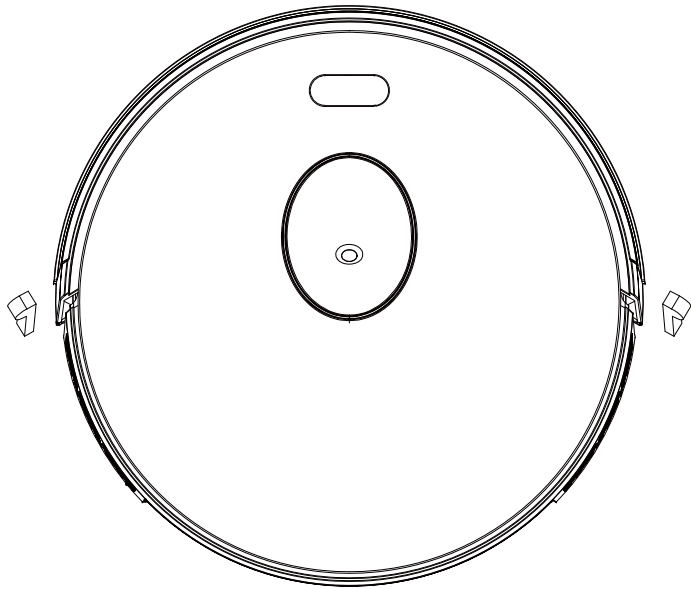


Remove protective film

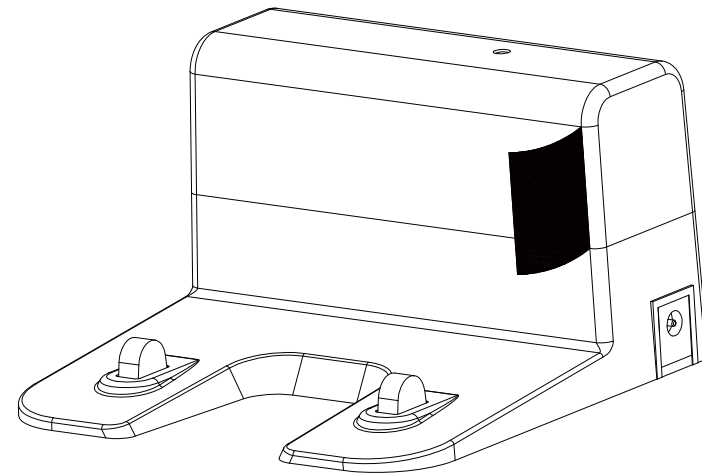 


Product Use/ Host Charging

 1.Placing and charging :The charging seat is against the wall and placed on a flat ground. Do not place articles within the range of 0.5m left and right and 1.5m ahead.

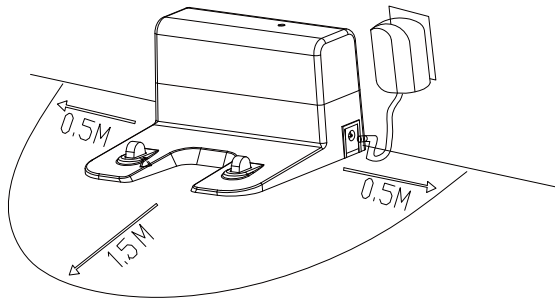



2.Connect the power supply.

 3.Installing side brush:Install the side brush according to the left and right (L/R).

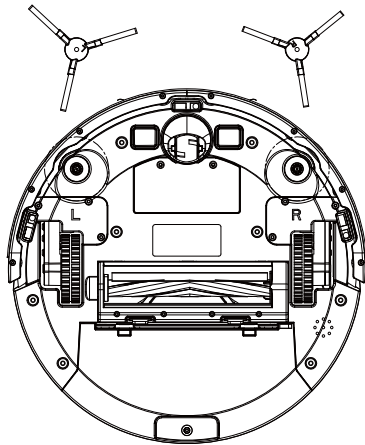

 4.Charging:Place the host on the charging seat for charging (during charging, the indicator light flashes and the charging is over, and the light is always on.The charging time is about 5 hours.)

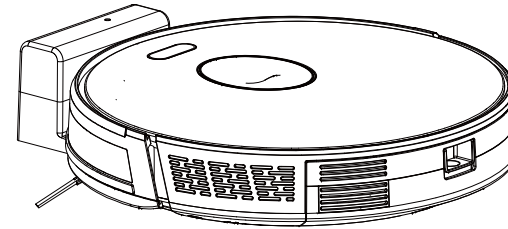

During the cleaning process, the host can sense that its power is insufficient and automatically start the recharging mode to automatically find the charging seat to charge.You can also command the host to start the recharging mode through the back charging key  of the remote controller.

! Charging attention:


- 1.The charging seat cannot be used in environments with strong reflection such as direct sunlight and nearby mirrors. If there is any object with strong reflection, please cover it 7 cm from the bottom.
- 2.In order to ensure the normal working hours of the host computer, please fully charge it before use. The charging time is about 5 hours.
- 3.When charging, do not bring the water tank assembly for charging, so as to ensure the safety of charging and prevent wet rags from damaging the floor.

 
Product Use / Start Cleaning

According to different cleaning needs, this product has a variety of cleaning mode to choose from. You can start various cleaning mode through a host, remote control or app.

Automatic Cleaning


Applicable scenario: The most commonly used cleaning method is that the main engine uses a bow-shaped path to plan and clean the whole house according to the actual home environment.

Setting method: In the shutdown state, press the key for a long time. when the indicator light of the host is on, it indicates that the host is powered on. When the key is pressed for a short time, or press the automatic cleaning bottom , the host starts automatic cleaning.

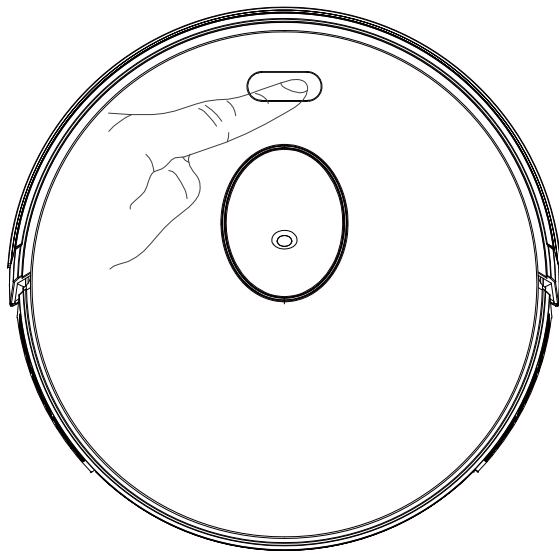

Single Room Cleaning:

Applicable scenario: Used to cleaning the single room

Setting method: Click the remote control mode switch button  to select the single room cleaning mode to start the single room cleaning.

Warm Tip: When it is only necessary to clean a single room, please close the door and the host will do centralized cleaning in the room.

If this room does not have a charging seat, the cleaning will return to the original point.

Border Sweeping

Applicable scenario:For indoor corner cleaning, the host cleans along the perimeter of fixed objects (such as walls), and returns to the charging seat after the border work is finished.

Setting method:Click the remote control mode switch button  to select the border cleaning mode to start the border cleaning.

Manual Control

Applicable scenario:Suitable for manual control cleaning.

Setting method:Click on the button of the remote controller  to control the machine to move forward and backward and turn.

Product use / pause , wakeup and shutdown





Suspend:During the operation of the host, press the host key or the remote control pause key  to pause the operation of the host.





Awaken:If the host stops working for more than ten minutes, it will automatically enter sleep mode (all the host lights are off).You can wake up the host by clicking the host key first, then click the host key or any key of the remote controller and app to restart your work.

Shutdown:After the host stops working, press the host key for a long time, and the indicator light of the host machine goes out to indicate that the machine has been shut down.

*After the host computer finishes its work, it is recommended not to shut down it so as to keep it in a state of charge so as to better carry out the next work.

Product Usage / Reservation Settings

Reservation setting:Press the remote control reservation setting button  to set the host reservation cleaning time.Press the button ,then press the key  to set the reservation time.After it,press the button ,then the setting is completed.The host will automatically clean up at the reservation time of each day.

PS:Before the reservation setting,you need to use the button  to set the clock of the host first.Press the button ,then press the key  to set the time of host.After it ,press ,then the setting is completed.