
Solar Hybrid Module - S Instructions Manual

Module solaire Manuel d'instructions








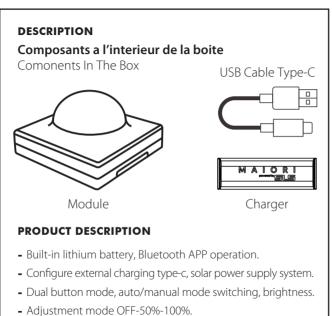

# **FUNCTIONAL DIAGRAM**



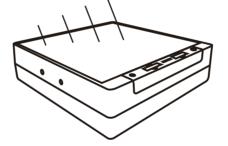

## INSTRUCTIONS

Auto/manual —



## BASIC FUNCTIONS

## Auto/Manual:

If the user wants to switch to an automatic sunlight detection mode, he just has to press one time the left button to activate it. the ON/OFF button on the right and therefore the LED module, will be working only when the ambient light received by the solar panel is sufficiently low.

## Battery status indicator:


The 3 leds battery indicator gives an information related to the current battery charge. Each time the user is pressing a button, the 3 leds indicator is displaying the battery level during 3 seconds. 3 Leds for a battery well charged / 2 Leds for an average battery level 1 Led for a low but still usable battery / 1 blinking LED for a critical low battery level indicating that the user needs to charge the product

Charging indicator: When the MK2 is charging, a blue LED located in the light module is slowly

blinking whereas it is constantly blue as soon as the battery is fully charged.



When not used for a long time, the module can be put in deep sleep mode in order to save energy, pressing both buttons for 5s until seeing a blink on the 3 small LED indicators. A short press on Auto/Manu allows the MK2 to wake up.

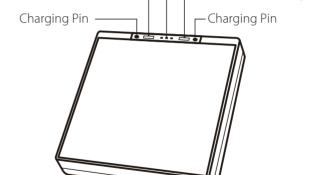

Battery status indicator

—ON/OFF/dimming

The ON OFF button allows to go through the main light functions: OFF > 50 lumens > 100 lumens

ON/OFF:

