 


Quick Start Guide

Model NO.H18F

Product Overview

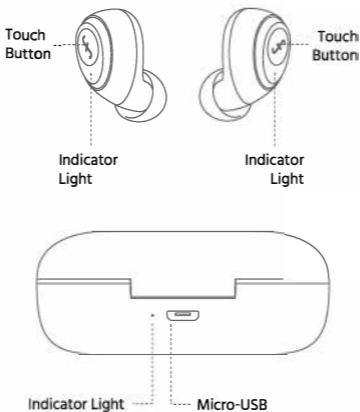

What's in the Box

H18F Wireless Headphones	x 1	H18F Charging Case	x 1
H18F Silicone Ear Tips Safety &	x 3	Quick Start Guide	x 1
Warranty Manual	x 1	Micro-USB Cable	x 1

 
1. Open the Charging Case

Open the charging case. Take out the headphones, and remove the insulation films on the headphones.



2. Charging

Before the first use, put the headphones back into the charging case and close the charging case. Connect the micro-USB cable for charging.

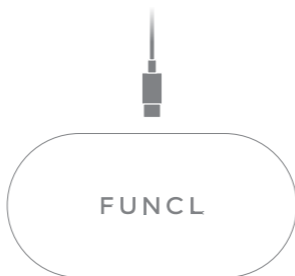

Charging the Headphones

When the battery level of the headphones is low, the indicators on the headphones will flash in red 3 times quickly every minute.

After putting the headphones into the charging case for charging, the headphone indicators will flash in red slowly, which indicates the headphones are put properly and being charged.

If a headphone indicator light doesn't flash in red, it means the corresponding headphone is put in the wrong place. Please take out the headphone and adjust it to a proper position.

The indicators on both the headphones and charging case will go off when the headphones are fully charged.



Charging Case Charging Status

When Charging the Headphones : After putting the headphones into the charging case, the charging case indicator light will flash in white. The flashing frequency shows the charging case battery level (max: flashing in 4 times; min: flashing in 1 time).

When Being Charged : The charging case indicator light will flash in white. The flashing frequency shows the charging case battery level (max: flashing in 4 times; min: flashing in 1 time). It will become a steady white light after fully charged.



3. Connect to the Device

First-Time Setup

1. When using the headphones for the first time, it is required to pair the left and right headphones. Please put the left and right headphones side by side. They will pair to each other automatically. After connected, the right indicator will go off and the left indicator will flash in white, which indicates they have entered the pairing mode.
2. Select and connect to "H18F" on the Bluetooth connection interface of your device.



* If the wireless signals surrounding you are too strong, the Bluetooth connection might be affected, causing unstable headphone connection. If this happens, it is suggested to reset the connection or move to other places.

Automatic Reconnection

Once the pairing is finished, the headphones will automatically get on and connect to the device last set up after taken out from the charging case.

4. Touch Button Control



L



R



Automatic Turning on/off

After taken out from the charging case, the headphones will be turned on automatically.

After put into the charging case, the headphones will be turned off automatically.

Manual Turning on/off

When the headphones are turned off, press and hold the left and right touch buttons for 2 seconds to turn on the headphones

When the headphones are turned on, press and hold the left and right touch buttons for 3 seconds to turn off the headphones

Music Function

During the music mode, tap the left or right touch button to play/pause music.

While playing music, double-tap the right touch button quickly to skip to the next song.

While playing music, triple-tap the right touch button quickly to play the previous song.

Call Function

Tap the left or right touch button to answer/hang up a call.

Touch the left or right touch button for seconds to reject a call.

When there is another incoming call during a call, tap the left or right touch button to hang up the current call and answer the new one.

When there is another incoming call during a call, tap the left or right touch button for seconds to reject the new call.

When there is another incoming call during a call, double-tap the left or right touch button to keep the current call and answer the new call. Then you could switch between the two calls by double-tapping the left or right touch button quickly.

 
Wake up Voice Assistant

Double-tap the left touch button quickly to wake up the built-in Voice Assistant on your phone.

5. Other Functions

Connect to a New Device

When you want to connect to a new device, please turn off the Bluetooth connection between your headphones and the current device. When the headphone indicators flash in white, which indicates they have entered the pairing mode. Then you could select and connect to "H18F" on the Bluetooth connection interface of your new device.



Restore the Factory Settings

When the two headphones could not connect to each other, or when there is one headphone not working properly, it could be resolved by restoring the factory settings.

 
1. Remove the "H18F" device from the Bluetooth interface on the phone.
2. Put the left and right headphones into the charging case (make sure the case power enough), then the Left and right headphones flash in red.
3. Separately touch the left and right headphones about 7 seconds. The red light quickly flash twice and then come into flash slowly again.
4. Again take out the Left and right headphones, wait for the Left and right headphones pairing successfully. You will see the right white light go off and the left one flash in white.
5. Open the phone's Bluetooth interface, search for "H18F" and click to connect it.

6. More Information

Please visit the official website, www.funcl.com, for more information.

Also, you could send a mail to service@funcl.com. The Funcl support team will contact you with any help you need.

外观（型号：H18F）

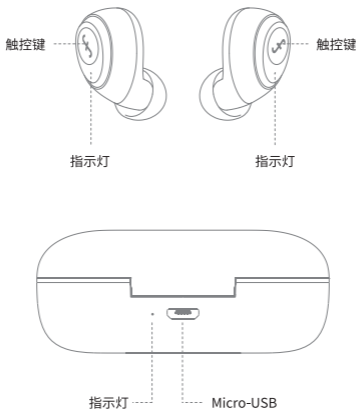

包装清单

疯米 W1 无线蓝牙耳机	x 1	疯米 W1 充电盒	x 1
疯米 W1 硅胶耳塞	x 3	快速使用指南	x 1
安规和保修手册	x 1	Micro-USB 充电线	x 1

 
1. 打开充电盒

打开充电盒，取出耳机，并撕开耳机上的绝缘膜。



2. 充电

首次使用前，请将耳机放回充电盒并合上，连接 Micro-USB 线缆充电。

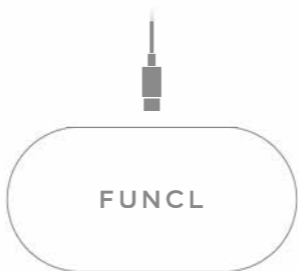

耳机充电

当耳机电量较低时，耳机上的指示灯会呈现每分钟快闪红灯三次；

当耳机放入充电盒时，耳机上的指示灯会呈现红色慢速闪动，即放置正确并进入充电状态。若耳机上的指示灯没有正常呈现红色闪动，则说明对应耳机没有正确放置，请重新取出并调整耳机至正确位置；

当耳机充满电时，耳机及充电盒指示灯熄灭。



充电盒充电状态

充电盒给耳机充电时：当耳机放入充电盒中，充电盒白灯闪烁，灯闪的次数代表充电盒电量的高低（最高时闪4次，最低时闪1次）；

给充电盒充电时：充电盒白灯闪烁，灯闪的次数代表充电盒电量的高低（最高时闪4次、最低时闪1次），充满时白灯常亮。



3. 连接设备

首次连接耳机

1. 首次使用耳机时，左右耳开机后靠在一起，自动开始配对，左右耳连接成功时右耳熄灭、左耳白灯闪烁，代表进入配对状态。
2. 在设备的蓝牙搜索列表中选择并连接“H18F”。



* 若您所在区域的电磁波信号干扰较强，可能影响蓝牙的连接，而出现耳机无声或者断连的情况，此时建议您断开重新连接或改变地点。

自动重新连接

有配对记录后，从充电盒中取出耳机，耳机将自动开机并连接最近连接过的一台设备。

4. 按键触控



L



R



自动开 / 关机

将耳机从充电盒中取出，将自动开机；

将耳机放回充电盒，将自动关机。

手动开 / 关机

在耳机关机状态下，分别长按左右耳机触摸键 2 秒，将使耳机开机；

在耳机开机状态下，分别长按左右耳机触摸键 3 秒，将使耳机关机。

控制音乐

在播放音乐状态下，单击左或者右耳机触摸按键可实现暂停 / 播放音乐；

在播放音乐状态下，快速双击右耳机触摸键可切换下一曲；

在播放音乐状态下，快速三击右耳机触摸键可切换上一曲

控制通话

单击左或者右耳机可以接听 / 挂断电话；

长按左或者右耳机触摸按键可拒接电话；

通话状态下有另一个来电接入，可单击左或者右耳机触摸键结束当前通话并接听新来电；

通话状态下有另一个来电接入，可长按左或者右耳机触摸按键拒接新的来电；

通话状态下有另一个来电接入，可快速双击左或者右耳机触摸按键保持当前通话并接听新来电，之后可以通过快速双击左或者右按钮触摸按键在两个通话间切换

 
唤醒语音助手

快速双击左耳机触摸键，即可唤醒手机内置的语音助手。

5. 其他功能

连接新设备

若要连接新设备，请手动断开当前设备的蓝牙连接，待耳机指示灯呈现白色闪烁，进入配对搜索模式。此时可在新设备的蓝牙搜索列表中选择并连接“H18F”。

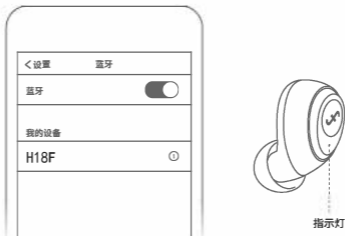

恢复出厂设置

当左右耳机无法配对连接，或者耳机无法连接到手机蓝牙时，请执行恢复出厂设置操作。

1. 手机端删除“H18F”蓝牙配对记录。
2. 将左右耳放入充电盒（确保充电盒是有电的），左右耳将红灯闪烁。
3. 分别触摸左右耳机 7S，红灯将会快速闪烁两次，然后又进入慢闪。
4. 同时将耳机从充电盒取出，等待配对连接。看到右耳白灯熄灭，左边白灯慢闪，则表明左右耳配对成功。
5. 手机端蓝牙搜索“H18F”并点击连接。

6. 更多帮助

了解更多信息，请访问 www.funcl.com

需要客服支持，请发送邮件至 service.cn@funcl.com

或扫描下方二维码，与客服直接对话



FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.