User's Guide



FC (ROHS 🕸 🧵



Specification

WH-182

32 Ω Load impedance: ≥ 90db 22Hz-20K Hz Frequency range: Lithium battery Power supply:

Audio source: iPhone, iPad, Smartphone, Notebook, MP3, MP4, etc.

Function spec: Bluetooth, Microphone 170*92*190mm Operating range up to 20 meters.

1. Introduction

Thank you for purchasing our Bluetooth headphone:WH-182. This device can be easily connected with Smartphone, tablet PC and otherdevices via Bluetooth during your traveling and daily usage. It will bring you an easy lifestyle.

2. Battery Precautions _

The device can be powered by a built-in rechargeable lithium battery. Please charge the battery for at least 8 hours before your first use of device.

If the device is not used for a long period of time, the battery may be out of power. Pleasecharge the battery.

Rechargeable batteries are only to be charged under adultsupervision. Use only the supplied micro USB cable to recharge the battery. Improper charging maydamage the battery and the device.

Do not attempt to open the rechargeable battery or battery pack. There are no serviceable parts inside.

 
Should a battery leak, the device may become damaged. Clean the battery compartment immediately, avoid touching your skin.

Keep the battery out of reach of children. If swallowed, consult a physician

Avoid storing the battery in extremely hot or cold environment . A device with a hot or cold battery may not work temporarily, even when the battery is fully charged.

Do not dispose batteries in a fire as they may explode. Batteries may also explode if damaged. Please dispose them according to local regulation. Do not dispose them as household waste.

3. Getting Started



4. Installation Operation



put on this headphone



Step . 2

6. Bluetooth Connection



- 1. Long press the Ox button to power on. The LED will flash in blue and red.
- 2. Turn on Bluetooth function of your device, (refer to the device owner's
- manual to locate Bluetooth function)
- 3. Select" Search" or "Discover" devices.
- 4. Select WH-182
- 5. If requested, type the password or PIN 0000
- 6. Press the Enter key.

After completing the steps above, a message on your Smart device will appear confirming that your device is now paired/connected.

In case of unsuccessful pairing, turn off it and restart, then do as steps above. If the Bluetooth on your smart device remains open, when you restart the headphone, the Bluetooth will be connected automatically.

8. Function Guidance

Play music from your Smart device

_		
Button	Operation	Function
H∢	Long Press	Previous song
H∢	Short Press	Volume up
M	Short Press	Play/Pause
▶ Ы	Long Press	Next song
₩	Short Press	Volume down
() <i>/c</i>	Short Press	answer/end call , reject call, last number redial
() <i>/c</i>	Long press	Power on/off

9. LED Display Status ____

LED Display		Light indication
Blue	Flash	Playing
	Stay Solid	Pause
Blue and Red	Flash	Ready to paire
Red	Stay Solid	Charging in process
	Off	Fully charged


10. Battery Charging

The device has a rechargeable battery. This can be charged by USB cable connected with your computer. When it's charging, the light will turn red. After charged, the device can be used without the power connection. Charge the device again when you hear the headphone make successive beep sound.

11. Product care _

This device is designed to be light, compact and durable. As an electronic device it must be treated carefully. Putting unnecessary pressure on it or striking the device against other objects may cause damage. To avoid damage to your device, please

- Do not drop, crush, bend or apply excessive force to the device.
- Do not expose your device to moisture, extreme or prolonged heat, cold, humidity, or other adverse conditions. Avoid storing it in damp, humid or wet places, as it is not waterproof.
- Clean the unit with a soft cloth or damp chamois leather. Never use solvents.
- · The Unit can only be opened by qualified personnel.
- This device contains magnets. Keep magnetic field sensitive products such as credit cards and video screen away from this device to avoid damage or malfunction,

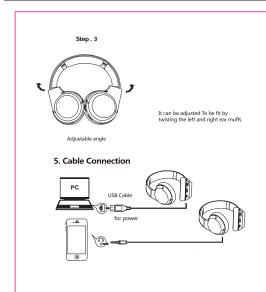

FCC Warning Statement

correct the interference by one or more of the following measures: installed and used in accordance with the instructions, may cause harmful interference to radio which can be determined by turning the equipment off and on, the user is encouraged to try to installation. If this equipment does cause harmful interference to radio or television reception, communications. However, there is no guarantee that interference will not occur in a particular installation. This equipment generates uses and can radiate radio frequency energy and, if not limits are designed to provide reasonable protection against harmful interference in a residential comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These void the user's authority to operate the equipment. This equipment has been tested and found to Changes or modifications not expressly approved by the party responsible for compliance could

- Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- connected. - - Connect the equipment into an outlet on a circuit different from that to which the receiver is
- Consult the dealer or an experienced radio/TV technician for help.

two conditions: (1) This device may not cause harmful interference, and This device complies with part 15 of the FCC Rules. Operation is subject to the following

undesired operation. (2) this device must accept any interference received, including interference that may cause