


90 mm

## Sound Machine Lite Instruction Manual

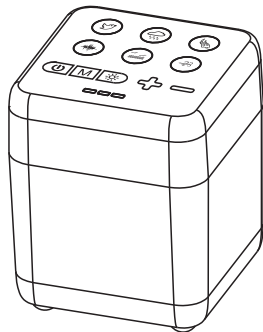


Please read all instruction  
carefully and retain for future use!

### Specifications

Dimensions: 70\*70\*85mm  
Bluetooth version: 5.3  
Bluetooth range: 10m  
Charging voltage: 3.7V  
Speaker output: 3W  
Battery capacity: 300mAh

### Overview

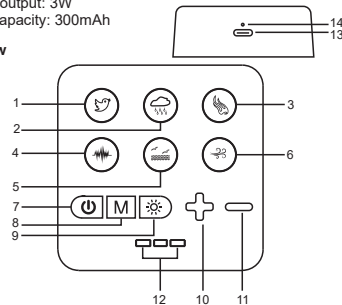

1. Bird Sounds
2. Rain
3. Fireside
4. White Noise
5. Ocean Wave
6. Wind
7. On/off button and Play/pause button
8. Mode switch
9. Light button and white noise timing button
10. Next song/next white noise / increase volume
11. Previous song /previous white noise/ reduce volume
12. White noise timing indicator light
13. Type-C charging port
14. Indicator light

### How to use the white noise

#### Turn on/off the Sound Machine Lite

Press and hold the On/Off button 2-3 seconds to turn on/off the device. Press "Bird Sounds", "Rain", "Fireside", "White noise", "Ocean Wave" and "Wind" to play related white noise; Short press "+" or "-" to switch white noise; Long press "+" and "-" to increase and reduce volume .

#### How to use the wireless mode

When the device is power on, press "M" button to switch wireless mode, the blue indicator light will flash rapidly. Then open the Bluetooth menu on your wireless device and select "Sound Machine Lite" to pair. Once paired successfully, you will hear a prompt voice and the blue indicator light will be on.

Press the Play/pause button to play or pause the music. Press "+" to next song, long press to increase volume. Press "-" to previous song, long press to reduce volume.

#### How to use light button and white noise timing button

- Long press Light button once for low light setting
- Long press Light button once again for medium light setting
- Long press Light button once again for high light setting
- Long press Light button once again to turn off light
- Short press once to set the white noise timer function, a blue light will light up and the timer will be set for 30 minutes
- Short press again, the two blue lights will light up and will be timed for 60 minutes
- Short press again, the three blue lights will light up and will be timed for 90 minutes
- Short press again to turn off the timer function

#### How to charge Sound Machine Lite

- Insert the USB Type-C cable into the charging port
- Insert the USB -A side into a 5A USB charger or other power sources
- During the charging process, a red light will remain on, and the light will be off when fully charged.

70 mm

**FCC Warning:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.