

Front

Back


TIKI SPEAKI INSTRUCTION MANUAL

TECH SPECS:

BATTERY TYPE:	LI-ION 3.7 V DC 2000 MAH	MAX OUTPUT POWER:	10W
RECHARGING TIME:	5-6 HOURS	TRANSMISSION DISTANCE:	50 FT
INPUT:	5V/1A	WATER RESISTANCE:	IPX6
PLAYTIME:	UP TO 12 HOURS		

*VARIES BY AUDIO VOLUME AND LIGHT BRIGHTNESS

BUTTON OVERVIEW:

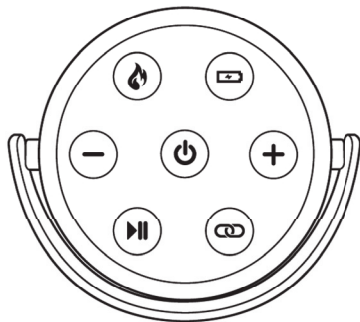

	POWER ON/OFF
	LIGHT ON/OFF/CYCLE MODES
	CHECK BATTERY LEVEL
	NEXT SONG/VOLUME UP
	PAIR/DISCONNECT DEVICE
	PLAY/PAUSE SONG
	PREVIOUS SONG/VOLUME DOWN

CONNECTING A DEVICE:

SINGLE CLICK THE POWER (⏻) BUTTON.
ON YOUR WIRELESS CONNECTION ENABLED DEVICE SELECT "TIKI SPEAKI" FROM LIST.
ONCE YOU HEAR THE VOICE PROMPT "CONNECTED" YOUR DEVICE HAS SUCCESSFULLY CONNECTED TO THE SPEAKER

USING THE SPEAKER:

AUDIO CAN BE ADJUSTED FROM THE BUTTONS ON TOP OF THE SPEAKER OR DIRECTLY FROM YOUR DEVICE.

WHEN USING THE BUTTONS ON TOP OF THE SPEAKER:

	SINGLE PRESS = NEXT SONG PRESS AND HOLD = VOLUME UP
	SINGLE PRESS = PREVIOUS SONG PRESS AND HOLD = VOLUME DOWN

TO POWER OFF, PRESS AND HOLD THE POWER (⏻) BUTTON.

USING THE LIGHT:

MODES: FLICKER | PULSING | SOLID

PRESS THE FLAME (🔥) BUTTON ONCE TO TURN ON THE LIGHT
PRESS THE FLAME (🔥) AGAIN TO CYCLE THROUGH EACH OF THE LIGHT MODES
PRESS AND HOLD THE FLAME (🔥) BUTTON TO TURN OFF THE LIGHT WITHOUT CYCLING THROUGH THE DIFFERENT LIGHTING MODES


PRESS THE BATTERY (🔋) BUTTON TO CHECK THE BATTERY LEVEL OF THE SPEAKER. A VOICE PROMPT WILL ANNOUNCE THE CURRENT PERCENTAGE

IT IS RECOMMENDED TO CHARGE THE SPEAKER TO 100% BEFORE EACH USE TO ACHIEVE THE LONGEST PLAYTIME

TO CHARGE, CONNECT THE INCLUDED USB-C CHARGING CABLE TO THE USB-C PORT ON THE BACK OF THE SPEAKER

THE LIGHTS ON THE TOP OF THE SPEAKER WILL ILLUMINATE RED WHILE THE SPEAKER IS CHARGING. ONCE FULLY CHARGED, THE LIGHTS WILL CHANGE TO A BLUE COLOR OR WILL TURN OFF

RECHARGE TIME: 5-6 HOURS

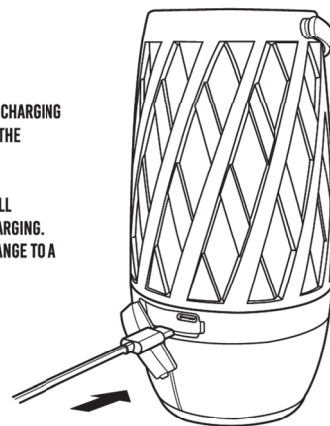

IF THE SPEAKER DOES NOT SHOW UP IN YOUR DEVICE'S AVAILABLE WIRELESS CONNECTION MENU, TRY:

TURNING THE DEVICE'S WIRELESS CONNECTION OFF, WAIT 15 SECONDS, THEN TURN IT BACK ON
TURN THE SPEAKER OFF, WAIT 15 SECONDS, THEN TURN IT BACK ON
"FORGET" (SPEAKER NAME) FROM ALL OTHER NEARBY WIRELESS DEVICE MENUS

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

FCC CAUTION: ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

NOTE: THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION. THIS EQUIPMENT GENERATES, USES AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. HOWEVER, THERE IS NO GUARANTEE THAT INTERFERENCE WILL NOT OCCUR IN A PARTICULAR INSTALLATION. IF THIS EQUIPMENT DOES CAUSE HARMFUL INTERFERENCE TO RADIO OR TELEVISION RECEPTION, WHICH CAN BE DETERMINED BY TURNING THE EQUIPMENT OFF AND ON, THE USER IS ENCOURAGED TO TRY TO CORRECT THE INTERFERENCE BY ONE OR MORE OF THE FOLLOWING MEASURES:

- REORIENT OR RELOCATE THE RECEIVING ANTENNA.
- INCREASE THE SEPARATION BETWEEN THE EQUIPMENT AND RECEIVER.
- CONNECT THE EQUIPMENT INTO AN OUTLET ON A CIRCUIT DIFFERENT FROM THAT TO WHICH THE RECEIVER IS CONNECTED.
- CONSULT THE DEALER OR AN EXPERIENCED RADIO/TV TECHNICIAN FOR HELP.

The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.

Origaudio