




www.volterman.com



VOLTERMAN
YOU NEVER LOSE

USER GUIDE

Package contains 1. Volterman Smart Wallet 2. QR Code 3. Set of Cables

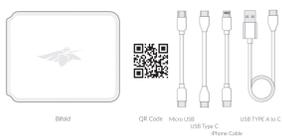


STEP 1
Download the Volterman app to your smartphone or gadget and sign up. Use the confirmation code sent to your email to complete the registration.

STEP 2

- Press the alarm button and hold down until the blue light is on, then release the button and hold until the light turns off to release the alarm in standby.
- Activate the app and scan the QR code to connect the wallet to your phone.

• Camera • LED light • USB Type C Port
• Speaker • Proximity Sensor • Alarm Button
• RFID Protection

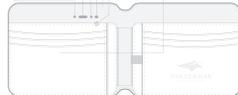

STEP 3
The main menu contains 6 main features, ability to toggle airplane mode and general settings.

1 Power Bank

2 Bluetooth Alarm

3 Track My Wallet

4 Memory Bank

5 Wi-Fi Hotspot

6 Camera

Airplane Mode
When airplane mode is enabled, only the power bank will be on.

Settings
Going into the settings will open a separate window where several other functions will be listed.

History Log: Shows complete history of all functions previously used by the wallet.

Change user password: allows the user to change the password.

Software Update: allows the user to check for updates for the wallet and update the wallet accordingly.

Manage Devices: allows the user to manage and switch between different Volterman devices.

Control: allows the user to leave feedback and seek customer support assistance if necessary.

Log out: allows the user to log out of Volterman application.

1 Power Bank
This function will allow the user to charge the wallet both with a cable and wirelessly. Press the power bank button on the app to see the remaining mileage on the phone. A red light will appear on the screen whenever the battery percentage is below 15%. The red LED light will blink to notify the user about the low battery charge.



2 Bluetooth Alarm
The Bluetooth alarm is intended to notify the user whenever the user's phone or wallet is out of range. The user will be notified through visual and audio signals with the alarm and the vibrations. Additionally, this function notifies the user via phone whenever the wallet is open within a 20-meter range. To activate the Bluetooth alarm function press the alarm icon. All these functions will be disabled to use the Bluetooth alarm function is turned off. The wallet's alarm will sound when the Bluetooth alarm button is activated in the app under 20 meters, however, when the alarm button is pressed on the wallet, the smartphone alarm will sound.

Alarm Button




3 Track My Wallet
The Track My Wallet function will allow the user to see the location of the wallet in real time. Press the Track My Wallet button to see the wallet's location on the map through GPS tracking. Tap 2 functions on the bottom right of the screen will then allow you to:

- Tap to zoom in to the wallet.
- Tap to zoom out to the wallet.

Please note:
GPS location may not work precisely if the wallet is in enclosed location, however, the wallet automatically maps its location on the back and the red support location can assist the user.



4 Memory Bank
The Memory Bank is a 4GB bank also within the wallet and can be used to store any files. Press the memory bank function on the app and follow the instruction to quickly transfer files between your wallet and your phone.



5 Wi-Fi Hotspot
The Wi-Fi Hotspot function will allow the user to use the wallet as a source of Wi-Fi while traveling around the world. Press the Wi-Fi Hotspot feature button on the app to toggle hotspot connectivity. To change the hotspot network settings, and to check the balance and purchased options, tap on the Wi-Fi Hotspot icon on the main menu. Your available balance after will be shown in USD with appropriate recharge rates from AMS to USD and from AMS to EUR.

Please note:
The Wi-Fi Hotspot function is intended for the user to have internet sharing data all over the world, however, the user should be aware to make regular data usage of the other functions will be limited. The payment options can also be viewed in full at www.volterman.com.



6 Camera
The Camera function will allow the user to take pictures of anybody who opens the wallet. This function is enabled intended for cases of theft or theft, needs to 2 modes.

Camera



1 Lost Mode
The camera is automatically enabled in the lost mode whenever the phone is out of the 20-meter range. In this case, three photos will be taken when the wallet is first opened and the photos will be sent to the user's phone. The photos will be downloaded to the app and the user can view them in the View Photos tab below.

2 Lost Mode
Press the Camera button to enable the lost mode camera function. The camera will take photos anytime the wallet is opened, and the photos will be sent to the app via local Wi-Fi network. The app will notify the user that there are new photos and allow the user to connect to the local Wi-Fi network to be able to view them in the local photos bank.

Please note:

- The user can delete the photos and stop from Volterman by an advanced fee access button.
- All the expenses for sending the photos to the device are incurred by Volterman Inc. No charges will be made to the user in other mode.



7 Charging
The power bank allows the users to charge the phone with a cable or wirelessly. The user can charge the phone wirelessly if the smartphone Qi compatible. The user should put the phone on the wallet to start charging the phone. If the user's phone is not Qi compatible, the wireless charging function will not work. The users can charge their smartphone using the wireless option provided in the box.

Please note:

- Use the set of cables provided in the box.
- Do not use the Volterman charging cables to charge other devices.
- The end of the cables with the Volterman logo should be connected to the wallet.
- Enabling airplane mode is recommended while charging the wallet.
- Charging the wallet simultaneously with a wire or wireless is not encouraged.
- Charging 2 phones simultaneously with a wire or wireless through the wallet is also not encouraged.
- Charging a phone through the wallet while the wallet is being charged is likewise not encouraged.
- Make a minimal distance of 20 centimeters between the wallet and your body while charging the phone through the wallet.




Wireless Charger
The Wireless Wireless charger is intended to charge the Volterman Smart wallet and Qi compatible smartphones. The package contains a USB Type-A to Micro USB Cable. The user should connect the cable to the wall and to the charger then put the wallet or smartphone on the wireless charger.

Please note:

- Charging a phone through the wallet while the wallet is being charged is not encouraged.



FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment does not use radio frequency energy with the intent of a license. It might cause interference to other FCC devices. These devices are designed to operate in a manner that does not cause interference to other licensed operations. The equipment prevents users and/or mobile units from using energy and if not installed and used in accordance with the instructions, the user should be notified.

Interference to radio communications: However, there is no guarantee that interference will not occur in particular situations. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance may void the user's authority to operate the equipment.

RF Exposure Statement

Just as with any electronic using wireless operation, Volterman's equipment complies with FCC standards with an absorption rate (SAR) of no greater than 1.6 W/kg for the head and torso. The maximum SAR value measured is 1.6 W/kg for the head and torso. The SAR value should be lower than the FCC SAR limit of 2.0 W/kg for the head and torso. The user of this device, headset and similar accessories should not exceed SAR limits continuously for extended periods. The SAR of accessories that are not wireless. These requirements may not comply with FCC equipment requirements, and should be avoided.