

产品清单

耳机 充电盒 充电线

产品介绍

充电按钮 触控按钮 触控按钮 触控按钮 触控按钮

首次使用

配对手机

将耳机放入充电盒中，保持充电盒盖打开，关闭充电盒上的配对按钮，直到耳机上的指示灯亮起，耳机进入配对状态。

打开手机蓝牙设置页面，手机屏幕上显示一个默认名称（左耳/右耳）或“JEET V2.0”，点击名称以完成配对。

配对成功后，耳机将自动与上次配对的设备连接。如果设备未配对，请长按充电盒上的配对按钮，直到耳机上的指示灯亮起，耳机进入配对状态。

配对成功后，耳机将自动与上次配对的设备连接。如果设备未配对，请长按充电盒上的配对按钮，直到耳机上的指示灯亮起，耳机进入配对状态。

Product List

Earbuds Ear covers Charging case USB Cable

Product description

Control Panel Indicator Light Microphone Charging pins

Charging pins Pairing button Charging Port

First uses of the earbuds

Operating

Please put earbuds into charging case first, keep the cover of the charging case opened and long press the pairing button on charging case until the indicator light on earbud flashes. Unstably that indicate the earbuds enter new pairing mode.

JEET V2.0

打开手机蓝牙设置页面，手机屏幕上显示一个默认名称（左耳/右耳）或“JEET V2.0”，点击名称以完成配对。

配对成功后，耳机将自动与上次配对的设备连接。如果设备未配对，请长按充电盒上的配对按钮，直到耳机上的指示灯亮起，耳机进入配对状态。

配对成功后，耳机将自动与上次配对的设备连接。如果设备未配对，请长按充电盒上的配对按钮，直到耳机上的指示灯亮起，耳机进入配对状态。

佩戴耳机

与手机配对成功后，将耳机放入充电盒，关闭充电盒盖。将耳机放入充电盒中，保持充电盒盖打开，关闭充电盒上的配对按钮，直到耳机上的指示灯亮起，耳机进入配对状态。

耳机功能

开机

将充电盒盖打开后，耳机可自动开机。

自动连接

打开手机蓝牙设置页面，手机屏幕上显示一个默认名称（左耳/右耳）或“JEET V2.0”，点击名称以完成配对。

光触变色控制

长按充电盒上的配对按钮，直到耳机上的指示灯亮起，耳机进入配对状态。

关机

将耳机放入充电盒，关闭盒盖，关闭耳机。

触控按钮

在充电盒上，耳机位于充电盒中，长按充电盒上的配对按钮直到指示灯亮起，耳机将恢复出厂设置并配对到手机。长按充电盒上的配对按钮，直到耳机上的指示灯亮起，耳机进入配对状态。

Wearing earbuds

After successfully paired with mobile phone, please put earbuds vertically with the top facing upwards. Slide them into ear hole gently, and adjust the earbuds moderately to a comfortable position.

Functions

Turn on

After open the charging case cover, earbud can automatically power on.

Auto reconnection

Open the charging case, both earbuds will automatically connect and reconnect with the recently connected mobile phone.

Photosensitive color detection

When playing music, remove earbud from your ear, it will pause automatically within 30 seconds after removal, wear earbud again and play automatically.

Power off

Put earbuds into charging case, close the cover, the earbuds will power off automatically.

Factory Reset

When charging case is opened, put earbuds into long press pairing button on the charging case until indicator light flashes three times. After the earbuds will restore the factory settings and pairing information will be cleared. After the red light goes out, the factory setting is completed.

功能/操控

耳机顶部正前方触控面板示意图

触控面板控制按钮示意图

功能	操作
接听电话	连续触碰两次任意耳机触控面板
结束电话	连续触碰两次任意耳机触控面板
激活语音控制	连续触碰两次左耳机触控面板
音乐播放/暂停	连续触碰两次右耳机触控面板

注意：在使用双耳通话时，只有主耳的麦克风在工作。

Call function

Control panel area

The earbud control panel schematic

Function	Operating
Answer phone	Continuous tap twice on earbuds any control panel
End call	Continuous tap twice on earbuds any control panel
Activate voice control	Press twice the left earbud control panel button
Music Play / Pause	Press twice the right earbud control panel button

Note: When using two earbuds to make a call, only the microphone of the main earbud works.

检查电池电量和充电

使用耳机

当耳机与带有 iOS 系统的设备配对连接上，在手机屏幕上显示耳机当前的电量。

检查耳机电量

在手机蓝牙设置页面上，手机屏幕上显示耳机当前的电量。

为耳机充电

将耳机放入充电盒后，关闭盒盖为耳机充电。

查看充电电量

打开盒盖后，充电指示灯亮起，表示充电盒电量充足；
充电盒指示灯熄灭或不亮，表示充电盒电量低，需要进行充电。

为盒子充电

将充电盒插入充电器或 USB 接口，充电盒上的 LED 指示灯亮起，表示正在充电。

Check battery and charge

Using earbuds

When earbuds with an iOS system device are paired, phone shows the current battery of your earbuds. When earbuds power is low, voice prompt will inform you that earbud need to charge.

Check earbuds battery

When earbuds power is low, voice prompt will inform you that earbud need to charge.

Check charging case battery

When charging case is opened, the indicator light on the case is always green, indicating that the charging case battery full.
The red indicator light of the charging case is always on red, indicating that charging case battery is low.

Charge the charging case

Charge the charging case with the original type-c cable. The indicator light on the charging case flashes three times.
Note: It is recommended to use the original charging cable, there is an adaptation problem with third-party accessories.

清洁耳机和充电盒

定期对耳机和充电盒进行清洁

组件	清洁过程
耳机的穿孔	只需用干燥、柔软的精梳纤维或类似物品清洁。注意：切勿将任何液体滴入或浸入穿孔。
充电按钮/每个耳机和充电盒上	为防止生锈，请使用干燥、柔软的精梳纤维或类似物品进行清洁。
充电盒	只需用干燥、柔软的精梳纤维或类似物品清洁。

Cleaning earbuds and charging case

Regularly clean the earbuds and charging case

Component	Cleaning process
Earbuds sound hole	Use only dry, soft cotton rag or similar items to clean hole. Note: Do not insert any cleaning tool into the sound hole.
Charging pins (on each earbud and charging case)	To prevent rust, always clean with a dry, soft cotton rag and charging case.
Charging case	Use only dry, soft cotton rag or similar items to clean.

重要安全说明

警告

本产品含有锂电池，耳机的存放位置应避免儿童和宠物，耳机的存放位置应避免潮湿、阳光直射、不使用、应将其存放在干燥通风处，并避免儿童和宠物接触的地方。

本产品含有锂电池，耳机的存放位置应避免儿童和宠物，耳机的存放位置应避免潮湿、阳光直射、不使用、应将其存放在干燥通风处，并避免儿童和宠物接触的地方。

本产品含有锂电池，耳机的存放位置应避免儿童和宠物，耳机的存放位置应避免潮湿、阳光直射、不使用、应将其存放在干燥通风处，并避免儿童和宠物接触的地方。

Important safety instructions

Security Information

Do not use the device in a well-ventilated, cool place, out of direct sunlight.

Do not use the device in a well-ventilated, cool place, out of direct sunlight.

Do not use the device in a well-ventilated, cool place, out of direct sunlight.

中国危害物用图表

有害物质名称	有害物质名称及其成分			
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))
印刷电路板	X	0	0	0
金属零件	X	0	0	0
塑料零件	0	0	0	0
扬声器	X	0	0	0
总结	X	0	0	0

Product service policy



1. In the process of normal use of the product, if the product has a performance failure caused by non-human damage, the consumer will have a warranty period of 12 months from the date of purchase, and enjoy the rabbit fee free maintenance service during the warranty period.

2. In one of the following cases, the consumer cannot enjoy the warranty right:

1. Man-made damage
2. Warranty period
3. No warranty card and valid invoice, but can prove that the product is under warranty
4. The warranty card does not match the product model/identification, or the warranty card has been altered
5. Damage caused by force majeure
6. Damage to the parts caused by fall, misuse, maintenance and repair according to the instructions
7. Unauthorized disassembly, repair, or immersion or damage of the product without the authorization of the company
8. Damage caused by force majeure
9. Bad consequences caused by not using original accessories

3. JEET Web: <http://weibo.com/jeetv2>, JEET 官网: <http://www.togic.com>

- ### 技术要求:
- 1) 颜色C 黑底白字
 - 2) 材质M 128G双铜+塑胶
 - 3) 工艺F 啤、折
 - 4) 环保R 产品符合ROSH2.0+REACH+HF+加州65环保管控要求
- 同时须符合双方签订的《环保协议书》
- 其他要求: (1) 颜色与样板(样板只能存放六个月) 不能存在严重色差, 色差误差在-3%—3%之间;
(2) 印字字啤、图案不能存在模糊不清或有重影;
(3) 啤位需与样板相符, 不可啤偏或有毛边, 折痕处没有明显爆色现象;
(4) 印刷内容及内容排版位置需与样板或文档相符;

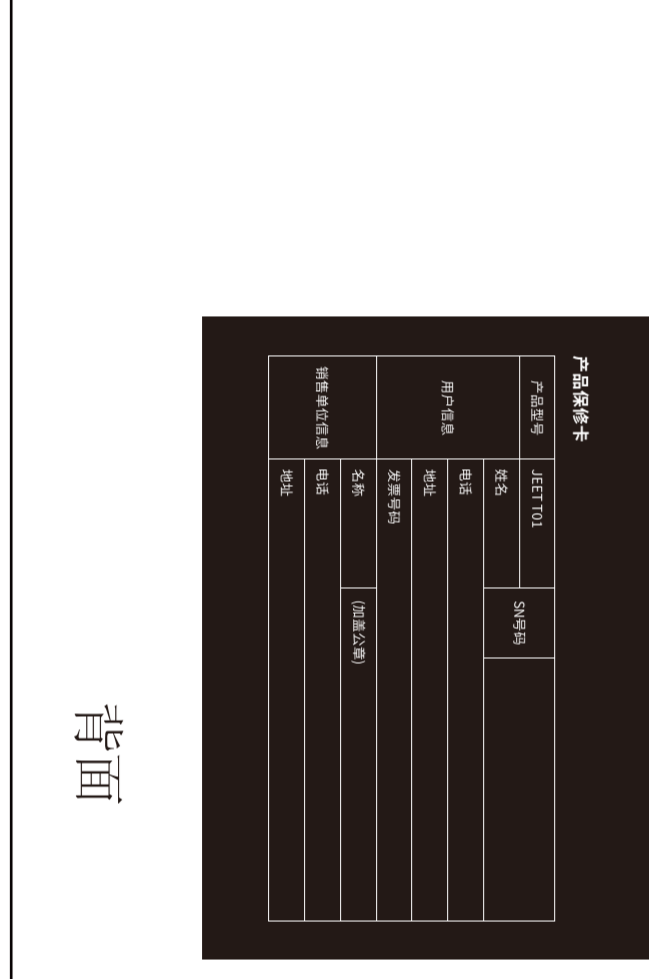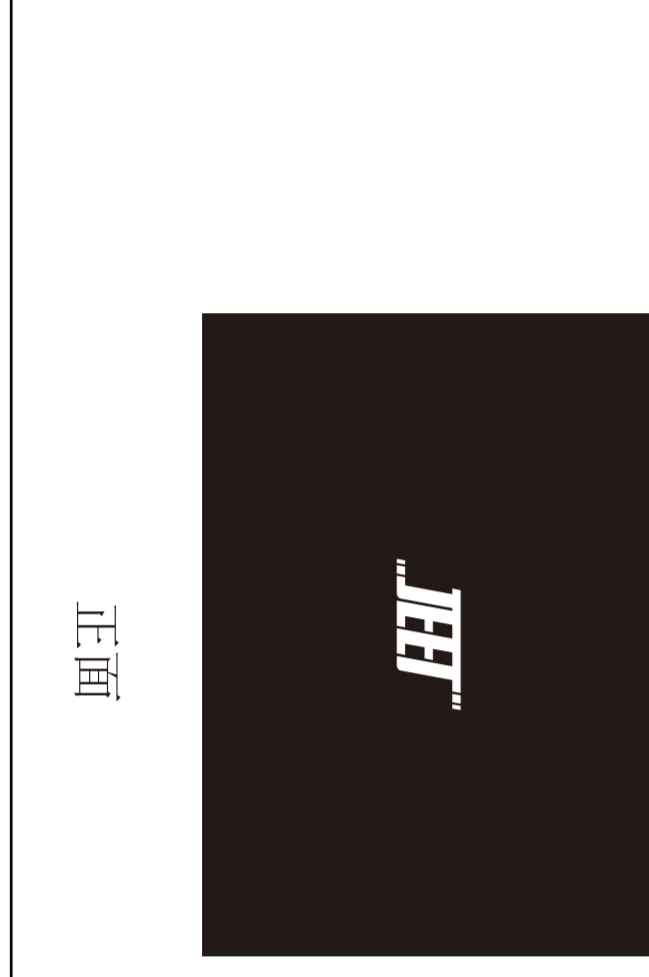

产品规格表

产品型号	JEET T01
颜色	黑底白字
材质	128G双铜+塑胶
工艺	啤、折
环保	符合ROSH2.0+REACH+HF+加州65环保管控要求

变更/工艺/审核/批准	原因/签名/日期	零件名称	零件编号	图纸编号	版本	比例	单位
		说明书	JEET T01		V2.0		

公差	A	B	C
±0.1	±0.1	±0.2	±0.3
±0.2	±0.1	±0.2	±0.3
±0.3	±0.1	±0.2	±0.3
±0.4	±0.1	±0.2	±0.3
±0.5	±0.1	±0.2	±0.3
±0.7	±0.1	±0.2	±0.3
±1.2	±0.1	±0.2	±0.3
±2.0	±0.1	±0.2	±0.3
等级	<5	5	15
	15	15	60
	60	60	250
	250	250	250