

正面

aiwa

Wireless Speaker
with lighting and MIC



 
Item: AI6012

User's Manual

WHAT'S INCLUDED


- AI6012 Wireless Speaker
- USB Charging Cable
- Microphone
- User's Manual with Warranty Information

A CLOSER LOOK

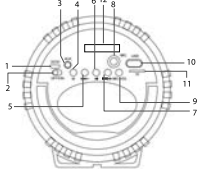


1. DC5V Charging Port	7. Next Track/Volume +
2. Power Switch	8. MIC-IN Port
3. AUX-IN Port	9. MIC Volume Control
4. Mode	10. USB Port
5. Previous Track/Volume -	11. TF Card Slot
6. Play/Pause	12. Display Screen

 
CHARGING

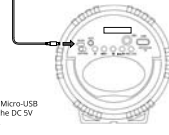

 Insert one end of the included Micro-USB charging cable (included) into the DC 5V charging port on your speaker.




 Insert the other end into the USB part of a computer or suitable USB charging adapter.

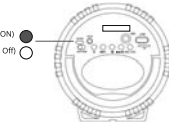

Charging (Indicator is ON)
Charging Complete (Indicator Off)

 
POWERING ON/OFF

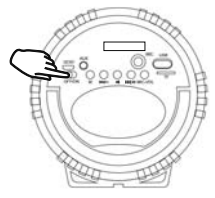

Slide the Power Switch to the ON position to power ON your speaker. After powering ON, your speaker will automatically go into Bluetooth pairing mode.

Slide the Power Switch to the OFF position to power OFF your speaker.


BLUETOOTH PAIRING



Power on your speaker. Then press the mode button repeatedly to toggle through your speaker's Bluetooth mode and FM mode. Make sure BT (Bluetooth) mode is selected.

NOTE: Your speaker has four modes:
-Select AUX mode to listen to music from a device connected to your speaker's AUX-IN port.
-Select BT mode to pair your speaker to a Bluetooth enabled device.
-Select FM mode to listen to FM radio channels.
-Select USB/TF mode to listen to music from a connected USB drive or a memory card.

ADDITIONAL NOTE: Press and hold the Mode button to change the speaker's lighting modes.



Go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on. Connect to the device listed as 'AIWA Wireless Speaker'.


aiwa

SAKAI


©2014 SAKAI Industrial
195 Center Drive
Eden, NJ 08817
www.sakai.com
Support: 877-367-8200
support@sakai.com

反面


LISTENING TO MUSIC



Press the **⏮** button to go back to the last track in a playlist. Press and hold to decrease the volume.

 


Press the **⏭** button to go to the next track in a playlist. Press and hold to increase the volume.




Press the **⏸** button to play or pause a track.

MICROPHONE

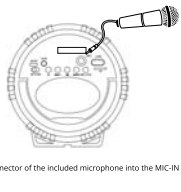


Insert the connector of the included microphone into the MIC-IN Port.



Press the Mic Volume Control button to adjust the microphone volume level.

 ADDITIONAL FEATURES

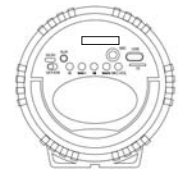

USB Port
Insert a USB drive into the USB port on your speaker. The speaker will play any MP3 files found on the USB drive. Maximum support of 32GB.

AUX IN Port
Connect one end of a 3.5mm Aux cable (not included) to the Aux IN port on your speaker. Connect the other end to the headphone jack on your audio device in order to listen to music using a wired connection.

TF Card Port
Insert a memory card into the TF card port on your speaker. The speaker will play any MP3 files found on the memory card. Maximum support of 32GB.

SAFETY PRECAUTIONS

When using your speaker, basic safety precautions should always be followed including:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR SPEAKER.
2. Do not submerge your speaker in water.
3. Only clean using a clean cloth.
4. Do not allow children to play with this product. This product contains small pieces that can be a choking hazard. Parental supervision is advised.
5. Do not expose this product to excessive heat or fire.
6. Do not expose this product to temperatures above 100°F. Keep out of direct sunlight.
7. Do not attempt to repair this product yourself. Contact a qualified service center if the product is in need of service.
8. Do not drop, crush, or expose this product to excessive physical force.
9. This product is not intended for commercial use.
10. When charging, keep all charging cables well ventilated. Do not keep your charging cable in contact with flammable materials such as bedding, linens or synthetic fabrics.

Maintenance and Care

- Use a soft cloth or paper towel to clean your speaker. Never use any harsh chemicals or detergents for cleaning. Make sure your speaker is dry before charging.
- When your speaker is not in use, it should be stored in a cool, dry place.
- Never tug or yank on a cable while it is connected to your speaker. Connect and disconnect cables as carefully as possible.
- Never expose your speaker to high temperatures, extreme cold.
- Please recycle or dispose of your speaker properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your speaker for further information.

FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum distance between 20cm the radiator your body. Use only the supplied antenna.

SPECIFICATIONS

Bluetooth Version: V3.0
Bluetooth Range: Up to 33 feet (10 meters)
Power Supply: DC 5V (TA 0.5A)
Battery Type: 3.7V 1200mAh Lithium Ion Battery
Output Power: 5W
Play Time: Up to 2.5 hours*
*Applicable at 50% of maximum volume. Results will be lower when volume is higher.

WARRANTY

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What is Not Covered by Warranty
Damage or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but not limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:
Call (877) 397-8200 or visit our website at www.aiwa.com.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address of the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepared.

正反面印刷，风琴折，成品尺寸：101.6 X 139.7mm