

wireless portable party speaker

superior premium sound







Introduction

Thank you for purchasing the Vivitar Wireless Portable Party Speaker, item V60033BT. Turn a gathering into a party with this light up Bluetooth speaker, compatible with most mobile devices and tablets. For additional fun, plug in the included microphone to sing along with your friends, family, and favorite tunes. For the best experience, please read this manual carefully before using your speaker.

Important Safety Precautions

When using your Vivitar Wireless Portable Party Speaker, basic safety precautions should always be followed including:

- 1. READ ALL INSTRUCTIONS BEFORE USING THE SPEAKER.
- 2. Do not allow children to use the speaker without adult supervision.
- 3. Do not expose the speaker to excessive heat, flames or fire.
- 4. Always press buttons and turn knobs carefully. Do not handle the speaker roughly.
- 5. Do not use in extremely dry environments, as this can lead to static discharge during usage.
- 6. Do not expose the speaker to temperatures above 104°F. Keep out of direct sunlight.
- Do not attempt to repair this product yourself. Contact a qualified service center if your speaker is in need of service.
- 8. Do not drop, puncture or expose your speaker to excessive physical force.
- 9. The speaker is not intended for commercial use.
- 10. Do not place near objects that generate a strong magnetic field.
- 11. Unplug your speaker when not in use for long periods of time and during lightning storms.
- 12. Please recycle or dispose of your speaker properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your speaker for further information.
- 13. Do not tug or yank on the charging cable and the microphone when disconnecting from the speaker. Always gently insert and disconnect cables.

BATTERY WARNING:



- -The device is equipped with an integrated lithium battery. The battery cannot be replaced. Do not attempt to remove the battery from the device.
- -Do not dispose of in fire or expose to excessive heat.
 -Do not crush, puncture, incinerate, or short circuit external contacts.
- Please recycle or dispose of the battery properly. Contact your local recycling facilities and/or the manufacturer for further information.

Package Contents

- Vivitar Wireless Portable Party Speaker
- USB Charging Cable
- Microphone
- User's Manual with Warranty Information

Specifications

Bluetooth Specification: V5.0 Bluetooth Range: Up to 33 feet Power Supply: DC 5V Battery: 2400 mAh

Charging the Speaker

Using the included USB charging cable, connect the standard USB end into a wall adapter (not included) and into a wall outlet. Insert the Micro USB end into the port on the back of the speaker.

NOTES:

- --Remove the charging cable once charging is complete.
- --Overcharging could reduce the life of the battery.
- -- A charged battery will lose its capacity if it is not used on a regular basis.

Important: To avoid a complete discharge of the battery, charge your speaker at least once every six months.

Bluetooth Pairing

Press the power button to turn the speaker On. Then, press the mode button to out the speaker in Bluetooth pairing mode.

Go to the Bluetooth settings page on your phone. Make sure that Bluetooth is turned on before connecting to the available device "V60033BT".



Selecting a Mode

After turning the speaker On, press the Mode button repeatedly to choose how music and audio will be played. Select from the following modes below:

AUX: Select this mode to play music from an audio source connected to the speaker's Auxiliary Input Jack.

USB: Select this mode to play music from a thumb drive or similar device inserted in the speaker's USB Port.

TF: Select this mode to play music from a TF or Micro SD memory card inserted into your speaker's TF Memory Card Slot. Your speaker can play .MP3 music files stored on your memory card.

FM: Select this mode to listen to FM radio stations. Press and hold the Play/Pause button in order to search for available stations. Press the Previous and Next track buttons to toggle through stations.

Speaker Controls

- 1. Press the Play/Pause button to play and pause music.
- 2. Press the Next track and Previous track buttons to go to the next or previous track.
- 3. Turn the Power/Volume knob to increase and decrease the speaker's volume.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Vivitar One Year Warranty

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call 1-800-592-9541 or visit our website at www.vivitar.com.

To receive warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaired.

Vivitar One Year Warranty (continued)

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR, ITS MANUFACTURERS, OR SAKAR INT. BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

©2021 Sakar International 195 Carter Drive Edison, NJ 08817 Support: 800 592 9541 www.vivitar.com



The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Sakar International is under license. Other trademarks and trade names are those of their respective owners.