 
 


Owner's Guide

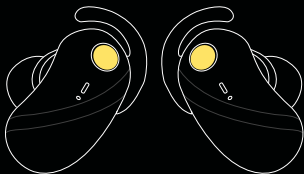

bean **x**

wayl

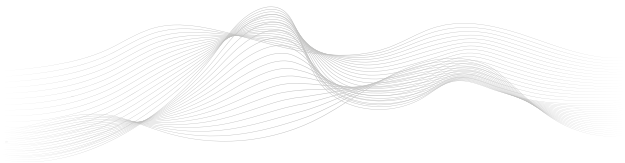



Congratulations on purchasing your Wayl Bean X earbuds!

Bean X is a powerful, long-lasting true wireless Bluetooth 5.0 earbuds with rich HiFi sound and deep bass. The ergonomic design provides comfort and a secure fit to use for all of your activities.

This guide contains instructions for setting up and using your Bean X earbuds. Please refer to the safety instructions for important product safety information prior to use of the product.



**A PDF version of this guide is available at
www.wayl.shop**

Your Bean X earbuds come with a one year warranty.


Must be purchased directly from Wayl, a MyFolio, LLC brand, or Authorized Seller.

table of contents

- 5 what's in the box
- 6 safety instructions
- 8 bluetooth connect
- 11 bluetooth connect - computer
- 12 wear
- 14 controls
- 17 talk
- 18 charging
- 22 portable charging case
- 23 care
- 24 performance
- 26 labels
- 28 specifications
- 30 help

what's in the box

 
5

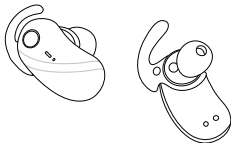

2 Wireless Earbuds (L/R)

2 Silicone Ear Loops (on earbuds)

 2 Silicone Ear Tips (on earbuds)

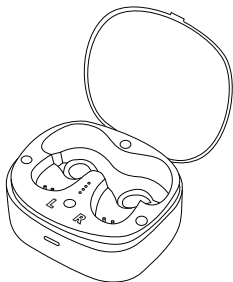

1 Portable Charging Case



1 Owner's Guide



1 Micro USB Charging Cable

Using Your Earbuds



Do not turn the volume up too high or to the max level for prolonged periods of time to avoid ear damage.



Using the earbuds in both ears while driving is not recommended and can affect your driving.



You should use caution or temporarily discontinue use in potentially hazardous situations.

Avoid Damaging Your Bean X

Do not expose your earbuds or the charging case to excessive heat.

Do not drop your earbuds or the charging case; they are not shock-proof.

Do not place your earbuds or the charging case under water; they are not waterproof (they are only sweat proof).

Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives especially on the charging connectors.

Use a soft cloth to clean your earbuds; dampened with a minimum amount of water or diluted mild soap. You can also use a pin-like tool to clean hard to reach places in the earbuds.

Do not open/replace the batteries in your earbuds or charging case.

Operate or store in a place where the temperature is between -15°C (5°F) and 55°C (131°F) (up to 90% relative humidity).

 
Excessive and continuous non-stop charging as well as continued exposure to heat may reduce the battery life of the earbuds and the charging case.

Bean X comes with a 1 year warranty. Visit www.wayl.shop to learn more.

First Time Connection

Note: Your earbuds come partially charged. Charge your case with the (included micro USB cable) with the earbuds inside for 20 minutes then follow the next steps:

Automatic Pairing:

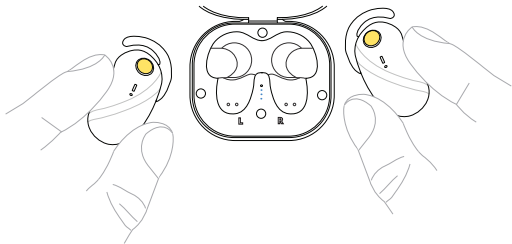

1. Open the charging case and remove both earbuds. They will auto turn-on and announce “power on”. You will see flickering blue lights on both earbuds. If they don’t turn on, charge your case (see page 18)

2. The left and right earbud will auto-pair with each other. The earbuds will announce "Pairing" after 3 seconds with both earbuds being out of the charging case.



3. Ready to pair with your device. After 3 seconds, the left earbuds indicator lights will be flashing red-blue which means it's ready to connect with your Bluetooth device.



Step 4: If you are **connecting to a computer**, please see page 11.

4. Check your device's Bluetooth Settings. Make sure Bluetooth is ON and connect with "Wayl Bean X". Your earbud will announce "Your device is now connected". Only connect to one earbud in settings.



Enjoy! Be sure to be within 20 (clear) meters of your device when playing through the earbuds.

Manual Pairing:

If both earbuds have been out of the charging case (and are off), turn them on by holding down the yellow control button on both earbuds for 3 seconds. You will see a blue light indicator turn on for both earbuds for a few seconds as they auto pair. Follow steps 3 and 4 from Automatic Pairing (previous page) to continue.

Already Connected / New Connection

Once you've paired your earbuds with your device, it should remember it again for future use even if you've turned off your earbuds or your device. If you want to pair with another device, you will need to disconnect your device from "Wayl Bean X" Bluetooth setting before pairing with a new device.

Resetting / Disconnecting All Connections

If you encounter any pairing issues, please reset your earbuds. Turn on both earbuds and then hold down the yellow control button for 12 seconds. They will go through a series of red-blue light blinks and then power off. This will disconnect from all devices and be ready for pairing. Place back in the charging case to ready the earbuds for use again.

Notes: You must be within 20 (clear) meters of your device. Be sure you disconnect from any previous device and if necessary “forget device” to make sure you can make a new connection to a new device.

Computer Settings

When you want to connect to a Mac or PC, please **reset your earbuds** (see page 10). You may need to connect and disconnect a few times in order to address any playback or connection issues. Follow these steps:

1. After you've connected to “Wayl Bean X” on your computer's Bluetooth settings - disconnect immediately and then reconnect to “Wayl Bean X” again to refresh your Bluetooth connection.
2. Check your sound input settings. Go to: **Sound Setting > Input > Internal Microphone**. Make sure to choose “Internal Microphone” (i.e. Built-in Mic) if you see that option. Do not select “Wayl Bean X” as the microphone input if you have a computer microphone or you may experience playback issues including freezing, choppiness and/or the right earbud being turned off. Follow Step 1 if issues reoccur.

If you continue experiencing computer playback issues, please search for a solution based on your computer model or contact us.

Earbuds

Bean X is designed to provide a comfortable and secure ergonomic fit. The design lets you perform activities without worrying about the earbuds feeling loose or falling out. Look at the labeling on the back of the earbud for which ear it goes to and follow these steps:

 
On the back of the earbud: **L** Left **R** Right



1. Fit the silicone ear tip into your ear-hole and push inwards



2. Fit the silicone ear loop into the ringed portion of your ear

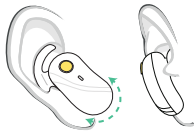


3. Rotate the earbud until it feels snug, secure and pushed against your ear

Optional: You can remove the silicone loop and use the earbuds without it if you are doing more stationary, seated activities.



 The earbuds consist of two separable silicone pieces (ear tip and ear loop) to allow for varying use and ease of cleaning (see page 23). To reassemble, attach the ear loop with its earbud (see the letters on the pieces). The letters on the back of the earbud and the ear loop should line up diagonally around a 25° angle when the earbuds are vertical. The ear tip can go with any earbud.

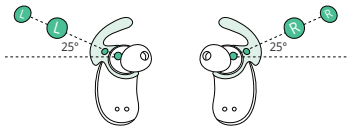

Charging Case Design

The charging case is small enough to fit in a pocket for carrying and can fit inside a vehicle's cup holder for charging with a micro USB cable.

The cover is see-through and tinted so you can check on the charging status of the earbuds and charging case without having to open it.

Earbuds

Press the **a** yellow control button to control the earbud as listed below:



Action	Earbud	Result
<i>Setup</i>		
Long Press (3 seconds)*	Left or Right	Power On / Power Off
Long Press (12 seconds)**	Both	Reset Earbuds
One Click	Left or Right	Cancel Pair Mode
Auto Off	Both	5 Minutes of Inactivity
Auto On	Left or Right	Remove From Case
Auto Pair	Left or Right	Remove Both From Case

* Earbuds will auto turn on when removed from the charging case. You only need to manually turn them on if they are outside of the charging case and are off.

** Earbuds must be on first.

Action	Earbud	Result
<i>Playing Music/Audio (Earbuds must be on)***</i>		
One Click	Left or Right	Play / Pause (Track)
Two Clicks	Left	Skip to Previous (Track)
Two Clicks	Right	Skip to Next (Track)
Three Clicks	Left or Right	Siri or Google Assistant
<i>Talk/Calls (Earbuds must be on)***</i>		
One Click	Left or Right	Answer Incoming Call
Long Press (2 seconds)	Left or Right	Reject Incoming Call
Long Press (2 seconds)	Left or Right	End Current Call

 
*** The volume level is controlled by your device (not the earbuds)

The earbuds volume can only be adjusted by the Bluetooth device it's connected to or through Siri/Google. For example, on an iPhone when you activate Siri you can say "volume up" to increase the volume a level.

For the earbuds indicator lights status, please see page 19.

Charging Case

Press the **(b)** power button to control the charging case as listed below:

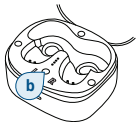

<i>Action</i>	<i>Result</i>
One Click	Turn On the charging case (when it's off)
Two Clicks	Turn Off the charging case (when it's on)
Auto Off	When the earbuds inside are fully charged or there are no earbuds

When the charging case is turned off, it will not charge the earbuds. Only turn off the case if you are trying to conserve its battery life.

For the charging case indicator lights, please see page 20.

Built-In Microphone

Both earbuds have a built-in microphone. You can adjust the volume of your phone (or Bluetooth device) to increase the hearing volume level in your earbuds but you cannot increase the microphone level. The earbuds microphone volume are preset.

Phone Calls


When your earbuds are connected to your phone (or Bluetooth device), use the yellow control button on either earbud to control the call:

<i>Action</i>	<i>Result</i>
One Click	Answer Incoming Call
Long Press (2 seconds)	Reject Incoming Call
Long Press (2 seconds)	End Current Call

Both earbuds function during a call. When the call is done, your earbuds should stay connected to your device. In case they do not, switch back through your device's Bluetooth settings.

Charging The Earbuds

 Place the earbuds firmly into the charging case so that their indicator lights turn on (solid red or blue). Once the earbuds are fully charged their indicator lights will turn blue and auto power off (the charging case will auto power off as well).

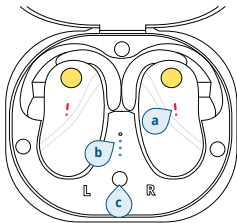

Earbud Indicator Lights Still Off?

Make sure your earbuds and the ear loops are pushed down (↓) firmly in the case and your charging case has power (push the Ⓞ power button). Remove the earbuds and reinsert them into the case as needed.



a) Earbud Indicator Lights (L/R)

! Red Solid = Charging

! Blue Solid = Fully Charged
The earbuds and charging case will auto power off to save battery life once blue.



Red/Blue Blink = Pairing

A red-blue blink means the earbud is in pairing mode and will not be charging. To cancel the pair mode: Turn off the case then back on OR Remove both earbuds from the case then place them back in.

It will take around 1.5 hours to fully charge the earbuds. The earbuds do not necessarily finish charging at exactly the same time. When done, the earbud will have a solid blue light then auto power off.

To see how much battery life an earbud has left, please connect it to your smartphone and check the battery level (top notification bar) or use an app for an android phone to see the battery levels of bluetooth devices or add the Batteries widget on an iPhone.



b) Charging Case Indicator Lights

 
When the charging case is being charged with a micro USB cable and a power source, the current indicator light status will be blinking. Once the charging case is fully charged, it will turn a solid blue (and not blink):

- 4 Blue Solid = 75-100% power
- 2 Blue Solid = 25-50% power
- 3 Blue Solid = 50-75% power
- 1 Blue Solid = 0-25% power
When the charging case nears 0% it will blink
- Blinking = Charging
When the charging case itself is being charged, the current power indicator status will blink. When it's fully charged while plugged in, you will get 4 blue solid lights.

Rotate the case a bit if you have trouble reading which indicator lights are on to get a better angle on the lights glow.

Charge The Charging Case

Charge the case in the **(e)** micro USB port with the **(f)** micro USB cable through a USB port in a vehicle, computer or wall outlet.

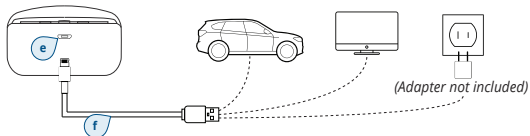

When the charging case is charging, the case will have the current blue indicator status light blinking. Once it is fully charged, you will have four solid blue indicator lights. It takes around 2 hours to fully charge the charging case.

If you unplug the Micro USB cable from the charging case while the earbuds are fully charged, the case will auto shut off. To turn on, press the power button on the case. To turn off, press the power button twice.

Keep the charging case with you when using your earbuds in case you need to recharge them or experience any technical issues with playback or device connections.

In addition to charging your earbuds, you should always place the earbuds back in the case when not in use.

When you want to connect to a new device or reset your earbuds, placing them back into the charging case and then removing them will help refresh the earbuds so they are ready for a new connection. You can also turn off the charging case then turn it back on with the earbuds inside to help clear any technical issues.

 
Quick Fix

If you experience any issues, try placing your earbuds back into the case until you see the earbuds light indicators turn red and then remove them from the case again or try resetting your earbuds (see page 10).

Cleaning Your Earbuds

Separate your **a** ear tips and **b** ear loops from your earbuds for faster and better cleaning. You can safely clean the silicone ear tips and ear loops with water and (dish) soap; be sure to dry them before placing them back on the earbuds. For the earbud itself, **DO NOT** put water on the earbuds charging contacts or mesh; lightly use a compressed air duster to clean it or gently wipe the earbuds with a soft cloth or pin-like tool for the mesh area - **DO NOT** apply much pressure to avoid damage.

- ✓ OK to clean with water & (dish) soap
- ✗ Do not wet the **c** earbud mesh or the **d** earbud charging contacts or **e** case charging contacts

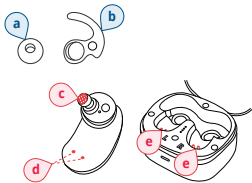

Cleaning Your Charging Case

Use a dampened wash cloth to wipe inside and outside the case but **DO NOT** touch the case charging contacts with a wet cloth. You can also use a compressed air duster to clean the inside.

Bean X delivers a long-lasting, rich high-quality HiFi sound with deep bass. The higher the volume the better the sound performance. It's recommended to play the volume level between 60-80%. Do not play at a max volume in order to avoid ear damage. Each earbud has its own large capacity 70mAh li-ion rechargeable battery. The charging case has a large capacity 800mAh Li-ion rechargeable battery.

Earbuds

Playtime: 6-8 hours

The earbuds can last (play audio) for up to 8 hours on a single charge at 70-100% volume. The audio and volume level being played determines how long the earbuds can last. For example, the earbuds will last longer playing an audiobook compared with playing music with heavy bass.

Charging Time: 1.5 hours

It takes around 1.5 hours to charge an earbud from no power to full. In general, 10 minutes of charging can give you around 40 minutes of audio playtime. You can recharge charged earbuds an additional 3 times - giving you a total of up to 32 hours playtime before having to charge the case itself.

Standby Time: Several Months

When your earbuds are powered off, they can maintain some power for up to 2 months or longer. As long as they are off they will reserve power for an extended period of time. The earbuds will auto power off after 5 minutes of inactivity.

 
Charging Case

Charging Time: 2 hours

The charging case can be fully charged in 2 hours. The source of charging (vehicle, computer or wall outlet) will have an impact on how fast the case can be charged. The higher the voltage the faster it can be charged. A wall outlet, for example, will provide the most voltage while a computer will provide the least.

Standby Time: Several Months


When your case is powered off, it can maintain some power for up to 2 months or longer. As long as the case is off it will reserve power for an extended period of time.

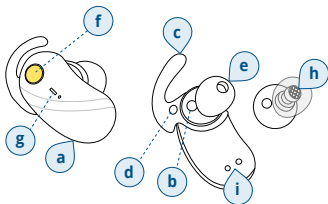

Wireless Earbuds

70mAh Li-ion Battery (each)

 - (a) Earbud Body
- (b) Earbud Ear Position (L or R)
- (c) Silicone Ear Loop (Removable)
- (d) Silicone Ear Loop Ear Position (L or R)
- (e) Silicone Ear Tip (Removable)
- (f) Yellow Power Control Button
- (g) Power Indicator Lights
- (h) Earbud Mesh
- (i) Charge Contacts (For Charging Case)

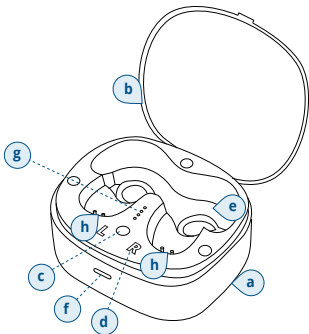

Portable Charging Case

800mAh Li-ion Battery

- (a) Case Body
- (b) Case Lid
- (c) Power Button
- (d) Earbud Position (L or R)
- (e) Earbud Placement
- (f) Micro USB Charge Port
- (g) Power Indicator Lights
- (h) Charge Contacts (For Earbuds)

specifications

BT Version / Working Distance	Version 5.0 / 20 Meters
Driver type / Frequency Response / Impedance	Dynamic 10mm -20 kHz / 32Ω
Earbud Playtime	Up to 8 Hours Per Charge
Charging Case Earbud Recharges	3 times - 32 Hours Total Playtime
Earbuds Battery Type	Lithium-Ion Polymer (3.7V, 70mAh Each)
Charging Case Battery Type	Lithium-Ion Polymer (3.7V, 800mAh)
Charging Time for Earbuds / Case	1.5 Hours / 2 Hours
Standby Time	Several Months (Earbuds/Case Each)
Earbud Master	Left Earbud
Color	Black Matte (Yellow Button)
Earbuds / Charge Case Weight	15g / 66g
Earbuds / Charging Case Size	18 x 33 x 33mm / 67 x 57 x 40mm (WxHxD)
Water Resistance	IPX-3 (Sweatproof)
Certifications	FCC , CE, RoHS

FCC IC Warning Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Wayl has an extensive knowledge base online to help you troubleshoot any of your Bean X issues. You can reach us online or by email at:



www.wayl.shop



sales@wayl.shop

Quick answers to common issues:

I'm having pairing issues.

If you're pairing your earbuds with each other, connecting to your Bluetooth device or are stuck in pair mode (flashing red/blue light indicators), then resetting the earbuds will fix the issue. Turn off your earbuds (hold down the yellow control buttons on both earbuds for 3 seconds), the indicator lights will turn red and then off. While they are off, hold down the yellow control buttons for 12 seconds (they will turn on with a series of lights and blinks) and then the earbuds will turn off again. Place the earbuds back into the charging case and follow Bluetooth Pairing (see page 8) section to pair your earbuds.

I can't get my earbuds to fit in my ears.

The earbuds come with a small ear tip and a small ear loop that fit most ears. In case you can't get a good fit, try to rotate the earbud while the

loop is in your ear (see page 12, Step 3). If you still can't get a good fit, it could be that the earbuds are still too large for your ears. Please contact us for further assistance.

One earbud does not work when receiving or making a call.

Both earbuds should work during a call. If only one earbud is working during or after receiving a call then the other earbud would have to be re-paired with the working earbud. Sometimes a Bluetooth device may interfere with the earbud pair and disconnect one. Place both earbuds back in the charging case for a few seconds and then remove them.

An earbud indicator light is blinking red-blue while in the case.

Remove both earbuds from the case and press the yellow control button on the blinking earbud. Place both earbuds back in the case. The pairing mode will be canceled and you will have a solid indicator light. You can also turn off the case then back on to refresh the earbuds.

My earbuds are freezing or choppy while connected to and playing from my computer.

Be sure to disconnect and reconnect to "Wayl Bean X" to refresh your connection. Then check your sound settings on your computer and make sure to set your Input to "Internal Microphone" (and not to Wayl Bean X). See page 11 for more assistance or contact us.

Can I use just one earbud?

You can use just the left or right earbud. Remove the earbud you want to use and pair it with your device. If you've already connected to your device, you will see "Wayl Bean X" in your Bluetooth settings. If you see a new "Wayl Bean X" ready to connect, this would be the other earbud not yet paired. You will see that earbud that is out of the case flashing red-blue lights which means it's ready to connect to your device. Once you connect to your device you can play audio in just that earbud. The other earbud should remain in the charging case.

I can't connect to a new/other devices.

Please check that you have disconnected from the previously used device and all devices. You can only connect to one device at a time. If you are unsure about your connection status, you can always reset your earbuds connection (see page 10).

The earbuds are not fully fitting in the charging case.

Remove the earbud from the charging case and check the back of the silicone loop on the earbud(s) to make sure it's angled correctly (see page 13) and is also correctly placed on the earbuds. Adjust accordingly and place back in the charging case. Repeat above until it fits back in the case (you will see solid red indicator lights on the earbud). If you don't see any lights make sure the charging case is charged.

The right earbud is not turning on.

If the right earbud is not on (but the left one is) and you can only hear audio in the left earbud, it can be due to several issues.

a) check to see if the battery is dead. Place the right earbud back into the charging case along with the left earbud and wait 10 minutes. Remove both earbuds from the case. It should auto pair with the left earbud (if you see red-blue flashing on the right earbud, press the yellow control button).

b) try to re-pair the earbuds with each other. Place both earbuds back into the charging case. Power off the charging case then power it back on. Wait a few seconds then remove both earbuds from the charging case. They should pair with each other within 20 seconds.

c) If needed, try to reset both earbuds (see page 10).

How do I know how much power is left in my earbuds?

Connect to your smartphone and check the battery status of the earbud (top status bar or battery widget for an iPhone, a Bluetooth battery monitoring app for android).

bean x