Prime Audio®

Wireless Earbuds with Mic User Manual

PACKAGE WITH:

PAEB1012-BLK, PAEB1012-BLU, PAEB1012-RED, PAEB1012-SLV


DATE:

04/11/2019

DESIGNER:

Joe Wagner jwagner@iworldnyc.com

COLORS:

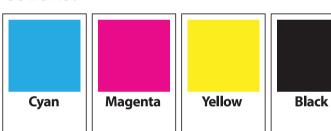



NOTES:

Artwork is 100% Scale Dashed Line Indicates Fold

Instruction Manual, 1 Sheet Folded **Printed Both Sides**

OUTSIDE PRINT



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is

CAUTION: Any changes or modifications to this device not explicitly approved by manufac could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmfu interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

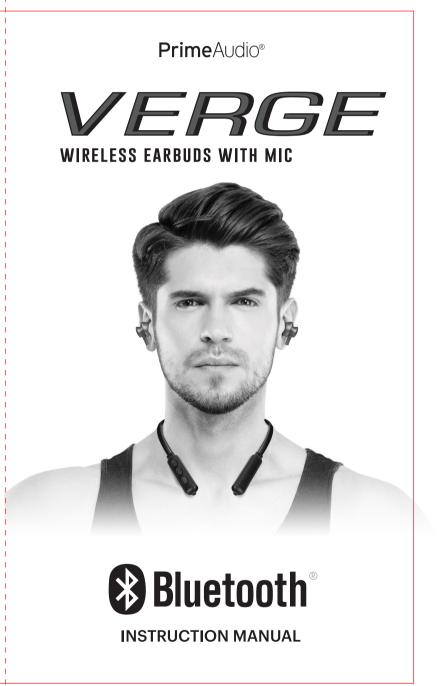

BACK COVER

FRONT COVER

INSIDE PRINT



INSTRUCTION MANUAL

Bluetooth® Wireless Earbuds

• 1 USB Charging Cable • 1 User Manual • Wireless Capability: Up to 33 ft range

CHARGING THE BATTERY

CHARGING THE BATTERY

The internal battery must be fully charged before first use of the wireless earbuds. To charge, use the included USB charge cable:

1. Insert the smaller micro-USB end of the cable into the CHARGE INPUT on the earbud unit.

2. Insert the larger USB end of the cable into the USB port of a computer OR into a compatible USB DC 3.7V wall charger (not included) to charge through a standard wall outlet. The indicator lights up red during charging and will turn blue when charging is complete.

Unplug from the power source when charging is complete.

NOTE: When battery power is low the LED may blink red and/or there may be an alerting sound, even while music is playing. Fully charge the battery as advised above to resume.

sound, even while music is playing. Fully charge the battery as advised above to resum

WIRELESS EARBUDS OPERATION

Wireless EarBuds OPERATION
Wireless playback Via Bluetooth*:

1. Make sure the battery is charged as explained above.

2. On the controller, press and hold the POWER/PLAY BUTTON until the indicator light flashes blue and red - this means the Bluetooth function is active and ready to connect to your smartphone/Bluetooth audio device.

NOTE: If you do not connect the earbuds with a Bluetooth device after 5 minutes of being turned on, the earbuds will turn off automatically. Restart this step to try to connect again.

3. Activate Bluetooth function on your audio device – it should automatically recognize the earbuds unit and allow you to select it using the name "iWorld". If required, enter the password "0000" to complete the wireless connection. When the earbuds are connected, the indicator light on the controller will flash blue and you are now set to enjoy wireless audio from within a 33ft range of the audio device.

4. Before playback, first adjust the volume of your audio device to medium level as a safe starting point.

5. To play audio, click the POWER/PLAY BUTTON once.

6. To pause audio, click the POWER/PLAY BUTTON once.

7. To increase the volume, press and hold +. To decrease the volume, press and hold -. The earbuds make a chime sound when they reach maximum volume. You may then adjust the

To increase the volume, press and hold +. To decrease the volume, press and hold -. The earbuds make a chime sound when they reach maximum volume. You may then adjust the volume on your audio device to make it even louder or softer as you please.
 To go to the next song, click + once. To go to the previous song, click - once.
 To answer an incoming call, click the POWER/PLAY BUTTON once.
 To hang up a phone call, click the POWER/PLAY BUTTON once.
 To disconnect and shut off the earbuds unit, press and hold the POWER/PLAY BUTTON until the indicator light goes out.
 NOTE: Low earbuds power and/or low audio device power may cause poor operation and/or no Blustooth connection.

iWorld LLC

KT I to fix the product yourself. If you are experiencing any problems with the product please do not you bought it from. You can contact our technical support representatives and they will assist you ou may have. For assistance operating your product, please consult the User's Manual or feel free

email: support@iworldnyc.com
Please keep instructions for further reference. New York, NY 10018, USA

FRONT INSIDE

BACK INSIDE

215.6 mm