

Operating Instruction

- 1 Press the Transmitter "🔔" key
- 2 The receiver rings and presses the "📞" key to enter the call status.
- 3 When the call is over, please press the "📞" button.
- 4 Return the receiver to the charging stand after use.

For the convenience of our customers, we set the doorbell ahead of time so it can be used out of the box. (Note that if you purchase multiple doorbells at the same time and want them to be used together, you will need to pair the doorbells.)

Doorbell Installation Method

Method 1: use double-sided tape



Method 2: use screws and wall plugs



Receiver Function Introduction



 
- 🔌 Long press "🔌" for 3 seconds to hear the 'POWER ON' voice prompt, which means the power on. Long press "🔌" for 5 seconds to hear the 'POWER OFF' voice prompt, which means the power off.
- 🔊 VOL- Volume down button (when ringing, press "🔊 VOL-" key to reduce the ringing tone volume; when making a call, press "🔊 VOL-" key to reduce the call volume)
- 🔊 VOL+ Volume up button (when ringing, press "🔊 VOL+" key to increase the ringing tone volume; when making a call, press "🔊 VOL+" key to increase the call volume)
- 📞 When the chime rings, press "📞" key to start a call.
- 📞 In the call status, press "📞" key to exit the call. In standby mode, long press "📞" key for 5 seconds to change the chime (4 chimes in all).

Transmitter Function Introduction



Press " " key to enter the doorbell call. The blue light steady on. Hearing the beep indicates that the call is successful.

Power Voice Prompt



- ① When fully charged, the transmitter can be used for 4 months.
- ② When fully charged, the receiver can be used for a week.

(The above description shows that the battery life is a time of regular use frequency and the specific battery life depends on how often you use it.)

We recommend that you put the receiver into the charging stand and charge it with the power cord after each use.

Power Voice Prompt:

Receiver low power: When the battery is low, the receiver will issue a low-power 'INSIDE BATTERY LOW' voice prompt.

Transmitter low power: When the battery is low, the receiver will issue a low-power 'OUTDOOR BATTERY LOW' voice prompt.

Paired Doorbell Operation Method

Step 1:



Step 1: Long press the receiver "VOL-" key and "VOL+" key at the same time and waits for 5 seconds until it receives 'SEARCHING' voice prompts to enter pairing mode.

Step 2:



Step 2: Long press the transmitter " " key until you hear the transmitter 'SUCCESSFUL' voice prompt, which means the pairing is successful.

LED Indicator

Transmitter LED Indicator:

The LED indicator light is red when charging and the red light is off when fully charged.

LED indicator blue indicator is always on during the call.

Receiver LED Indicator:

The LED indicator light is red when charging and the red light is off when fully charged.

When the receiver is in the standby state, the LED indicator will light up blue every five seconds.

Two way communication! ✓ Adjustable 4 chimes ✓

Adjustable 1 to 8 volume ✓ Extensible for more doorbell ✓

FCC Warning Statement Content

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment