


Instruction manual (M12)

Important Safety Instructions:

1. Read these instructions thoroughly and retain for future reference.
2. Follow all instructions.
3. Do not expose this speaker to water, corrosive liquids or gases. Store the speaker in a clean, dry place.
4. Do not use the speaker near windows, or near heat sources like radiators, gas stoves or other apparatus that produce heat.
5. Do not place any naked flame sources such as lit candles on or near the speaker.
6. Clean only with a soft, dry cloth.
7. Do not expose the speaker to rain or moisture.
8. Do not cover the speaker during use.
9. No user-serviceable parts inside. Do not open.
10. This product is not a toy! Keep away from children.

Over view

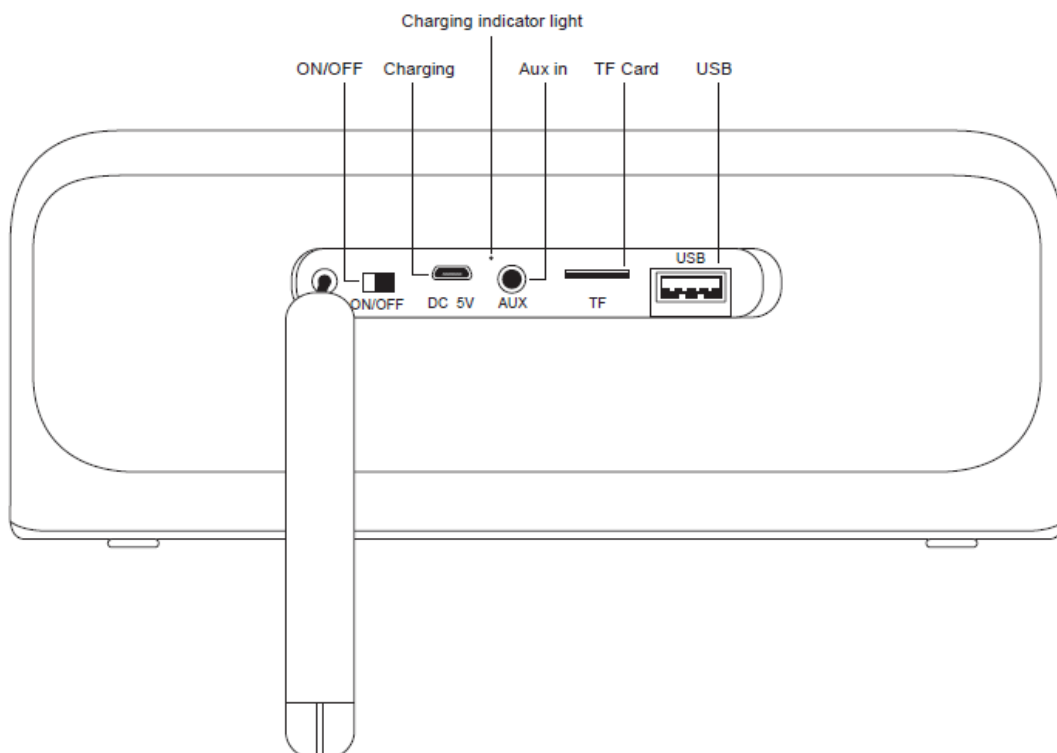

Power on/off

- Switch the “ON/OFF” button to power on/off the unit.
- Power on default brightest state, long press the “play/pause” button to switch three states

Wireless charging

With the speaker turned on, press and hold the “M” button, it will show the red & blue lights flashing together.

Then red & blue flashing lights change to solid blue LED light, put your device (which with wireless charging function) on it to charge.

Press and hold the “M” button again to power off wireless charging function.

Note: Please power off wireless charging function when you are using FM radio

Bluetooth Pairing

- With the speaker turned on, it comes to clock mode with time displayed on LED area. Press “M” button, the Bluetooth symbol is flashing (this means that the Bluetooth mode has been activated). Open the Bluetooth® settings on your phone, tablet or other Bluetooth enabled audio device, make sure Bluetooth is on and search for “M12”. Once found, click on it. You may be required to enter a password. If so, please enter **0000**.
- Once paired, the Bluetooth symbol will stop flashing.

Playing Music

- Select desired song or playlist on your phone, tablet or other Bluetooth enabled audio device.
- Press “play/pause” button (rotation control button) to start or pause the music.
- Press the “Pre” button or “Next” button to go to previous or next song.
- Revolve the “Volume +/-” button (rotation control button) to adjust the volume.

Hands-free for calling

- Pick up or hang up a call by pressing the rotation control Button.
- Press and hold the rotation control Button to reject when a new call comes in.
- Press the rotation control Button twice to redial the last phone call.

Using the AUX / TF card / USB drive Inputs

- Insert a TF card / USB drive directly into the unit to play music from the TF card / USB drive via the speaker.
- Playable Format: MP3. Max size of TF card / USB drive that can be connected: 32GB

FM Radio Mode

- Press M button to enter FM Radio Mode. (The device have built-in antenna. You also can plug in Micro USB Cable to extend the antenna.)
- Press play/pause button (rotation control button), the radio will search channels automatically. Channels will be stored after auto search ends.
- Press “Pre” button or “Next” button to go to previous or next channel.

Note: Please power off wireless charging function when you are using FM radio

Clock

- Press **“Time mode”** button to enter Clock Mode, the hour digital will flash, press the **“Next song / Time setting”** or **“Pre song/ Time setting”** button to adjust the hour, Press the **“Time mode”** again for setting the minutes. After all setting, press the **“Time mode”** button to confirm.

Alarm clock 1

- Press **“Alarm Clock1”** button to enter the alarm clock 1 setting. The hour digital will flash, press the **“Next”** or **“Pre”** button to adjust the hour. Press the **“Alarm Clock 1”** button again for setting the minutes. After all setting, press the **“Alarm Clock 1”** button to confirm time, and you will enter the 5 options for the alarm rings, press the **“Next”** or **“Pre”** button to select the ring you like, then press the **“Alarm Clock 1”** button to confirm.
(FM radio can be selected as alarm sound)
- When the alarm clock rings, press the **“SNOOZE”** button to snooze it, press any other buttons on the top to stop the ring.
- Press and hold **“Alarm Clock1”** button to cancel this Alarm clock.

Alarm clock 2

- Press **“Alarm Clock 2”** button to enter the alarm clock 2 setting. The hour digital will flash, press the **“Next”** or **“Pre”** button to adjust the hour. Press the **“Alarm Clock 2”** button again for setting the minutes. After all setting, press the **“Alarm Clock 2”** button to confirm time, and you will enter the 5 options for the alarm rings, press the **“Next”** or **“Pre”** button to select the ring you like, then press the **“Alarm Clock 2”** button to confirm.
(FM radio can be selected as alarm sound)
- When the alarm clock rings, press the **“SNOOZE”** button to snooze it, press any other buttons on the top to stop the ring.
- Press and hold **“Alarm Clock 2”** button to cancel this Alarm clock.

LED Indicator	Status of the speaker
Solid blue LED light on	Wireless charging function has been activated
Red LED light flashing	Other metals detected

Specifications	
Bluetooth protocol	V5.0
Online distance of Bluetooth	10m (Approximate)
Input	5V/2A
Speaker output	2x5W
Wireless output	5W
Dimensions	210*125*85mm

Package Contents:

- 1x Bluetooth speaker
- 1x Micro USB charging cable
- 1x 3.5mm Aux cable
- 1x Instruction Manual

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

*RF warning for Mobile device:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.