

SOG-4/1987 WIRELESS SUNGLASSES

SMART BLUETOOTH SPORT SUNGLASSES



INSTRUCTION MANUAL

PLEASE READ ALL INSTRUCTIONS CAREFULLY

AND RETAIN FOR FUTURE USE

1

Getting started

- · Remove the product from the box.
- Please retain all packaging after you have checked and counted all the parts and the contents against the list.

Package Contents

- · Smart Bluetooth Sport Sunglasses
- · Storage case
- · USB charging cable
- · Cleaning cloth
- Instruction Manual


Key Features

- · Smart Bluetooth Sport Sunglasses
- · Optimized for Siri and Google Assistant
- · Great for outdoor activities
- Plastic frame with UV lens
- · Great for listening to music and taking handsfree calls while on the go
- . Built-in rechargeable battery 140mAh provides extended play time of up to 4 hours
- · Cleaning cloth, charging cable & storage case included
- FDA approved

Safety Instructions

- . Keep the unit away from heat sources, humidity, water and any other liquids.
- Do not operate the unit if it has been exposed to water, moisture or any other liquids to
 prevent against electric shock, explosion and/or injury to yourself and damage to the
 unit.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician.
 Improper repairs may place the user at serious risk.
- · Do not use the unit with wet hands.
- Do not put objects into any of the openings.
- Keep the unit free from dust, lint etc.
- Do not use this unit for anything other than its intended use.
- · Keep the unit out of reach of children.
- This product is not a toy.
- Do not use the unit at excessive volume levels, as damage to hearing may occur.

Description of Parts:

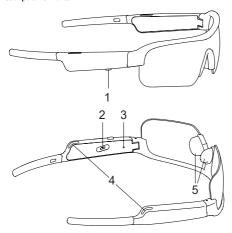

1	MF Button
2	Magnetic Charging Contact
3	LED Indicator / Built-in mic
4	Stereo Speakers
5	Nose Pads

INSTRUCTIONS FOR USE

Charging Instructions

- The Bluetooth Sport Sunglasses comes with a built-in rechargeable battery. Before using
 it for the first time, it is recommended that Sunglasses are charged fully. Only use the
 supplied USB charging cable to charge it.
- Connect the USB charging cable to a computer USB port or other suitable charging source and the other end to the Magnetic charging contact of the Sunglasses. Blue LED indicator turns on while the Sunglasses are charging. It takes 1-2 hours for the Sunglasses to fully charge. When the battery is fully charged, the blue LED indicator will turn off.

Turning ON/OFF the Bluetooth Sport Sunglasses -

Before Turning ON the Sunglasses, please ensure that they are fully charged.

Press and hold the MF button for 6-7 seconds to turn on the Sunglasses. And 5-6 seconds to turn it off.

Pairing the Sunglasses with Bluetooth devices (phone or music device)

- Ensure the Sunglasses are turned off, and then press and hold the MF button for 6-7 seconds to turn on. You would hear an indication tone, and LED would flash blue quickly.
 Place the Sunglasses and Bluetooth device (phone or music device etc) so that they are no further than 3 feet apart;
- Activate the Bluetooth function on your Bluetooth device (phone or music device etc).
 Please refer to the manufacturer's instructions for instructions on enabling Bluetooth on your device.
- Once you have activated Bluetooth on your Bluetooth device, select "Sports Sunglasses" from the list of available Bluetooth devices.
- If required, enter the password '0000' to confirm & finalize pairing.
- Once paired successful, another indication tone will be heard and the blue LED will turn
 off.
- You can now start using the sunglasses.
- If pairing is unsuccessful, turn off the device first and then re-pair following the above steps.
- Once you have paired the sunglasses with a device, it will remember this device and will
 pair automatically when the device's Bluetooth is activated and in range. You do not
 need to re-pair any previously connected devices.
- The Bluetooth Sport Sunglasses will attempt to automatically connect to the last device it was paired with when switched on. If you want to pair it with a new device, please follow the steps outlined above.
- Once the Bluetooth Sport Sunglasses is paired with your device the music will transmit through the Bluetooth Sport Sunglasses. Please refer to your device's user manual for further information.

Function Summary Listening to Music

Once the sunglasses are paired with your device you can stream music wirelessly through the Bluetooth Sport Sunglasses. Should you encounter any problems while streaming, please refer your device's user manual for further information.

Control Function

Function	Operation	Button
Pause	Playing music	A short press on the MF button will pause the music
Play	Pausing	A short press on the MF button will restart the music
Volume increase	Playing music	Press and hold the MF button for 2 seconds, you would hear a beep sound and then release

Previous track	Playing music	Short press the MF button thrice will return you to the previous track
Next track Playing music		Short press the MF button twice will take you to
		the next track

Note: For volume decrease, you need to control through your device.

Making a call with the Bluetooth Sport Sunglasses in Bluetooth mode Basic operation

Function	Operation	Button
Answer a call	Incoming Call	Short press the MF button twice to
		answer an incoming call
Reject call	Incoming Call	Long press the MF button 2 seconds
		and release
End a call	Incoming Call	After your phone conversation,
		short press the MF button twice.

Note: For volume increase/decrease, you need to control through your device.

Voice Assistant Operation

Voice Assistant is a built-in interactive feature that allows you to Start Conversation with Your Siri or Google Assistant, with press and hold a button on your device for 4 seconds, you would hear the second beep sound and then release.

This feature enables you to ask questions and seek assistance on a number of things from your Voice Assistant, even when you're several feet away from your phone. Below are some of the many examples listed below.

Note: Google Assistant is available on eligible Android 5.0 devices or later. Works on Lollipop, Marshmallow and Nougat Android Phones with Google Play Services, >1.5GB of memory and 720P or higher screen resolution. Please ensure Google Assistant App is downloaded and made as default Voice Assistant on your mobile device.

While the Sunglasses is paired using Bluetooth, press and hold the MF button for 4 seconds, you would hear the second beep sound and then release to start conversation with your Siri or Google Assistant. An indication tone would be heard before you speak into the sunglasses.

- Example 1: Press and hold the MF button for 4 seconds, you would hear the second beep sound and then release to speak into the sunglasses, how's the weather today?
 Voice Assistant will reply with something like: mainly cloudy with a few showers.
- Example 2: Press and hold the MF button for 4 seconds, you would hear the second beep sound and then release to speak into the sunglasses, what's the time now?
 Voice Assistant will reply with something like: it is 8pm now.
- More examples:

Set an alarm for 7am tomorrow. Play some music.

What's in the news?

Do's and Don'ts

Do not use outdoors in wet or in damp surroundings.

Troubleshooting

Symptom	Solution		
No Sound	Power On the sunglasses		
	Charge the battery		
	Increase the volume on your mobile device and		
	music source		
	 Move your mobile device closer to the 		
	sunglasses and away from any interference or		
	obstructions		
	User a different music source		
	Connect another mobile device		
Poor Sound Quality	User a different music source		
	Connect another mobile device		
	 Move your mobile device closer to the 		
	sunglasses and away from any interference or		
	obstructions		
Battery Won't Charge	Secure the ends of the USB charging cable		
Your Google Assistant not	This is only available for Android Mobile		
responding	Devices		
	Make sure Google Assistant is downloaded on		
	your mobile device and set to default voice		
	assistant		
	 Make sure your Android Mobile Device is 		
	Bluetooth paired with sunglasses		
	Make sure you are in a country where Google		
	Assistant is available		
	 For additional support, visit 		
	www.support.google.com/assistant		
Loud Dial Tone Noise When	Make sure you have latest version of Google		
Activating Google Assistant	Assistant App		
	On your Android mobile device, go to Settings >		
	Apps > Google App > Disable. After that, tap		
	Enable (If you have uninstalled Google App,		
	please uninstall and reinstall the App).		

Care and Maintenance

Read the following recommendations before using the device. Following these you will be able to enjoy the product for many years.

- Do not expose the device to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- · Don't use abrasive cleaning solvents to clean the device.
- Do not expose the device to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Don't dispose of the device in a fire as it will result in an explosion.
- Don't expose the device to contact with sharp objects as this will cause scratches and damage.
- Don't let the device fall on the floor. The internal circuit might get damaged.
- Don't attempt to disassemble the device as it may get damaged if you are not professional.

Specifications

Bluetooth version	5.0
Operation distance	27-33 feet
Working time	Up to 4 hours (moderate volume)
Charging input voltage	DC 5V
Charging time	1-2 hours
Speaker power	1Wx2
Built-In Battery	140mAh

FCC Instructions

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must

accept any interference received, including interference that may cause undesired operation.

LIMITED WARRANTY

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty doesn't cover the following which may be supplied with this product, including but not limited to; LCD Screens, glass parts, lenses, bulbs etc. This warranty is effective only if the product is purchased and operated in USA and Canada, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

WARRANTY PERFORMANCE: During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR: If service is required for this product, you should first contact Midwest Trading Group Customer Service at info@mtradinggroup.com or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

NOTE: Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.