 


BL-49 PROJECTOR

USER MANUAL

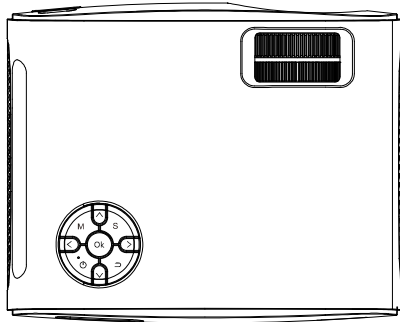

BEYOND ELEGANCE

Notice

1. Not recommended for PPT, Excel, Word presentations.
2. Change your PC/laptop screen resolution to 1920*1080 for the best clarity.
3. Please note that it is suitable for use only in a totally dark environment.
4. Dolby Audio is NOT supported.

(English) CONTENTS

| | |
|--------------------------------|----|
| NOTICE | 02 |
| ACCESSORY LIST | 03 |
| SAFETY PRECAUTIONS | 04 |
| REMOTE CONTROL | 05 |
| PROJECTOR OVERVIEW | 06 |
| OPTICAL ADJUSTMENTS | 11 |
| CONNECTIONS | 12 |
| MENU SETTINGS | 18 |
| SCREEN MIRRORING | 20 |
| PROJECTOR INSTALLATION | 27 |
| TECHNICAL SPECIFICATIONS | 28 |

 
Accessory list

- 1 x AV Signal Cable
- 1 x Remote Control (battery not included)
- 1 x HDMI Cable
- 1 x Power Cable
- 1 x User Manual
- 1 x Warranty Card
- 1 x Operation Guide
- 1 x Adjustable Screw


Safety Precautions

1. Please read the user manual carefully before using the projector.
2. Only use the power cord supplied with this product with an electrical socket that is earthed properly.
3. Please use the same power voltage as marked on the projector.
4. Please do not disassemble the projector by yourself, otherwise it will void your warranty.
5. Please do not look into the lens directly while the projector is turned on, it may cause damage to your eyes.
6. DO NOT block the air vents during the use.
7. Please keep the projector away from water or any other liquid as it is not waterproof.
8. Please do not put the projector in wet or moist conditions to prevent electric shock.
9. Please switch off and unplug the appliance when it is not in use for a long time.
10. Please use the original packaging foam or other anti-shock material when relocating the projector.
11. Please contact the TENKER customer support team if you encounter any problem with the projector.
12. This mini projector is covered by the TENKER 36-month warranty.
13. Please contact us if you want to know more about the warranty. (The user manual, and packaging are not covered by the warranty)

PROJECTOR OVERVIEW

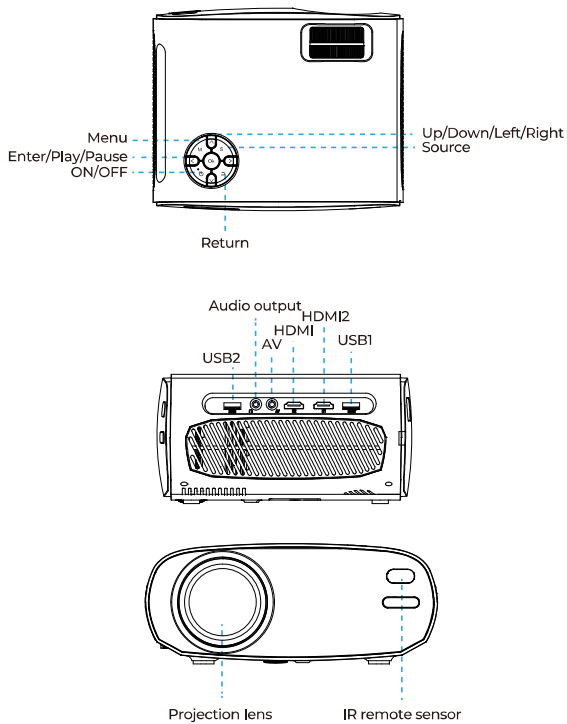

REMOTE CONTROL

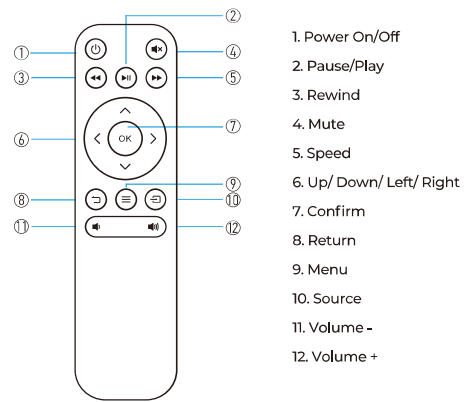 


Caution


1. Do not submerge the remote control in water.
2. Do not expose the remote control to the outdoors, liquid, moisture, excessive heat, or fire.
3. Do not use old and new batteries together in the remote control.
4. Please take the batteries out if not using the remote control for a long time to avoid battery leakage.
5. The remote control must be held perpendicular to the projector's IR remote sensor to function correctly.

1. Connecting the projector to power

 - a. Plug the power cord to the projector.

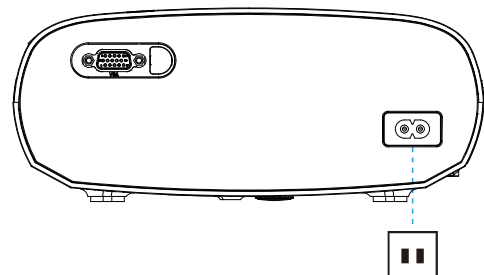


 - b. The power indicator on the projector lights up after the power cord has been connected.

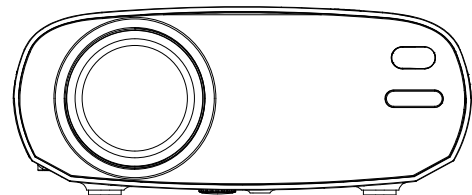


2. Power ON/OFF

 Press the "ON/OFF" button on the projector or on the remote control to power on.

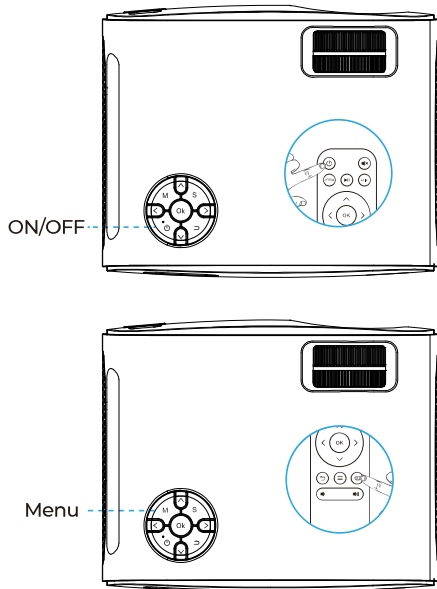

- 08 -

 
b. Make sure the projector is horizontal to the projector screen and rotate the focus ring to sharpen the projected image.

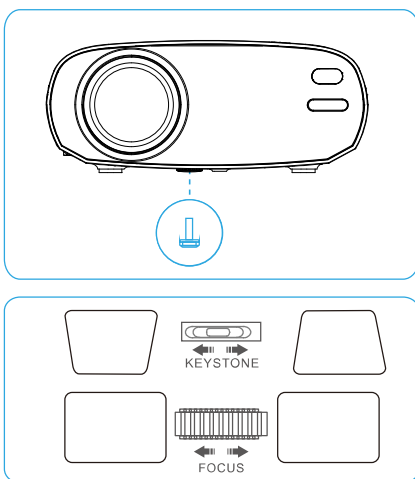

- 10 -

3. Multimedia boot screen

 The multimedia screen will be displayed in 10-20 seconds after you press the power button.

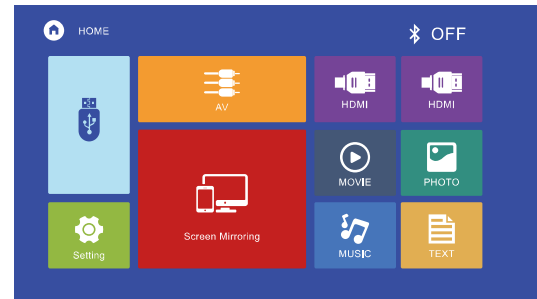


4. Focus & keystone correction

a. If the image is displayed as a trapezoid shape, turn the keystone correction knob on the upper surface of the projector until the projected image becomes rectangular to correct the keystone issue.

- 09 -

Optical adjustments

 The projector corrects the image deformation by the optical keystone correction. See the example below:

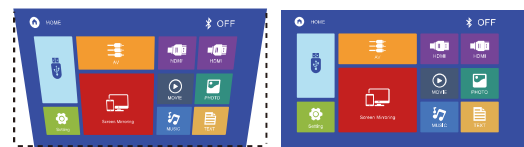


However, this projector does not have a horizontal keystone correction function. The projector must be placed horizontally to the projection screen. If you encounter the problem as shown above, it is probably because the projector has not been placed horizontally to the projection screen, or the projection screen is not vertically positioned.

Solution: Adjust the projector's position so that it is horizontal to the projector screen

- 11 -

 
Connections

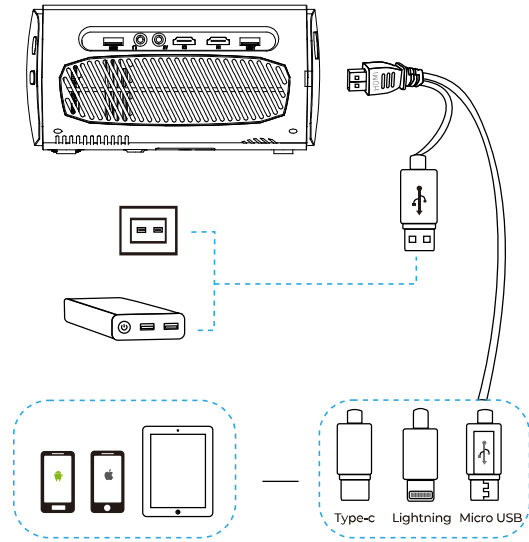


Supported multimedia file formats and types

| | | |
|------------|--------------|---|
| Multimedia | Audio file | MP3/WMA/OGG/AAC/MA4/FLAC/APE/WAV |
| | Picture file | JPEG/BMP/PNG |
| | Video file | MPEG1, MPEG2, FLV, MPEG4, RM, AVI /RMVB, MOV, MKV, DIVX, FVOB M-JPEG (only unsupported 640*480) |
| | Text file | TXT |

 - c. Choose the content you need to display:
Video/ music/ photo/ text.

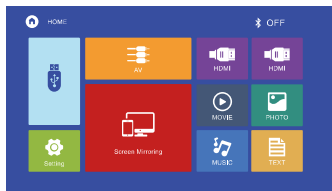


 - d. Choose the file you want to play. Press the * ► * key to play or to pause.

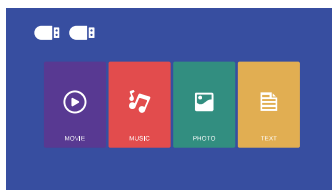


1. Playing media files from a USB Drive

 - a. Insert a USB storage device into a USB port.

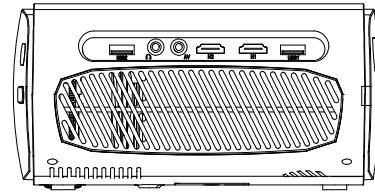


 - b. Pick USB at the Signal Sources menu.

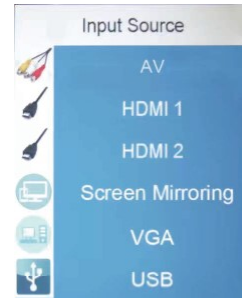


2. AV video connection

 Use a 3-in-1 AV cable to connect to the projector as shown below. Once connected, pick AV at the Signal Sources menu.

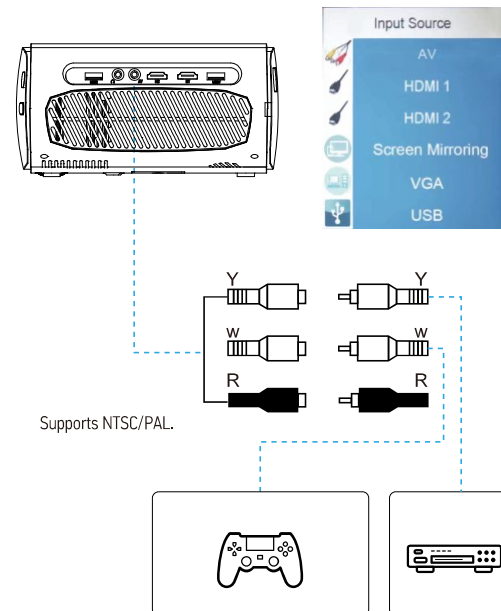

3. HDMI connection

 Use the HDMI slot to connect computers and HDMI compatible devices. Once connected, pick HDMI1 at the Signal Sources menu.

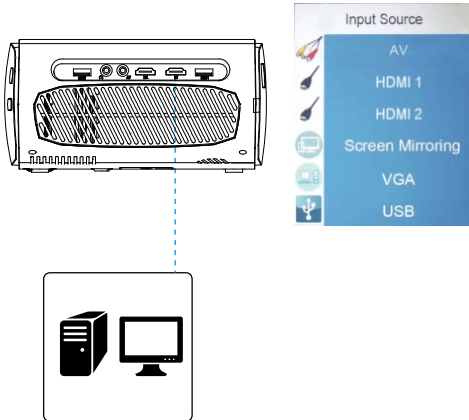

Supported resolutions:
576P, 480P, 720P, 1080P, 640x480, 800x600, 1024x768, 1280x1024, 1280x720, 1440x900, 1366x768, 1920x1080, 1280x800, 1440x960, 680x1050

Menu settings

 
 
1. Remote control user guide

Press the "≡" key to enter the main menu, then press the "◀/▶" key to enter each sub-menu.
Press the "▼/▲" key to select the sub-menu, then adjust the parameters as required, and press the "OK" key to confirm.

2. Using the Sub-menu

The Sub-menu picture provided below is for reference only, and may differ from the actual design.


a. Available adjustments: Picture Mode/Color Temperature/Aspect Ratio/Noise Reduction/Screen/Projection Direct/HDMI Mode/Reduce Display

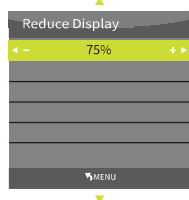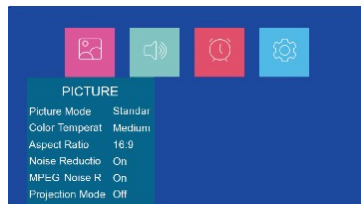

Zoom:
Adjust the size of the image using the Zoom function in the Reduce image sub-menu.
Zoom range: 75%-100%
(Note: This function is only valid in the video screen)

4. 3.5mm audio connection

 Use a 3.5mm audio jack to connect headphones/speakers.
Note: Dolby sound is not supported.

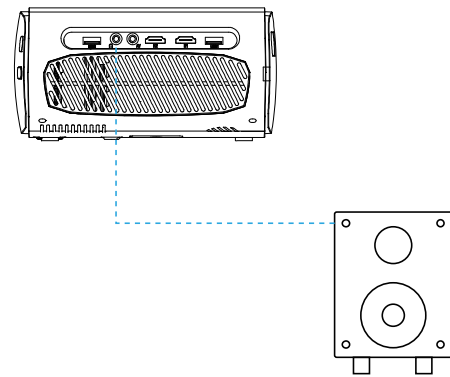

b. Sound sub-menu:

Available adjustments: Sound Mode/ Balance/ Auto Volume/ Bluetooth



Turn on/off Bluetooth

When the Bluetooth is turned on, search for nearby Bluetooth speakers or earphones to pair the device.

 
Press the "OK" button to pair the device.

When the device is connected, press the "OK" button again to disconnect the device.

c. Settings sub-menu:


Timer shutdown: After selecting the timer shutdown duration in the menu, after the selected time is completed The machine will enter standby

Timer: The projector enters standby mode automatically when the set duration of the timer elapses.

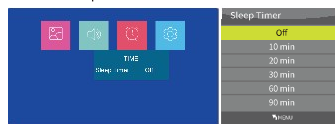

d. Settings sub-menu:

 Timer: The projector enters standby mode automatically when the set duration of the timer elapses.

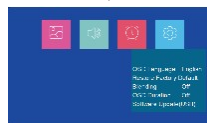

Timer shutdown: After selecting the timer shutdown duration in the menu, after the selected time is completed The machine will enter standby

e. Input Source sub-menu:

Available adjustments: AV/HDMI 1/Screen Mirroring/VGA/USB

Screen Mirroring

1. Select Screen Mirroring in the Input Source list
2. Press the OK key to enter the interface
3. Pick the appropriate variant (Figure 1)

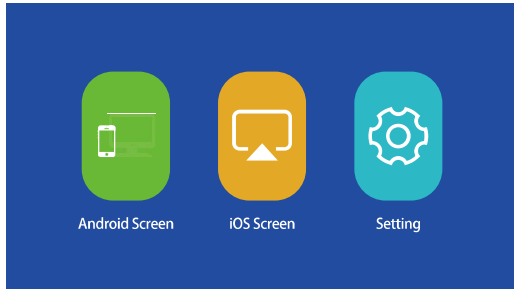
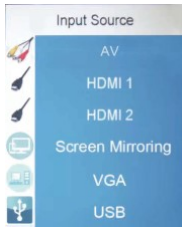 


Figure 1

Method 2: Wired connection

1. Select Android Screen function.
2. On your Android device, find Developer options and turn on USB debugging.
3. Connect your Android device to the projector OUT5V port via the ORIGINAL USB cable.
4. For the first time, when the "Allow USB Debugging" window appears, select "Always allow from this computer" and tap "OK" to start screen mirroring.

 

Figure 1

Tips:

USB debugging steps may vary due to different devices Android OS differences. Search for "How to open the USB debugging mode on "Your device" " in Google. Actual prompts are based on Samsung Galaxy S8+ OS.

1. Open the "Settings", tap About->Software Information->Build number;
2. Tap "Build number" seven times until it shows Developer mode is turned on;
3. Go back to settings, scroll down and select "Developer options";
4. Find the "Debugging" section;
5. Tap the toggle next to "USB Debugging".



1. Some Android devices may not support screen mirroring due to the compatibility. Such as: some models of Google/Motorola/Sony
2. Some Android devices may only transfer the display without audio due to the protocol restrictions.

A. Android os

Android Screen has two connection methods.
Method 1: Wireless connection (Recommended)

1. Select Android Screen function



2. Turn on the WLAN on the Android device
3. Launch the Multi-screen / Wireless Display / Screen Mirroring / Smart View / Cast function (Figure1)
3. Select "TENKER-XXXX" from the searching result list (Figure 2)



Figure 1

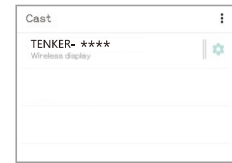 


Figure 2

⚠ Some Android devices may not support screen mirroring due to the compatibility.

B. iOS

iOS has 4 connection methods:

Method 1: Wireless connection with Wi-Fi router (Recommended)

1. Connect the projector to a Wi-Fi router;
2. Select iOS Screen Mirroring function;
3. Connect your iOS device to the same Wi-Fi router
4. Turn on Screen Mirroring on your iOS device, find the projector for pairing.



Method 2: Wireless connection without Wi-Fi router

1. You don't need to connect the projector to Wi-Fi router;
2. Select iOS Screen Mirroring function;
3. Turn on Wi-Fi on your iOS device and search for the network name of the projector (for example TENKER-124626);
4. Pick it and enter the password: 12345678. Your iOS device will connect to the projector automatically.
5. Turn on Screen Mirroring on your iOS device, find the projector for pairing.




Method 3: Streaming with your Wi-Fi router

1. Turn on the projector, select Screen Mirroring as the input source to enter the Screen Mirroring interface for iOS;



2. Open the 'Settings', connect your iOS device to the 'TENKER-124626' Wi-Fi (pwd: 12345678);

 
3. Open the <http://192.168.49.1> webpage with the browser on your mobile device. Tap Wi-Fi AP > Scan, select your router's Wi-Fi and enter the appropriate password. Tap 'Connect' to continue;

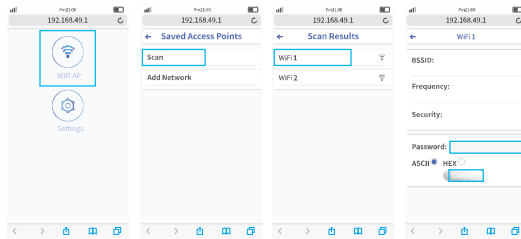

- 24 -


Method 4: Wired connection

 1. Select iOS Screen Mirroring function;
2. Connect your iOS device to the projector OUT5V port via the original USB cable.
3. Confirm the screen mirroring: when the "Trust this Computer?" window appears, tap "Trust" to start screen mirroring.

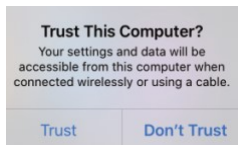

4. Confirm "Trust", then the screen mirroring will start

 C.Setting

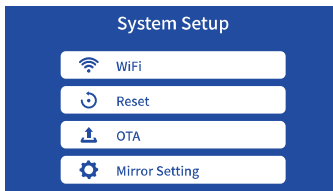

Description

WiFi: Connect to Wi-Fi router

 
Reset: Restore the Screen Mirroring function to its original system state

OTA: Online update

Mirror Setting: Mirror mode/Airplay mode

- 26 -

4. Your router's WiFi will be displayed on the Screen Mirroring interface for iOS after a successful connection;

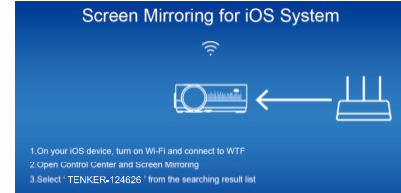

5. Open the 'Settings', connect your iOS device to the same router's WiFi;
6. Turn on Screen Mirroring on your iOS device, find the projector (TENKER-124626) for pairing.



Tips:

 
If you'd like to connect to another Wi-Fi router, please repeat the above procedures.

- 25 -

PROJECTOR INSTALLATION

Installation Method

The projector can be hung on the ceiling with special hanger frame, and placed on the stable desk to project the image according to the operating environment and requirement. In addition, the projector can be installed as following methods:

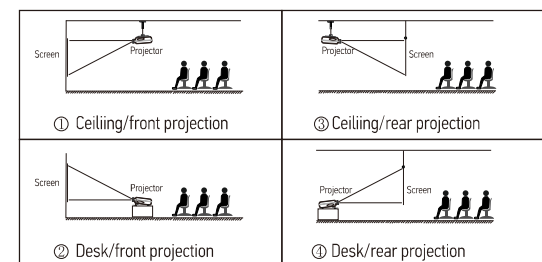

Install on the ceiling

A. Contact a professional installer for the projector ceiling mounting;

 
B. Please ensure that the screws used for ceiling mounting are of high quality and the length is enough to prevent the projector from falling;

C. Please purchase an universal projector ceiling mount;

D. Remove the four rubber pads on the bottom of the projector, you will see the screw holes and use the M5*11 mm screws for installing the ceiling, and then install it.


Warning:

1. The projector may be damaged beyond repair if it is incorrectly mounted on a ceiling or on a surface.
2. The recommended ambient temperature range is 41 °F - 95 °F. The incorrect temperature may lead to the device malfunction.
3. Please do not place the projector in wet, moist, or dusty conditions to prevent electric shock or malfunction.
4. Poor ventilation can be a significant cause of overheating. It could cause a projector to be damaged.
5. Please use a coarse screw with a diameter of 1/4 inch and a thread of 20/inch to fix

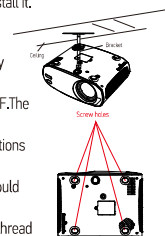

- 27 -

 Throw distance and screen size

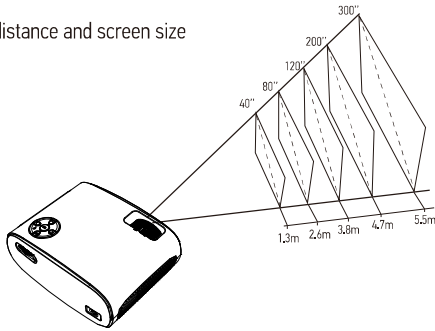

For reference only. Throw distance and screen size may vary due to different configurations.

Technical Specifications

| | | | |
|--------------------|----------------------------------|--------------------|-------------------------|
| Imaging Technology | LTPS LCD | Color Reproduction | 16,7kk |
| Resolution | 1920*1080 | Keystone | Manual Correction ± 15° |
| Highest Resolution | 1920*1080 | Power Voltage | 100V-240V 50/60Hz |
| Light | LED | Integrated watt | 65W (Max) |
| Life Span | 50,000 hrs | Input | USB/VGA/HDMI/AV |
| Lens | Multichip Coated | Output | Earphone USB(5V-500MA) |
| Operation Mode | Lens (F=135) Manual Operation | Speaker | 50 3W |
| | | System support | Support multi-media |
| | | Language support | Support 23 Language |
| Throw Distance | 1.3-5.5M | Unit size | 221*174*78,3mm |
| Screen Size | 40-200 Inches | Projector Ratio | 1.44:1 |
| Aspect Ratio | 4:3/16:9 | Net Weight | 1,42KG |

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

ACTIVATE YOUR 12-MONTH WARRANTY

Register within 7 days after receiving your new product.

PLEASE VISIT US NOW

→ warranty.tenkershop.com

CUSTOMER SERVICE

✉ support@tenkershop.com 🌐 www.tenkershop.com



1. Only suitable for home entertainment in a dark environment. NOT for presentation purposes.
2. Dolby audio is NOT supported.
3. DO NOT obstruct the air vents when using. UNPLUG & PREVENT DUST from entering when not in use.

A Big Thank You

We're thrilled that you have chosen to purchase the Mini LCD Video Projector. At TENKER, we're committed to providing you with products that enhance your daily life. We also aim to give our customers excellent support. Should you have any questions or feedback about your new product, simply get in touch with our customer support team at 1-855-882-2999, or by email at support@tenkershop.com

Enjoy your new product!

TENKER