


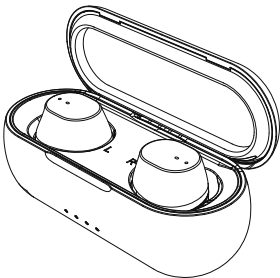

# User Manual

Model: SiFi II



---


[www.bomaker.com](http://www.bomaker.com)

---


# Introduction

Thank you for choosing BOMAKER SiFi II True Wireless Bluetooth Earbuds. Please read the manual carefully, and keep it for further reference. If you need any assistance, please contact our customer support team by **emailing at [bomaker@support.com](mailto:bomaker@support.com)**

## 1. Package Content

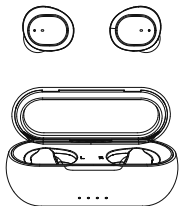

## 2. Product Diagram

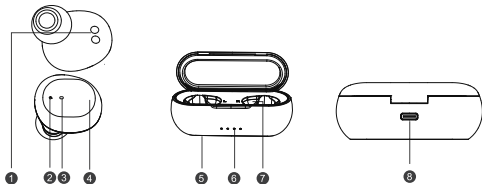

**EN:** 1. Charging Contact  
2. Microphone  
3. LED Indicator  
4. Touch Control Panel

5. Charging Case  
6. Charging Case Indicator  
7. Charging Slot  
8. Type C Charging Port

**DE:** 1. Ladekontakt  
2. Mikrofon  
3. LED-Anzeige  
4. Bedientafel

5. Ladekoffer  
6. Ladekofferanzeige  
7. Ladeschacht  
8. Typ C Ladenschluss

- FR:** 1. Contact De Charge  
2. Microphone  
3. Indicateur Led  
4. Panneau De Commande Tactile
5. Boîtier De Charge  
6. Indicateur De Boîtier De Charge  
7. Emplacement De Charge  
8. Port De Charge De Type C
- ES:** 1. Contacto de Carga  
2. Micrófono  
3. LED Indicador  
4. Panel de Control Táctil
5. Estuche de Carga  
6. Indicador de Estuche de Carga  
7. Puerto de Carga  
8. Puerto de Carga Tipo C
- IT:** 1. Contatto di Ricarica  
2. Microfono  
3. Indicatore a LED  
4. Pannello di Controllo Touch
5. Custodia di Ricarica  
6. Indicatore della Custodia di Ricarica  
7. Slot di Ricarica  
8. Porta di Ricarica di Tipo C
- JP:** 1. 充電接点  
2. マイク  
3. LEDインジケータ  
4. タッチコントロールパネル
5. 充電ケース  
6. 充電ケースインジケータ  
7. 充電スロット  
8. タイプC充電ポート

### 3. Power On/Off

(1) **EN:** Stereo Mode: Auto Power-On/Off

**DE:** Stereomodus: Automatisches Ein- und Ausschalten


 
**FR:** Mode stereo: Mise sous / hors tension automatique

**ES:** Modo estéreo: Encender / apagar automáticamente




**IT:** Modalità Stereo: Accendere e Spegner e Automaticamente

**JP:** ステレオモード: 自動電源オン/オフ

**ON**

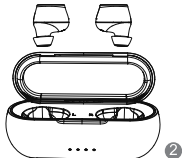

**OFF**

  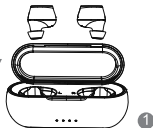

**(2) EN:** Mono Mode: Auto Power-On/Off

**DE:** Mono-Modus: Automatisches Ein- und Ausschalten


**FR:** Mode mono: Mise sous / hors tension automatique

**ES:** Modo mono: Encender / apagar automáticamente


**IT:** Modalità Mono: Accendere e Spegnerne Automaticamente

**JP:** モノラルモード: 自動電源オン/オフ

**ON**

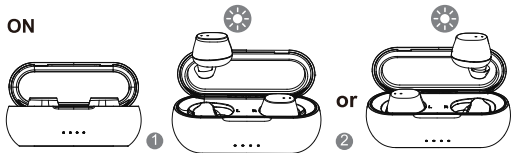

**OFF**

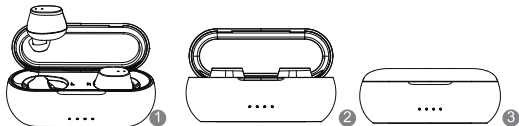

**(3) EN:** Stereo Mode: Turn On/Off Manually



**DE:** Stereomodus: Manuelles Ein- und Ausschalten

**FR:** Mode stereo: Activer / désactiver manuellement

**ES:** Modo estéreo: Encender / apagar manualmente

**IT:** Modalità Stereo: Accendere e Spegnere Manualmente

**JP:** ステレオモード: 手動でオン/オフ

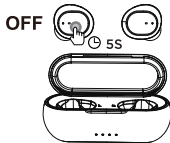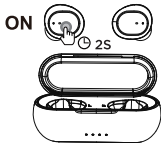

**(4) EN:** Mono Mode: Turn On/Off Manually



**DE:** Mono-Modus: Manuelles Ein- und Ausschalten

**FR:** Mode mono: Activer / désactiver manuellement

**ES:** Modo mono: Encender / apagar manualmente

**IT:** Modalità Mono: Accendere e Spegnere Manualmente

**JP:** モノラルモード: 手動でオン/オフ

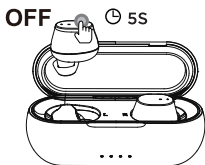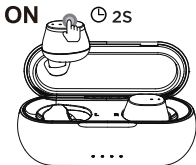

## 4. Pairing

(1) **EN:** Stereo Mode

**DE:** Stereomodus

**FR:** Mode stéréo


**ES:** Modo estéreo

**IT:** Modalità Stero

**JP:** ステレオモード



A

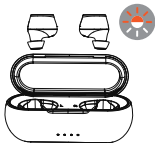

(2) **EN:** Mono Mode

**DE:** Mono-Modus

**FR:** Mode mono

**ES:** Modo mono


**IT:** Modalità Mono

**JP:** モノラルモード


B




## 5. Wear and Get Comfortable

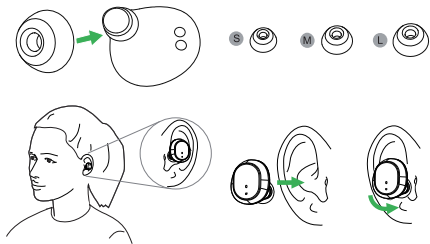

## 6. Controls

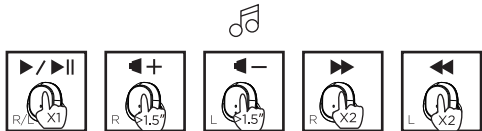


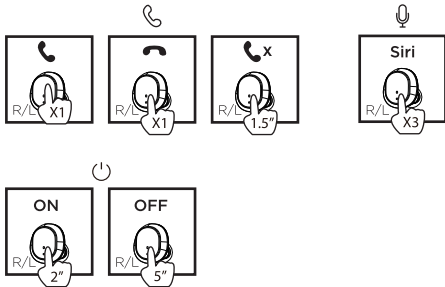

## 7. Charging

**(1) EN:** Charging The Earbuds  
**DE:** Aufladen der Ohrhörer  
**FR:** Charger les écouteurs

**ES:** Carga los auriculares  
**IT:** Ricaricare gli Auricolari  
**JP:** イヤフォンの充電

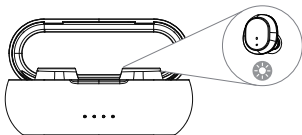

**(2) EN:** Charging the Case


**DE:** Aufladen des Aufladungskoffer

**FR:** Chargement de l'étui


**ES:** Carga el estuche

**IT:** Ricaricare la Custodia

**JP:** ケースの充電

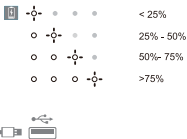

## 8. Reset

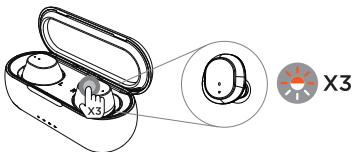

**EN:** Please reset the earbuds if the R and L earbuds cannot be connected to each other or connected to your Bluetooth devices correctly.

**DE:** Bitte setzen Sie die Ohrhörer zurück, wenn die R- und L-Ohrhörer nicht richtig miteinander oder mit Ihren Bluetooth-Geräten verbunden werden können.

**FR:** Veuillez réinitialiser les écouteurs si les écouteurs R et L ne peuvent pas être connectés l'un à l'autre ou connectés correctement à vos appareils Bluetooth.

**ES:** Si el auricular izquierdo y derecho no se puede conecta entre sí o con dispositivos de Bluetooth , reinicie al estado de fábrica del producto.

**IT:** Si prega di resettare gli auricolari se gli auricolari R e L non posso esser collegati a vicenda oppure collegati correttamente al tuo dispositivo Bluetooth.

**JP:** RイヤホンとLイヤホンを相互に接続できない場合、またはBluetoothデバイスに正しく接続できない場合は、イヤホンをリセットしてください

## Specifications

Bluetooth version	BT 5.0
Bluetooth range	10 m / 33 ft
Waterproof	IPX 5
Frequency response	20 Hz - 20 kHz
Battery capacity	Earbuds: 50mAh/3.7V x 2 Charging case: 420mAh/3.7V
Playtime (varies by volume level and content)	Up to 24 H (Total)
Charging case charged the earbuds	3-4 Times (Charging case full battery)
Charging time	About 1.5 hours for earbuds About 2 hours for charging case
Earbud Dimension / Weight	1.0*0.8*0.7 inch / 4g
Charging case Dimension / Weight	3.2*1.3*1.2 inch / 32g

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to

provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC ID: 2AS9DSIFI2

## Correct Disposal of This Product



(Waste Electrical & Electronic Equipment)

This mark shown on the product or its packaging, indicates that this product should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household user should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

### **Substanbo Inc.**

ADD: 36 South 18th Avenue, Suite A, Brighton, CO 80601, United States  
TEL: +1(719)309-2056





 bomaker



CE  RoHS 

—



@bomaker



support@bomaker.com