 


# *Osaki*

YH-9660, YH-9220, YH-9230, Osaki Pro iSpace, Osaki Pro Capella

## **INSTRUCTION MANUAL**

Enjoy the space capsule Massage Chair

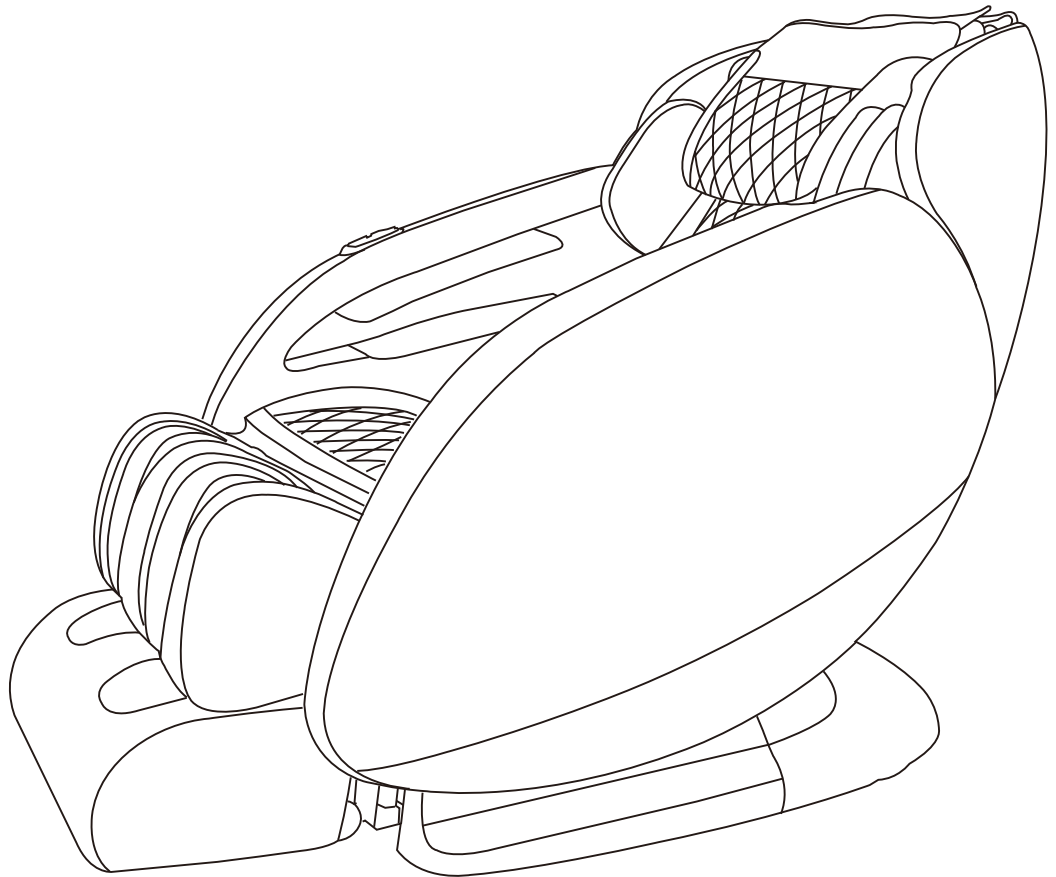

PLEASE BE SURE TO READ THIS MANUAL CAREFULLY TO LEARN THE OPERATIONS OF THIS PRODUCT. DO NOT DISPOSE OF THE MANUAL AND KEEP FOR FUTURE REFERENCE.



# CONTENTS

I	IMPORTANT SAFETY INSTRUCTIONS.....	1-5
I	FUNCTION OF EACH PART.....	6
I	INSTRUCTIONS ON CONTROL PANEL .....	7
I	OPERATION GUIDE .....	8-14
I	SAFETY INSTRUCTIONS.....	15
I	DAILY CARE AND MAINTENANCE.....	15
I	TROUBLE SHOOTING .....	16
I	SPECIFICATION .....	16

# IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following: Read all instructions before using (this appliance).

**DANGER**-To reduce the risk of electric shock:

- Always unplug this appliance from the electrical outlet immediately after using and before cleaning.
- Never use pins or other metallic fasteners with this appliance.
- Carefully examine the covering before each use. Discard the appliance if the covering shows any sign of deterioration, such as checking, blistering, or cracking.
  
- **WARNING**--To reduce the risks of burns, fire, electric shock or injury to persons:
  - An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
  - Close supervision is necessary when this appliance is used by, on, or near children, or disabled persons.
  - Use this appliance only for its intended use as described in this manual. Do not use attachments that have not been recommended by the manufacturer.
  - Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.
  - Do not carry this appliance by the supply cord or use the cord as a handle.
  - Keep the cord away from heated surfaces.
  - Never operate the appliance with the air openings blocked. Keep the air openings free of lint, hair, and the like.
  - Never drop or insert any object into any opening.
  - Do not use outdoors.
  - Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
  - To disconnect, turn all controls to the off position, then remove plug from outlet.
  - Keep children away from the extended foot support.
  - Connect this appliance to a properly grounded outlet only. See Grounding Instructions.
  - Use heated surfaces carefully. May cause serious burns. Do not use over insensitive skin areas or in the presence of poor circulation. The unsupervised use of heat by children or disabled persons may be dangerous.
  - Do not operate under a blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.

SAVE THESE INSTRUCTIONS

 
## GROUNDING INSTRUCTIONS

This product must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for the electric current to reduce the risk of electric shock.

This product is equipped with a cord with an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

**Danger**-Improper connection of the equipment-grounding conductor can result in a risk of electric shock.



Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

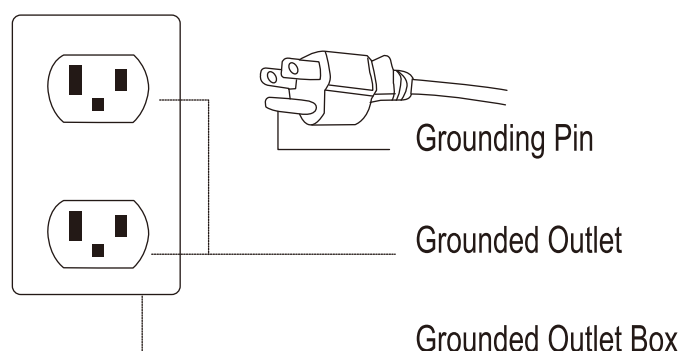

# IMPORTANT SAFETY INSTRUCTIONS

## OPERATING SURROUNDINGS

  - Do not use or store the massage chair in a damp environment : i.e. bathroom, sauna, spa to avoid any mold, electric shock, fire or mechanical failure.
- Do not use the massage chair outdoors
- Do not use the massage chair under dusty, smearable, or anoxic conditions
- Do not place the massage chair near a heater, stove, or near sunlight radiation to avoid inner components overheating and causing fire
- Make sure to place the massage chair on a flat level ground
- The bracket part should be placed on the plain ground
- To avoid electric shock, please make sure to connect an earth wire and have it grounded.
- Don't use the machine while smoking

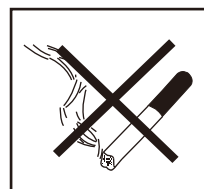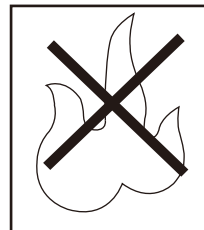

## FOLLOWING CONDITIONS SHOULD CONSULT DOCTORS BEFORE USE

- Suffered from malignant tumor
- Serious heart disease
- Serious skin disease
- Serious bone hyperplasia
- During Pregnancy
- Be on the rest cure under the doctor's supervision
- If there is a bend in the back caused by an accident or disease
- Needing peaceful surroundings
- Arthritis Disease
- Implanted pacemaker for medical purpose
- Suffered from bowels disease (i.e. gastritis, enteritis, diarrhea, hepatitis)
- Serious blood circulation trouble
- Consciousness trouble
- In hyperpyretic

## WARNING

Children under the age of 18 or people with disabilities (physical and mental) are not allowed to operate the massage chair without a doctor's consent to prevent cases of electric shock, injuries, or mechanism malfunctions.

# IMPORTANT SAFETY INSTRUCTIONS

For safety reasons and in order to clearly indicate potential dangers should the product be used improperly, instructions have been marked in the following manners and should be strictly noted

## ⊘ CAUTIONS

**Non-professional technicians are not allowed to dismantle or repair the chair to avoid fire, electrical shock or serious harm**



**Do not spray or directly pour liquids to the switch when cleaning to avoid insulation fault, electrical shock or short-circuiting.**



**When moving the chair in the process of storing or maintenance, be sure to disconnect the power plug from socket**



Do not detach the plug with wet hands

**Make sure to shut off and detach the power plug when cleaning or storing product**



During cleaning or moving the machine, make sure to detach power cord to avoid fire or electrical shock

**Do not place the machine onto an unstable surface to avoid roasting, insulation failure, electrical shock or turnover**



When storing the machine, make sure to disconnect power plug to avoid fire caused by electricity leaking

**Clean power plug periodically to avoid fire due to dust**



**Do not use it in any unsafe places or for other purposes**



It is the main reason of product damage or accident

**Do not store the machine onto an unstable surface**



Unexpected earthquake or external force will cause damage or injury

**Keep supply cord unobstructed at all time, i.e. not twisted, knotted, over flexed or pulled and do not place anything heavy on it**



**The appliance has a heated surface. Persons insensitive to heat must be careful when using the appliance.**



# IMPORTANT SAFETY INSTRUCTIONS

## ⊘ CAUTIONS

**Do not modify the structure or change components by unauthorized person**

Do not dismantle the machine by unauthorized person to avoid electrical shock, short-circuit or fire



**Do not store it near a fire or flammable substances**

It is one of the reasons of causing product manipulation, deviation, or damage



**Should any abnormality occur(i.e. scorching smell), stop using immediately and detach power plug from socket**

Operating under an abnormal situation will cause fire or electrical shock, please contact your local seller or authorized service agent for maintenance



**Do not place the machine onto an unstable surface to avoid roast, insulation failure, electrical shock or turnover**



**Only rated voltage must be used**



**Stop using immediately if supply cord or power plug be damaged or loosen**



**Be sure to keep children away during operating to avoid any hazard**



**Do not explore it under sunshine at all time**



**If the supply cord is damaged,it must be replaced by the manufacturer or its authorized persons for repair or maintenance to avoid any hazard**



# IMPORTANT SAFETY INSTRUCTIONS

## **FCC STATEMENT**

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not approved by the party responsible for compliance could void the users authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

## **FCC Radiation Exposure Statement:**

 
This equipment complies with FCC radiation exposure requirement.  
The device can be used in portable exposure condition without RF striction




# INSTALLATIONS GUIDE

## Legrest Installation


- ▶ In order to install the footrest make sure that the connecting axis points of the footrest lines up with the seat base as shown in the diagram below. Once aligned tighten the "fixed screw". An Install video will be available online for more detailed instructions. Once completed connect the electrical wire and air pipe as shown in the left illustration.
- ▶ As a final step make sure the air hose is not bent or twisted anywhere before zippering up the seat cushion to the legrest.

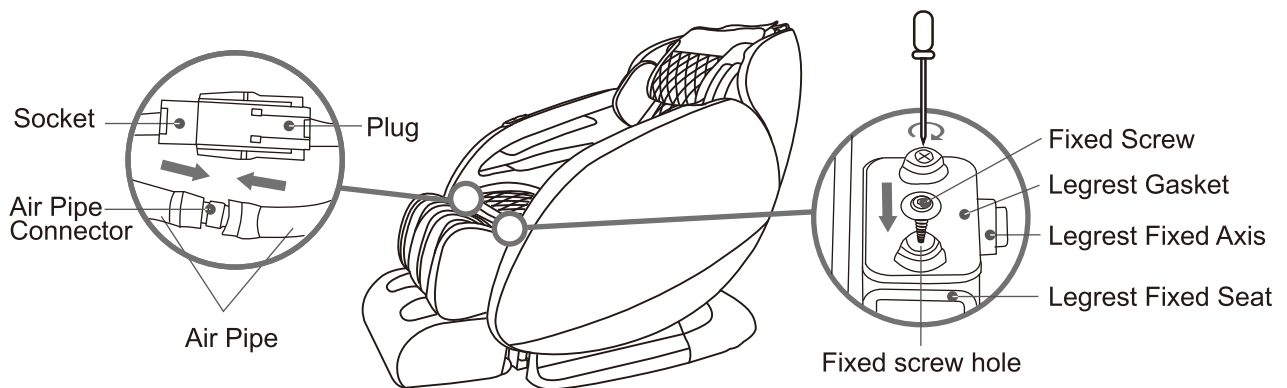

## FUNCTION OF EACH PART

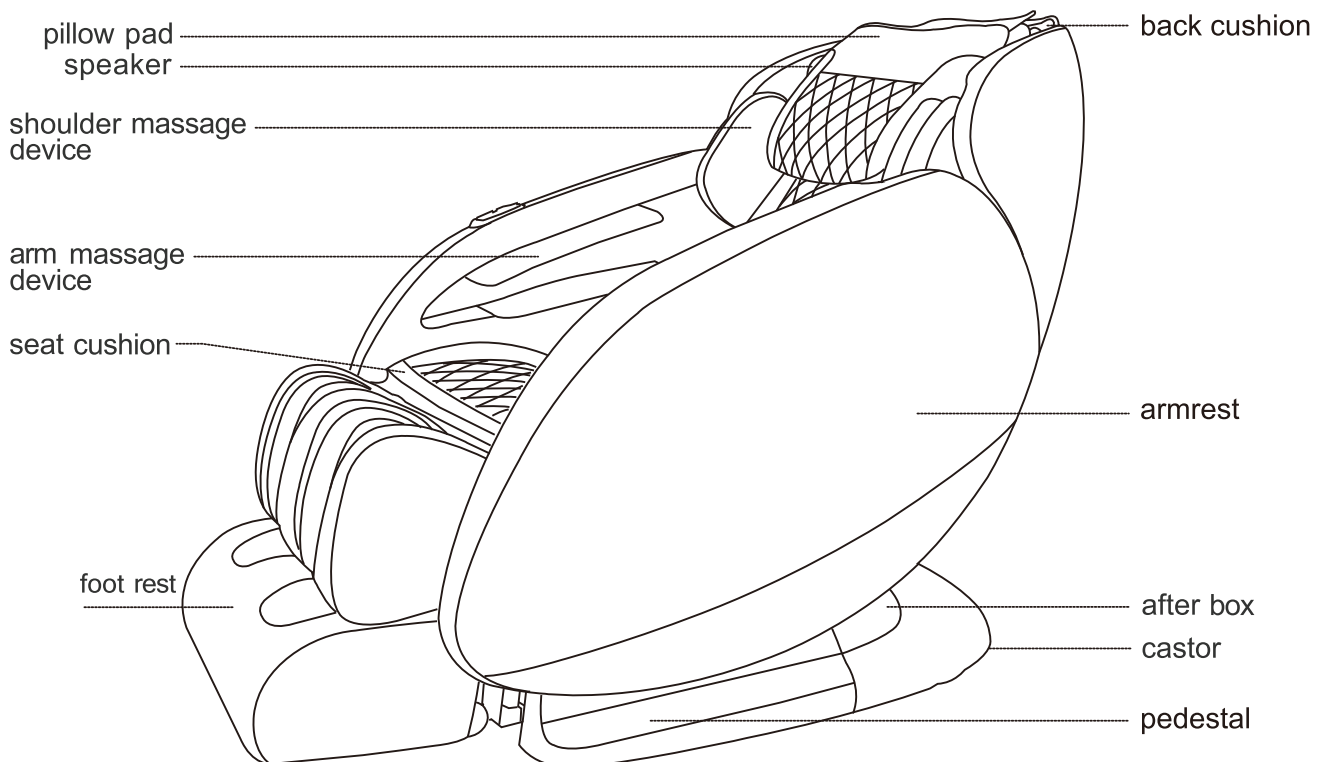 

# INSTRUCTIONS ON CONTROL PANEL

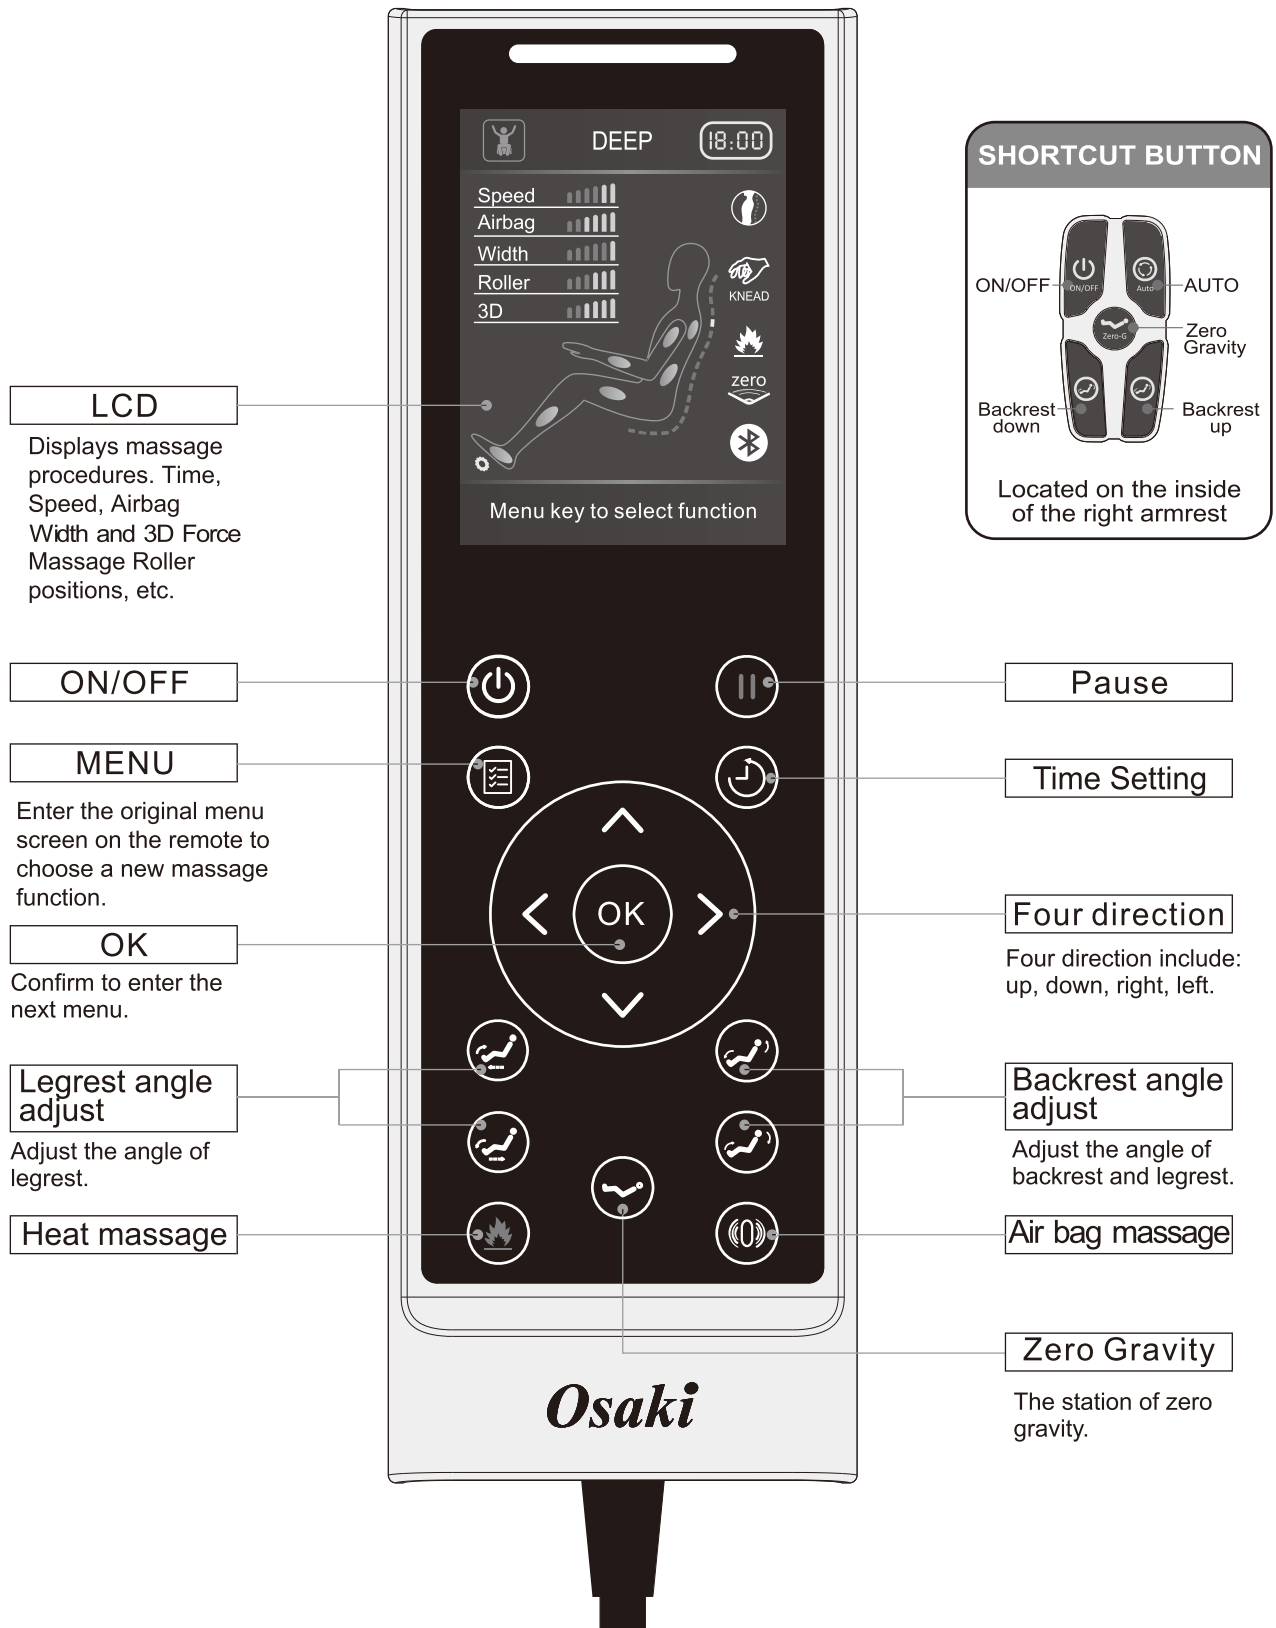 


**!** **Warning:** Only rated supply 120V must be used to avoid damage to electronic elements.

# OPERATION GUIDE
 
## 1. Turn on the power and turn the switch to the “I” position.

- ▶ Insert the power plug into power socket, and push the power switch to “I” position. The chair is in resetting condition, remote power key indicator will flash quickly. After reset, the chair goes to standby mode.

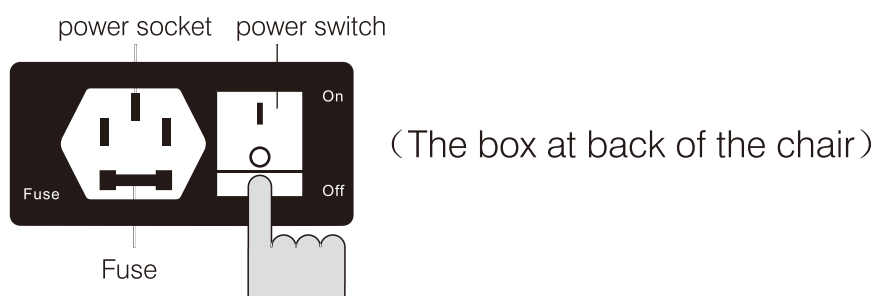

**Warning:** Do not insert or pull out the power plug with wet hands, otherwise an electric shock would happen.

## 2. Sit on massage chair and press the “ON” button to start.

- ⏻ Press remote “ON/OFF” button to start, chair will recline to a suitable position.  
On/Off
- ⌚ Press Time Setting button to adjust massage time. Maximum is 30 minutes.
- ⏸ Press Pause button once, it will stop massage immediately, press again to continue.

## 3. Adjust backrest and legrest to a favorable angle.

- 🪑 Press once that back and leg move together to lie down, press again to stop.
- 🪑 Press once that back and leg move together to stand up, press again to stop.
- 🪑 Press once to lift up leg, press again to stop. Long press to extend leg automatically.
- 🪑 Press once to pull down leg, press again to stop. Long press to retract leg automatically.

## 4. Restore massage chair.

- ▶ Press “ON/OFF” button after using. Do not stand in the leg cushion before it restores to original position to prevent any damage to leg cushion.

# OPERATION GUIDE

 
## 5. Start to massage

### ⌚ Automatic course

#### Automatic massage program introduction

##### Operation method:

1. Press “⌚” key to return to main menu.
2. Press “◀ ▶” key to select “AUTO” tab, then press “^ v” key to select below auto programs. Press “OK” key to confirm, roller mechanism will detect shoulder position automatically. When you hear “Beeping”, the detection is finished, at this moment it allows to press the up or down key to fine tune a more accurate shoulder position if needed, then press “OK” key to confirm and start the automatic massage programs.

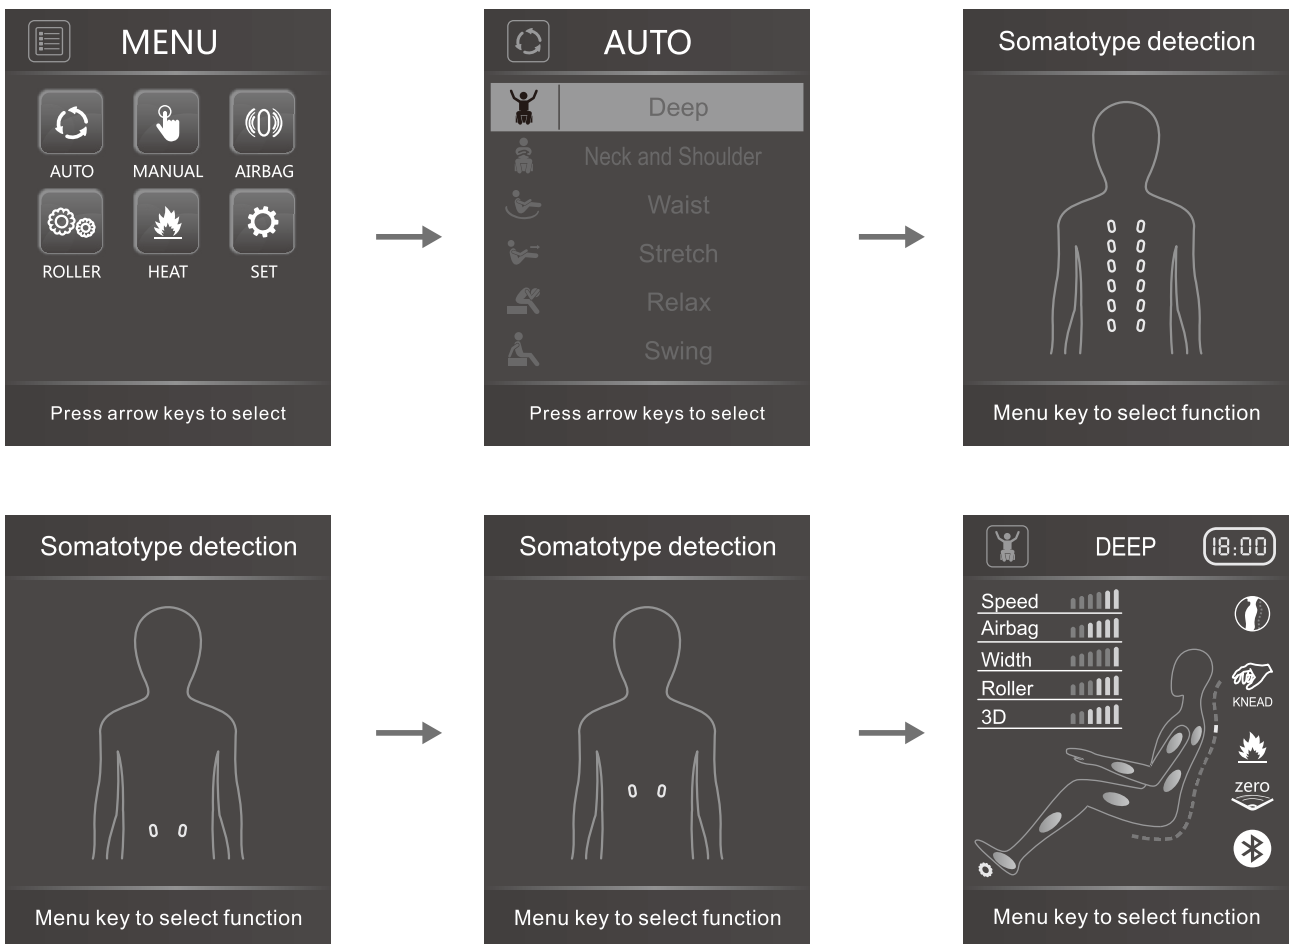

※ Automatic massage programs including the following massages. Each program massage different locations: Kneading finger, pressing, beating, soft hammer, and pressure.

# OPERATION GUIDE

## Full automatic massage program

Option	Description	Main function and adjustable range
Deep	Deep soothing massage program	※ Switch from Shiatsu to the Main Massage program.
Neck and Shoulder	Neck and shoulder massage relaxation program	To massage with a kneading beat, main ※ program. Between the adjustable seat and foot position.
Waist	Waist and hip massage program	※ The massage program mainly kneading scraping. Between the adjustable seat and foot position.
Stretch	Stretching and relaxing massage program	※ Engages the full body into a stretching program.
Relax	Relaxing massage program	※ Engages the body into a relax program, by slow kneading and transitioning.
Swing	swing massage program	※ Gentle relaxation course based on tapping actions promoting aid in sleep.
Vitality recovery	Vitality recovery massage program	※ Combine with types of tapping techniques for back, arms, and legs to relax your full body.
Yoga therapy	Yoga therapy massage program	※ Standard course for thorough stretch and relaxation based on certain positions.

※ Above the program massage time by default to 15 minutes, the setting value of the air pressure is moderate, can choose the "strength" key to adjust the pressure intensity.

## Play music

Connecting to Bluetooth


 




- ▶ To manually connect, first open the Bluetooth Function of the mobile phone, then select the matching Bluetooth Devices (codenamed: "BK8000L" a "beep" sound connects, beep twice and it will disconnect). Standby for the mobile phone will automatically match the massage chair speakers to your phone.


# OPERATION GUIDE
 
## Manual massage program

### Introduction of manual massage program

#### Operation method:

1. Press the “” menu button to return to the main menu.
2. Press the “ ” left and right key, select the "MANUAL program" tab: use the “ ” up and down arrow keys to select the manual massage program you need, and then press “” OK to start.

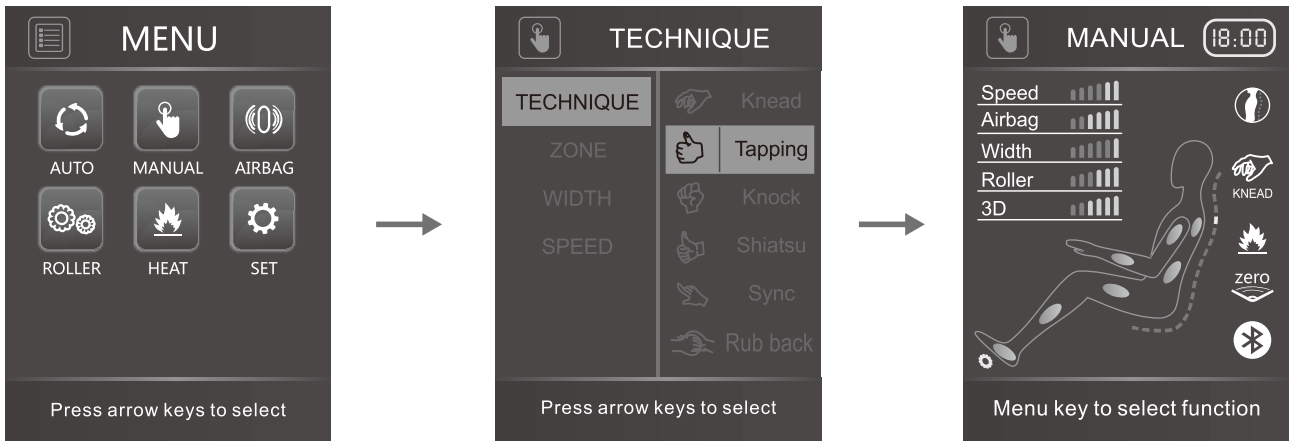

Option	Description	Main function
TECHNIQUE	Knead	Kneading massage, can adjust the intensity.
	Tapping	Tapping massage, can adjust the intensity and width.
	Knock	Knocking massage, can adjust the intensity.
	Shiatsu	Shiatsu massage, can adjust the width.
	Sync	Sync massage, can adjust the intensity.
	Rub back	Rub back massage, can adjust the intensity.

# OPERATION GUIDE

## Manual massage program





Option	Description	Main function and adjustable range
ZONE	Full course/Partial/Point	Full course/Partial/Point massage WHOLE → PARTIAL → POINT
WIDTH	Wide narrow regulation	Wide adjustment of massage wheel WIDE → MEDIUM → NARROW
SPEED	Speed adjustment	Speed adjustment of massage wheel 1 → 2 → 3 → 4 → 5 → 6

※ For the above manual setting course, the default setting is spot-specific massage with medium width. Speed and width is adjustable by pressing relative button.

## Pressure massage program

Introduction of all kinds of functional buttons, it suitable for Automatic and manual massage program.


### Operation method:

1. Press “” key to return to main menu.
2. Press the “  

The diagram illustrates the navigation steps for the manual massage program. It starts with the 'MENU' screen, where the 'AIRBAG' option is selected. This leads to the 'AIRBAG' screen, where the 'FULL' section is chosen, and 'ARM&SHOULDER' is selected. Finally, the 'MANUAL' settings screen is shown, where various massage parameters like Speed, Airbag, Width, Roller, and 3D can be adjusted using sliders. A body diagram highlights the massage area, and additional icons for KNEAD, zero, and Bluetooth are visible.

# OPERATION GUIDE

## Air pressure massage program

Option/Button	Description	Main function and adjustable range
	FULL	Body Pressure Massage Manual Program. The initial strength of the set value can be individually operated.
	ARM&SHOULDER	Arm & Shoulder Pressure Massage Manual Program. The initial strength of the set value can be individually operated on and off.
	LEG&FOOT	Leg & Foot Pressure Massage Manual Program. The initial strength of the set value can be individually operated on and off.
INTENSITY	INTENSITY ADJUST	Intensity adjustment of airbag massage. 1 → 2 → 3 → 4 → 5 → OFF

**⚠ Warning:** Supervision and guidance is mandatory for those disabled mentally and physically. Please advise with your doctor before using the chair if you have ANY medical conditions. Children under 18 should not use the chair and consult with a doctor for approval if attempted. Do not operate the chair if there are any children or pets near by. Serious injuries may occur if these instructions are not followed.







# OPERATION GUIDE

## Additional function

### Introduction of additional function keys

#### Operation method:

1. Press the “” menu button to return to the main menu.
2. Press the “

Option/Button	Description	Main function and adjustable range
ROLLER SPEED	Roller speed regulation	MEDIUM SPEED → FAST SPEED → OFF
 Heat	Heating massage	Heating ON/OFF button
 TIME	Time setting	5MINS → 10MINS → 15MINS → 20MINS → 25MINS → 30MINS
LANGUAGE	Select language	简体中文 → 繁體中文 → EN
BLUETOOTH	Bluetooth	The exclusive program. Can be opened and closed separately.

# SAFETY INSTRUCTIONS

1. Should any abnormality occur, shut off and detach power plug from socket.
2. When the power cord is damaged, it must be changed from a special power cord available from the manufacturer or the service department.



**Warning:** Do not dismantle, modify, or change components by unauthorized person to avoid electric shock or fire.

## DAILY CARE AND MAINTENANCE

### Storage guide

- © Do not dismantle back of the chair. Electrical shock may happen when in touch with the inner elements of chair.
- © An unauthorized person must not dismantle the chair to avoid electric shock or fire.
- © Make sure to shut off and detach the power plug when cleaning to avoid electric shock or hazard.
- © Keep the massage chair clean and free of dust. Do not place the massage chair in a damp environment.
- © If not in use for a long period, please cover it with a cloth to free dust.
- © Do not place the massage chair under sunlight.

### Maintenance

- © Use neutral detergents only
- © Use neutral detergents to clean the back cushion, head cushion, and leg cushion. Let it dry.
- © Use detergent and cloth to clean the plastic, pipe and leather material of massage chair.
- © Make sure not to use organic solvents as gasoline, amyl acetate, benzene for cleaning to avoid fading of the color, aging, or breakage.
- © Do not spray pesticide to avoid electric shock or fire.
- © Please clean with dry cloth to avoid mechanical failure.

### Controller maintenance

- © Do not place the massage chair near heat or fire.
- © Keep away from dampness to avoid electric shock.
- © Please clean dust with a soft cloth or a small banister brush.
- © Make sure not to use violent detergent such as benzene, gasoline, amyl acetate.

# TROUBLE SHOOTING

Checking is necessary in frequent usage.

Make sure the machine work properly before usage, after not in use for long time.

Abnormality situation	Solution guide
Failure to start and indicator light is off	<ul style="list-style-type: none"> <li>◎ Check that the plug is well connected</li> <li>◎ Check if the switch on the chair is turned to "I" position</li> </ul>
Sound in operation	<p><b>The sound is normal in following situation</b></p> <ul style="list-style-type: none"> <li>◎ Sound for kneading or knocking</li> <li>◎ Sound changes after speed adjustment</li> <li>◎ Sound from the box in massage</li> <li>◎ Vibration sound for backrest in massage</li> <li>◎ Sound for air input and output</li> <li>◎ Sound for airbag inflating and venting</li> <li>◎ Sound for leg adjustment</li> <li>◎ Sound for motor when the massage chair is loaded</li> </ul>

# SPECIFICATION

Product name	Massage Chair
Model	Osaki Pro-iSpace
Power supply	120V~ 60Hz
Rated power	150W
Rated working time	15 min

