User Manual

Model: HB-USP-GT1L-W





44-10, Techno10-ro, Yuseong-gu, Daejeon 305-510, Korea. TEL) 042-862-5882 FAX) 042-932-9624

Chapter 1. Overview

1.1 Overview of Product

HB-USP-GT1L-W is a model that receives input from various sensors of voltage, current and resistive output types and transfers processed data via WiFi wireless communication. Data obtained from each sensor are sent to sink node (HB-USP-GT2-W), and they can be sent from the sink node to a monitoring device through Ethernet. Data can be checked from a remote distance by configuring additional network using the internet or Wi-Fi.

1.2 Composition of Product

| Name | Quantity | Remark |
|---------------------------|----------|---|
| Main body (HB-USP-GT1L-W) | 1 | |
| Sensor connector | 6 | Connector to connect main body and sensor |
| Power adapter | 1 | Input: AC100~240V(50/60Hz) Output: DC5V ==== 4A |
| RF antenna | 1 | Helical antenna (2.4GHz, 2.85dBi) |
| Ferrite core | 4 | Attached to sensor cable |

^{* ===:} Direct current

1.2.1 Main Body

HB-USP-GT1L-W consists of sensor connection part, power terminal, RF antenna and LED.





1.2.2 Sensor Connector

Sensor connector is a connector used to connect the sensor connection part of HB-USP-GT1L-W with sensor. One connector consists of 4 pins, and connectors are provided as appropriate for the number of channels.



1.2.3 Power Adaptor

Power adaptor is a device that supplies power to operate the main body of sensor node. Power input is $AC\ 100\sim240V\ (50/60Hz)$ and output is DC5V, 1A.



1.2.4 RF Antenna

RF antenna is an external antenna connected to WiFi module.



1.2.5 Ferrite Core

Ferrite core attached to sensor cable prevents electrical noise on the sensor cable.





1.3 Classification of Model According to Sensor Input

| Sensor Input | | No. of Channels | Remark | |
|--------------|-----------|-----------------|-----------|--|
| DC input | Voltage | 4CH | DC 0~5V | |
| | Current | 4CH | DC 4~20mA | |
| | Resistive | 4CH | 0~20kΩ | |



Chapter 2. Product Description

2.1 Specifications


Specifications of this product are as follows.

| Hardware | | | | | |
|--|--------------------------------------|------------|-----------|--|--|
| Microprocessor | STM32L051 (32bit, ARM cortex-M0) | | | | |
| Memory | 64Kbyte program memory | | | | |
| | 8KByte SRAM | | | | |
| Clock Speed | 32MHz | | | | |
| RF | WiFi | | | | |
| Serial | RS-485 | | | | |
| RF Interface | | | | | |
| Protocol | Light Weight TCP/IP | | | | |
| Communication Speed | 921,600 bps | | | | |
| Communication Distance | 10m | | | | |
| Frequency Range | 2,400MHz ~ 2,483.5MHz | | | | |
| Transmission Power | 14dBm(Typical) | | | | |
| Antenna | Helical, 2.85 dBi, SMA type | | | | |
| Analog Sensor Input (CH1 ~ C | | | | | |
| Sensor Input Type | DC voltage | DC current | Resistive | | |
| Number of Channels | 4 | 4 | 4 | | |
| ADC Resolution | 12bit | | | | |
| Sampling Cycle | 7.68kSPS (sample per second) | | | | |
| Input Range | DC 0~5V | DC 4~20mA | 0~20kΩ | | |
| | Analog Sensor Power Supply | | | | |
| Voltage | DC 5V | | | | |
| Power and Environment | | | | | |
| Input Voltage Range | 4.8V ~ 5.2V | | | | |
| Operation Temperature | -20 ℃ ~ 60 ℃ | | | | |
| Storage Temperature | -30 ℃ ~ 70 ℃ | | | | |
| Case Materials | ABS (Acrylintrile-Butadiene-Styrene) | | | | |
| Weight | 120 g | | | | |
| Dimension 55 x 80 x 30 mm (W x H x D), except RF antenna | | | | | |

^{*} The Battery is not replaceable.

2.1.1 Name of Each Part

Name and function of each part of this product are as follows.

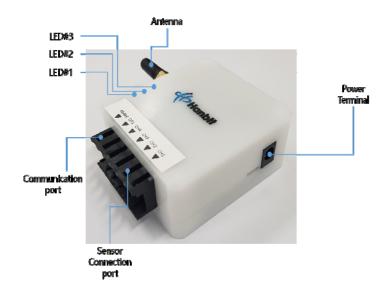


| O Power terminal | This is power input terminal to operate the main body of sensor node. Power adaptor provided upon purchase is connected to this terminal. | | |
|-----------------------------------|---|--|--|
| ○ Sensor | This part is connected to the analog sensor. It can receive input | | |
| connection part | from voltage sensor of DC0~5V, current sensor of DC 4~20mA | | |
| (CH1 ~ CH4) | or resistive sensor. It has 4 channels, and each channel has 4 | | |
| | pins. Among them, 2 pins are connected to sensor output and | | |
| | 2 pins are used to supply voltage of DC5V for sensors that | | |
| | require power. | | |
| | | | |
| Communication | This port is used for RS-485, a representative method of serial | | |
| port | communication. It is used for setting upon shipment. Default | | |
| | value is 57,600bps. | | |
| ○ LEDs | This product has 3 LEDs. | | |
| | - LED #1: Turned ON when wireless module is normal | | |
| | - LED #2: Turned ON when connecting to nearby sink node | | |
| | (GT2-W) module and turned OFF once connected | | |
| | - LED #3: No function | | |
| | | | |
| ○ Antenna | This helical communication antenna is connected to the internal | | |
| | RF module. Antenna gain is 2.85 dBi. | | |



2.2 Hardware Description

2.2.1 Block Diagram

The figure below shows block diagram of the product hardware.

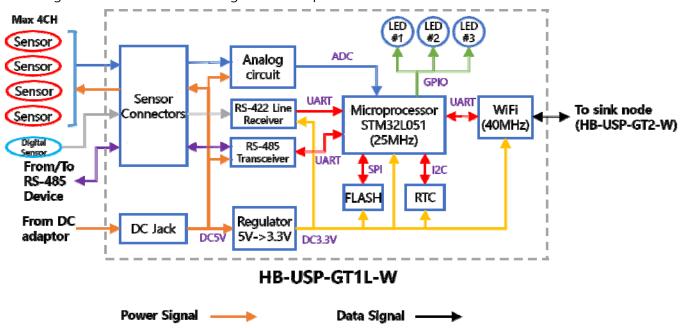

<Block Diagram of HB-USP-GT1L-W>

This product is operated by receiving 5V from DC adaptor. Voltage of 5V is supplied to analog circuit, RS-485 circuit, and sensor that requires power via sensor connector. DC5V voltage is passed through regulator and converted to 3.3V, and 3.3V is supplied to microprocessor, digital sensor circuit, internal flash, RTC and WiFi module.

Sensor signals obtained from sensors are passed through the analog circuit and sent to ADC input of the microprocessor. The microprocessor handles and processes data, and it can send data via WiFi module or RS-485 port. When sending data using the WiFi module, sink node is used. Communication method can be switched to Ethernet on the sink node.

Various settings are saved on flash, which is loaded automatically upon booting. Setting values are saved automatically when network device information is updated.

FCC Compliance Statement

This equipment has been tested and complies with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications to the equipment not expressly approved by the party responsible for compliance could void user's authority to operate the equipment.