

USER MANUAL

Product: Diagnostic Scanner

Model:DP500

Revised 30 October 2020

I. INTRODUCTION.....	5
1. PRODUCT PROFILE.....	5
2. FEATURES.....	5
3 KNOWLEDGE OF THIS DEVICE.....	6
3.1 The whole set.....	6
3.2 The tablet computer.....	6
4 TECHNICAL PARAMETER.....	7
5 ACCESSORY (Standard Configuration)	8
5.1 Main test cable.....	8
5.2 OBD Connector.....	9
5.3 Others.....	9
6 CHARGE THIS DEVICE.....	10
7 USING BATTERY.....	10
8 POWER ON/POWER OFF THIS DEVICE.....	12
8.1 Power on.....	12
8.2 Power off.....	12
9 ABOUT DESKTOP.....	12
10 CUSTOMIZE YOUR DESKTOP.....	13
10.1 Add items on the desktop.....	13
10.2 Move items on the desktop.....	13
10.3 Delete items on the desktop.....	13
10.4 Change your wallpaper.....	14
10.5 Create a folder on the desktop.....	14
11 ON USING TOUCH SCREEN.....	14
12 AUTO-ROTATE THE SCREEN.....	15
13 LOCK&UNLOCK.....	15
13.1 Lock the screen.....	15
13.2 Unlock the screen.....	15
14 NOTIFICATION PANEL.....	15
14.1 Turn on the notification panel.....	16
14.2 Turn off the notification panel.....	16
15 INPUT METHOD.....	16

16 HOW TO SET AS AIRPLANE MODE.....	17
II. OTHERS.....	18
1 WLAN.....	18
1.1 Set WI-FI on.....	18
1.2 Connect to WLAN.....	18
2 Browser.....	19
2.1 Open browser.....	19
2.2 Browser webpage.....	19
2.3 After a webpage is open, slide the screen with the tip of your finger to view other hidden content.....	20
2.4 Save favorite webpage to bookmark.....	20
2.5 Open multiple pages.....	20
2.6 Customize Internet settings.....	21
3 GALLERY.....	21
3.1 Open gallery.....	21
3.2 Browse images.....	21
4 MUSIC.....	22
5 CALCULATOR.....	22
6 CALENDAR.....	22
7 ALARMS.....	23
7.1 Add an alarm.....	23
7.2 Delete an alarm.....	23
7.3 Customize your alarm.....	23
7.4 Countdown set.....	24
7.5 Second clock setting.....	24
8 ES FILE VIEWER.....	25
9 BRIGHTNESS.....	25
10 SET SCREEN LOCK.....	25
11 APPLICATION.....	26
11.1 View installed applications.....	26
11.2 View the running applications.....	27
12 LANGUAGE&INPUT METHOD.....	27

13 SET DATE&TIME.....	27
14 RESTORE KEY MASTER TO FACTORY SETTINGS.....	28
15 STORE.....	29
16 APPS INSTALLATION/ UNINSTALLATION.....	29
III. ONE KEY UPGRADE.....	30
1. DETECTION SYSTEM UPGRADE.....	30
2. DIAGNOSTIC FUNCTION UPGRADE.....	32
IV. DIAGNOSIS INSTRUCTION.....	34
1 CONNECT VCI CONNECTOR.....	34
2 DIAGNOSIS FLOWCHAT.....	35
3 USER REGISTRATION.....	36
3.1 User Registration.....	36
4 DIAGNOSTIC SOFTWARE MAIN INTERFACE INTRODUCTION.....	37
5 START DIAGNOSING.....	38
5.1 Read vehicle information.....	40
5.2 Read trouble code.....	41
5.3 Clear trouble code.....	42
5.4 Read data stream.....	42
6 SYSTEM SETTINGS.....	43
6.1 VCI information.....	44
6.2 Language.....	44
6.3 Unit.....	45
6.4 User information.....	45
6.4.1 User login.....	45
6.4.2 User registration.....	46
6.4.3 Forget password.....	46
6.4.4 Registration information.....	47
6.4.5 Info modification.....	47
6.4.6 Modify password.....	48
6.5 About.....	48
6.6 DC Calibrate.....	49
7 REMOTE ASSISTANCE.....	50

I. INTRODUCTION

1. PRODUCT PROFILE

This device is a new Android-based vehicle trouble diagnostic device developed for Internet applications. It is characterized by covering wide range of vehicles, featuring powerful function, and providing precise result. Through vehicle diagnostic OBD connector and variant mobile intelligent terminals, it achieves vehicle trouble diagnosis for full car model and full system vehicle.

Meanwhile, taking advantage of mobile Internet, this device integrates more application and service, such as Maintenance Database, remote assistant, One Key Upgrade etc.

2. FEATURES

1. Diagnostic function:

Classify special function: ABS, EEPROM Adapter, Battery match, CVT learning, EPB, Gear learning, Immobilizer, TPMS (low tire) reset, Cluster calibrate, steering angle reset.

Specially designed for Android platform with clear and user-friendly interface;

2. Maintenance database:

Equipped with powerful database.

3. One Key Upgrade:

Built-in WIFI mode can realize application downloading and diagnostic function by one key upgrade.

4. System setting:

Set VCI formation, language, unit, data logging, user information etc.

5. Remote assistance:

Achieve remote assistance by this function.

3 KNOWLEDGE OF THIS DEVICE

3.1 The whole set

This device is composed of the tablet computer, main test cable and kinds of connectors.

3.2 The tablet computer

front view



reverse view



4 TECHNICAL PARAMETER

 
- Operation system: Android 5.1.1
- CPU: RK3128 Quad-Core, ARM Cortex A7@1.2Ghz
- Battery: 3800mA, rechargeable polymer lithium battery
- Extension memory card: 32G Micro SD (TF) card

supported

- Memory capacity: 16GB
- LCD: 7.0 inches
- LCD resolution: 800*480
- Touch screen: Capacitive touch screen
- Wi-Fi: supported
- Working temperature: $-20^{\circ}\text{C} \sim 55^{\circ}\text{C}$ ($14^{\circ}\text{F} \sim 131^{\circ}\text{F}$)
- Storage temperature: $-20^{\circ}\text{C} \sim 70^{\circ}\text{C}$ ($-4^{\circ}\text{F} \sim 158^{\circ}\text{F}$)
- Weight: about 850g
- Dimension: 214*133*28 mm

5 ACCESSORY (Standard Configuration)

5.1 Main test cable

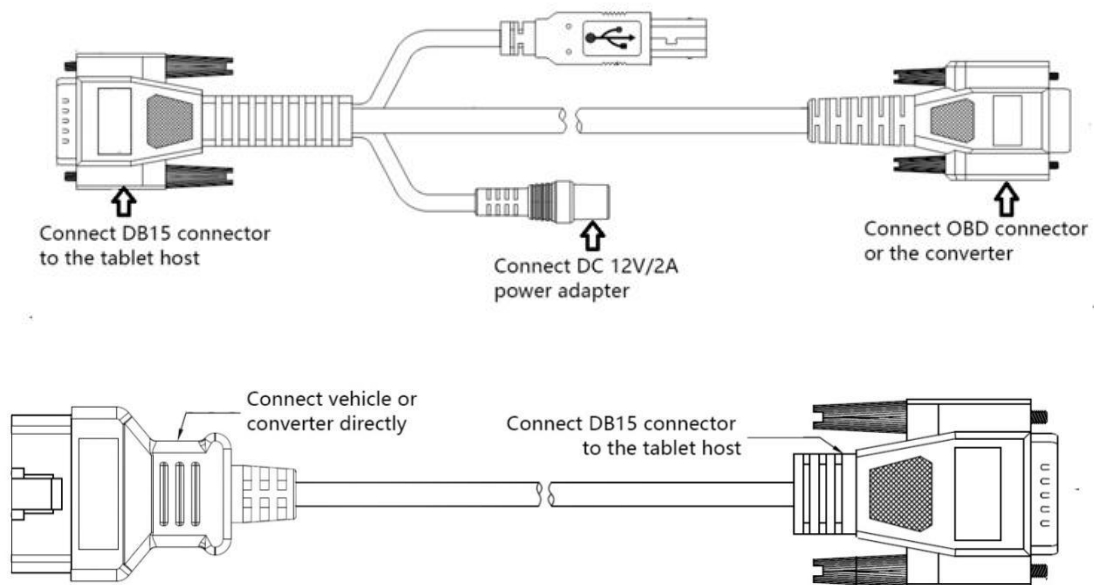


Pack different main cable according to different configurations


5.2 OBD Connector

OBD I connector to connect the diagnosis port of non OBD II vehicles. To choose the connector according to the vehicle brand and models.

 
Common connectors are as below:

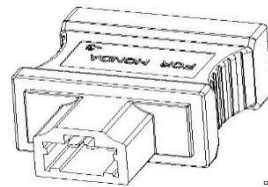


HONDA 3

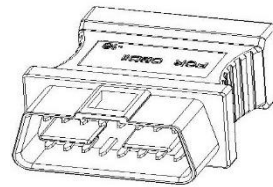 

OBD 16

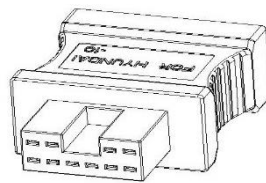 


HYUNDAI 10

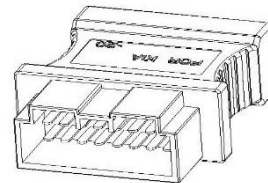 

KIA 20

Note: Different configuration accessories may have different options

 5.3 Others

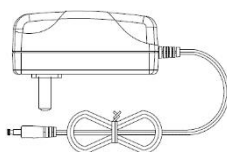

DC Power Adapter (Output DC 12V/2A)

To power up the tablet via connecting with outside

power supply.

6 CHARGE THIS DEVICE

1. Connect the included USB cable with charger.
2. Plug the charger into AC outlet.
3. When it connects to charger, battery logo indicates



, it indicates that the battery is in charging

4. When battery logo changes into



, it indicates that the battery is fully charged and then disconnect charger from AC outlet.

5. Unplug USB cable on the charger from this device.



7 USING BATTERY

- If the battery keeps unused for a long time or battery is completely discharged, it is normal if it cannot be turned on while being charged. Please charge it for a period and then turn it on.
- Using data service will cause more power consumption and shorten the stand by time.
- The charging time of battery varies with

temperature condition and battery consumption status.

- While this device has low battery, a beep will sound. If it is very low, this device will be switched off automatically.

Note: Do one of the followings to save power:

1. When this device keeps unattended, press POWER key to turn off the LCD.
2. Shorten the standby time: Enter main menu, choose “Settings” > “DEVICE”> “Display” > “Sleep” to select a shorter standby time.
3. Decrease the brightness of LCD display: Enter main menu, choose “Settings” > “DEVICE” > “Display” > “Brightness”, and then drag the slider to adjust it.
4. Change “Live wallpaper” into “Gallery”.
5. Set Bluetooth off: Enter main menu, choose “Settings” > “Wireless & Network” > “Bluetooth”, and then toggle the switch to OFF.
6. Press VOLUME key to decrease the volume.

8 POWER ON/POWER OFF THIS DEVICE

8.1 Power on

Press and hold Power button for three seconds to turn on this device.







Note: Set date, time and time zone.

8.2 Power off

Press and hold Power button for three seconds to turn off this device.

9 ABOUT DESKTOP

The screen is shown as blow:

- A. Print screen : make a quick screenshot and save it to gallery
- B. Back button : go back to previous interface or exit program.
- C. Home button : return to the desktop
- D. Touch screen menu button : select desired item
- E. DP button : enter diagnose and program interface
- F. VIC button : enter system settings

10 CUSTOMIZE YOUR DESKTOP

10.1 Add items on the desktop

On the main menu, hold and press the desired item, the system will automatically enter the desktop and place the icon into the circle.

Hint: If many applications occupy the desktop, hold and press the desired one to move it to other extension desktop.

10.2 Move items on the desktop

1. Hold and press the item to be moved.
2. After a movable circle appears on the screen, drag it to the target location.

10.3 Delete items on the desktop

1. Hold and press the desired item, "X Delete" appears in the upper middle of the screen.
2. Drag the item to "X Delete".
3. When the item and icon turn red and then release it.

10.4 Change your wallpaper

1. Hold and press a blank area on the desktop, a pop-up wallpaper will be shown on the screen.
2. Choose desired wallpaper.
3. Click upper left corner ✓ to set wallpaper.

10.5 Create a folder on the desktop

1. Drag one icon to another icon, the system will create a folder.
2. Input the folder name.

11 ON USING TOUCH SCREEN

- Tap: use your finger to tap desired items to confirm or open it.
- Long-press: press and hold the current interface, icon or input field to open the available operation options.
- Slide: use your finger to slide the screen horizontally or vertically.
- Drag: hold and press the desired item, then drag it to any location.

12 AUTO-ROTATE THE SCREEN

To perform such operations as browsing webpage, viewing images etc., rotate this device, the screen will automatically change the display direction. To disable this function, click “Settings” and click “display” to enter. Unselect the option “Auto-rotate the screen”.

Note: This product application does not support rotating screens.

13 LOCK&UNLOCK

13.1 Lock the screen

- When machine is ON, press POWER key to lock the screen.
- The system will lock the screen automatically after this device remains idle for a long time.

13.2 Unlock the screen

Press POWER key to activate the screen and then drag the lock to “Unlock position.”

14 NOTIFACTION PANEL

The notice panel is used to display some activities,

messages to remind and inform users.

14.1 Turn on the notification panel

1. When a new notification icon appears on the status bar, slide the status bar upwards to open it.
2. In the notification panel, click the desired notification item to open it.

14.2 Turn off the notification panel

Slide the panel upwards, and then specify the notifications as OFF to turn it off.

15 INPUT METHOD

Set input method:

Enter main menu, and then select “Settings”-> “Language and keyboard” to Choose desired input method.

The default input method, Google input can support powerful word stock engine,

Intelligent Google input and multiple keyboard mode.

Android keyboard and Google input method and make input easier.

To start text input mode, please click any text input

entry.

16 HOW TO SET AS AIRPLANE MODE

According to the regulations of some countries or areas, PC device must be turned off before boarding on the airplane.

The way to disable functions of this device is to set it as airplane mode. In this mode, all wireless radio waves will be disabled, including mobile network, Bluetooth and WLAN.

Do one of the followings to enable or disable airplane mode:

Press POWER key and choose “Airplane mode” from the pop-up option menu.

Access the main menu, and choose “Settings” > “WLAN” > “More...” > “Airplane mode”.

II. OTHERS

1 WLAN

This function enables you to enjoy surfing on the Internet and downloading data from the Internet via Wi-Fi.

1.1 Set WI-FI on

1. Enter main menu screen, choose “Settings” > WLAN
2. When the WLAN sign appears blue, it indicates Wi-Fi has been activated already.

Note: To prolong the battery life, please switch Wi-Fi off when it keeps unattended.

1.2 Connect to WLAN

Start WLAN, if this device is within range of WLAN, it can automatically detect and connect to current WLAN, select desired network and input password, then you can surf the Internet by WLAN.

 
2 Browser

You can use any APP based on browse website and network.

2.1 Open browser

Enter main menu screen, tap to the browser. You can choose the desired homepage or input the website address to browse.

1. Tap to input or edit the web link



2.2 Browser webpage

1. Open the browser.
2. Input the web address, and tap "Go" on the keyboard to visit the website.

Tips: Alternatively, you can also tap, and then choose "Bookmarks/History" from the pull-down list to choose the web link you want to access.

3. After a webpage is open, slide the screen with the tip of your finger to view other hidden content.

2.3 After a webpage is open, slide the screen with the tip of your finger to view other hidden content.

There are two ways to zoom in/ zoom out while browsing a webpage.

- to zoom in so that the text on a webpage appears in a column that fits your device's screen, double-tap with the tip of your finger.
- to zoom in manually, place two fingers on the screen and then spread them apart. To zoom out, either double-tap again or place two fingers apart on the screen and then pinch them together.

2.4 Save favorite webpage to bookmark

1. While browsing a webpage, tap Function Menu at the top right and choose "Save to bookmarks".
2. Edit a label for the bookmark.
3. Tap "OK" to confirm and save it.

2.5 Open multiple pages

The browser allows you to open multiple web pages and you can toggle between these pages.

1. While browsing a webpage, tap the Fold Button at the top right and open new window.
2. Another web page will be displayed in the new window.

2.6 Customize Internet settings

While browsing a webpage, choose “Settings” at the top right, you can view or change browser settings, privacy & security setting and advanced setting etc.

3 GALLERY

This option is used to manage pictures and video files.

3.1 Open gallery

Enter main menu screen, tap “Gallery” to access it. The system searches images and videos in this device and SD card automatically, and categorizes it into corresponding folders.

3.2 Browse images

1. Enter main menu screen, tap “Gallery”.
2. Tap the picture folder you want to view.
3. Tap the desired image to browse.

4. Swipe the screen rightwards or leftwards to view the next/previous picture.

4 MUSIC

Music files are stored into 4 categories: Artists, Albums, Songs and Playlist. Tap the desired music to display music.

Tips: While playing, tap back button to switch to other applications and the player will be running in background. Open the status bar and choose the audio file to return to the player screen.

5 CALCULATOR


You can use calculator to operate algorithm of plus, subtract, multiply and divide, and function operation of sin, cos, tan and log.

6 CALENDAR

This function lets you view calendar or create to-do events.



Enter main menu screen, tap "Calendar". Swipe up and down to switch to month;

Tap someday, the followings can be done.


Tap  to refresh, search, and hide control and setting.

7 ALARMS

7.1 Add an alarm

1. Enter main menu, and tap “Alarm”.
2. Tap  to add alarms.
3. Set the detailed information of the alarm.
4. Tap  to pack up the alarm to store the setting.

7.2 Delete an alarm

1. Enter main menu, and tap “Alarm”.
2. Tap the desired alarm.
3. Tap  to delete it.






Tips: After the alarm is deleted, you can choose to cancel delete alarm on the right side from the option menu.

7.3 Customize your alarm

1. Enter main menu, and tap “Alarm”.
2. Tap menu button, and then choose “Settings”.
3. Alarm volume: Set the volume of alarms.
4. Set the duration of alarm.





5. Set the duration the alarm snooze next time.
6. Volume buttons: set what these buttons function when pressed during an alarm.
7. Set default ringtone: choose the alarm ringtone.


7.4 Countdown set

1. Enter the main menu to tap  to choose count down alarm;
2. Set the time of countdown;
3. Tap  to add count down alarm, and tap  to delete alarm;
4. Tap  to start count down, and tap  to stop count down;

Notice: after the countdown ends, the device will ring alarm sound.

7.5 Second clock setting

1. Enter the main menu to tap  to choose second clock;
2. Tap  to start second and clock, and tap  to stop second clock;
3. Tap  to reset second time;

4. Tap  on the right side to display the smaller unit counter of second clock;

8 ES FILE VIEWER

Open ES file viewer, and enter main menu.

You can manage SD card, browse by category and browse all music, picture, video, document application, package, favorites, installation package, management recommended through catalogue.

9 BRIGHTNESS

1. Enter main menu screen, tap “Settings” > “Display”.
2. Tap “Brightness” to enter.
3. Drag the slider leftward to lower the screen brightness. Drag the slider rightward to increase the screen brightness.

10 SET SCREEN LOCK

You can set the screen lock pattern, and when the screen is locked, it will not be unlocked until you draw the right pattern.

1. Enter main menu screen, tap “Settings” > “Security” > “Screen lock”.

2. There are several options available for your selection. To define a pattern, follow the on-screen prompts to plot your pattern.
3. After drawing, tap “Confirm” to save your setting.

11 APPLICATION

11.1 View installed applications

1. Enter main menu screen, tap “Settings” > “Apps” to open the downloaded application list.
2. The following operations are available:
 - Tap the desired one to view the application information.
 - Tap and choose “Sort by size” from the pull-down menu, the applications will be displayed in size order automatically.
 - Tap and choose “Reset app preferences” from the pull-down menu, a confirmation dialog box will appear on the screen, tap “Reset apps” to proceed; tap “Cancel” to abort.
3. To uninstall an application, tap it to enter the application information screen.

4. Tap “Uninstall” and then follow the on-screen instructions to finish it.

11.2 View the running applications

1. Enter the main menu screen, tap “Settings” > “Apps”. Scroll the screen from right to left to RUNNING tab to open the currently running application list.

2. The following operations can be done:

- View the currently running applications;
- Tap any one to stop it.

12 LANGUAGE&INPUT METHOD

1. Enter the main menu screen, tap “Settings” > “Language & input”>Tap language.

2. Tap “Language” and choose the desired language in this device.

The setting of input method

The device provides several kinds of input methods. Tap setting before the desired input method.

13 SET DATE&TIME

This device is preset to use the network-provided date, time zone and time.

Note: If Automatic date & time is set as Use network-provided time, date, time and time zone will not be defined.

1. Enter the main menu screen, and tap “Settings” > “Date & time”.
2. Tap “Set date”, and scroll the screen upwards and downwards until the desired numbers appear on the highlight area.
3. Tap “Select time zone”, and choose the desired one from the time zone list. Scroll the screen upwards and downwards to view more.
4. Tap “Set time” and scroll the screen upwards and downwards to adjust the hour and minute. After setting, tap “Done” to confirm.
5. Select or deselect “Use 24-hour format” to switch between 12-hour format and 24-hour format.
6. Tap “Choose date format” to choose the desired date of this device format from the list.

14 RESTORE TO FACTORY SETTINGS

This option enables you to restore this device to the default factory settings.

Once it is reset, all data (including downloaded applications) will be deleted.

Note: Before resetting to factory data, please back up all important data saved in your device.

1. Enter the main menu screen, tap “Settings” > “Backup & reset” > “Factory data reset”.
2. Follow the instructions on the screen to proceed.1.
Enter main menu screen, choose “Settings” > WLAN

15 STORE

Enter the main menu, and tap setting> store check the store situation of the device.

Store the download content in the default browser to the download content list.

 
16 APPS INSTALLATION/ UNINSTALLATION

1. Install: Put the application package under the root directory of SD card, enter “File Manager” and then tap the desired package to start installing.
2. Uninstall: Tap “Settings” > “Apps”, and choose the desired one to uninstall.

III. ONE KEY UPGRADE


1. DETECTION SYSTEM UPGRADE

The system APK automatically detects the version. If there is a version update, a red dot is in the upper right corner of the upgrade button. Click on the upgrade button to prompt “Whether to perform software upgrade”:

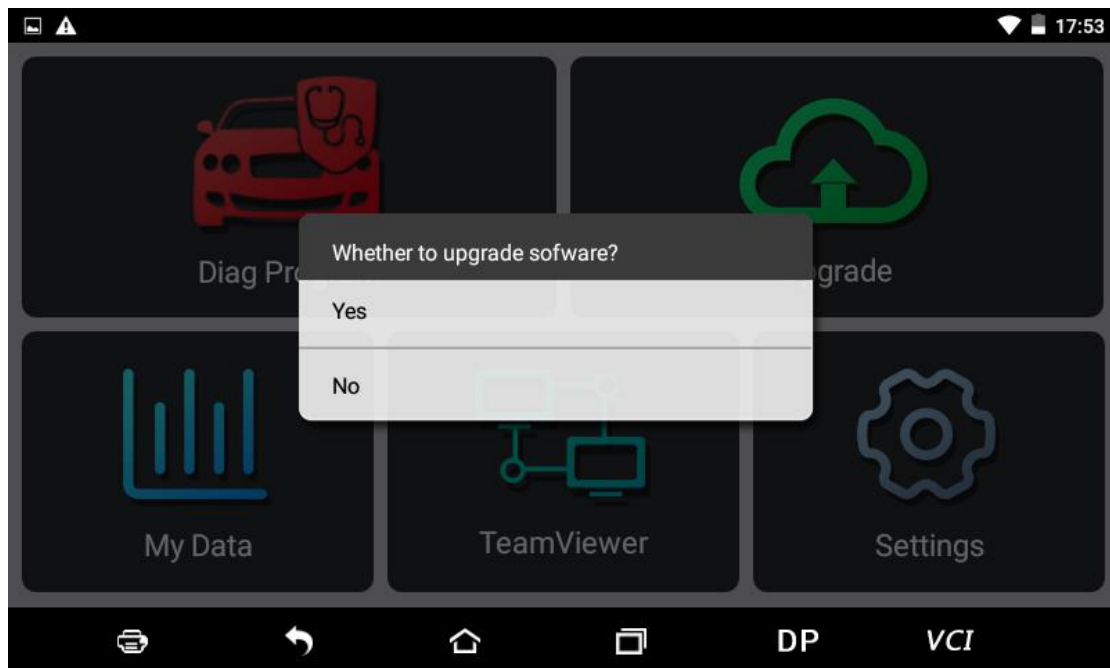


If not, click “No”, you will directly return to the main interface. However you cannot enter the upgrade diagnosis application interface.

 Click on the APK upgrade and it prompts to install:

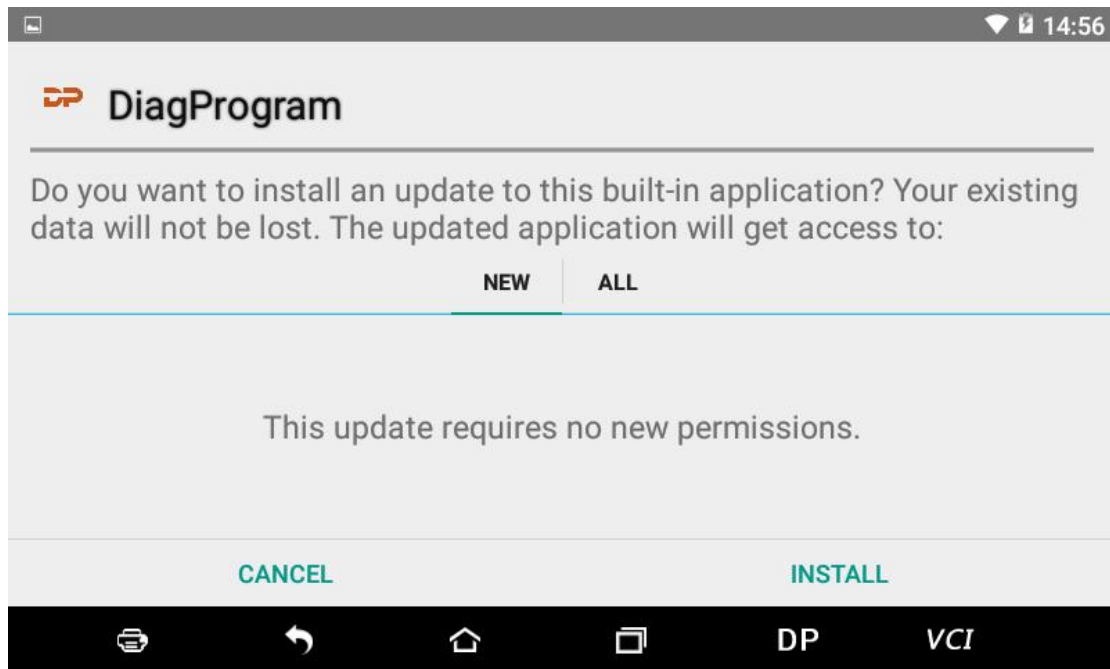

 Click on the installation and perform the program installation, automatically close the program and install. After installation, click on the program image to re-enter the DP program:

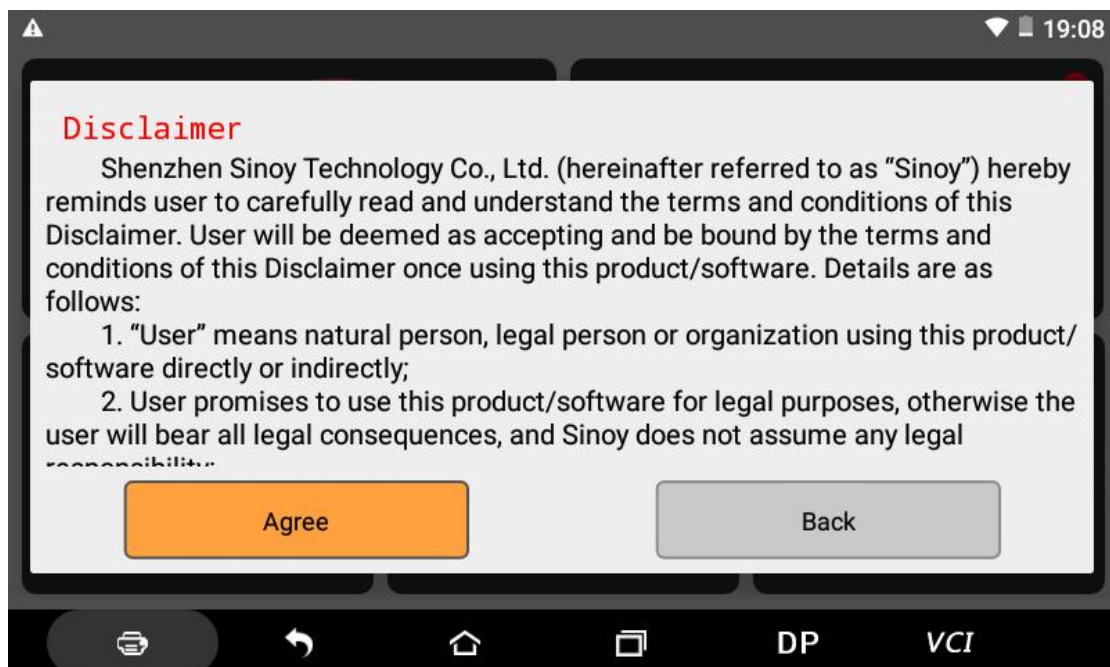

Re-enter the main interface and prompt statement.

(Notes: Ensure Internet connection is normal when updating.)

2. DIAGNOSTIC FUNCTION UPGRADE

Download and upgrade software by “One Key Upgrade”



The screenshot shows a mobile application interface for software upgrades. At the top, there is a header bar with the word 'Upgrade' on the left and a search bar on the right containing the text 'SN:956499990015'. Below the header is a table with the following columns: 'Software name', 'Current version', 'Downloadable', and '0/57'. A 'Bulk update' button is located in the top right corner of the table area. The table lists several software components, all of which are 'Ready to download' and have a 'Downloadable' status of '30.x.x' or '32.x.x'. The components listed are: ALFAROMEODS IMMO, AUDI ODO, BMW ODO, BMWDS IMMO, BORGWARD IMMO, BRILLIANCE IMMO, and BYD IMMO. At the bottom of the screen, there is a navigation bar with icons for home, back, and forward, and the text 'DP' and 'VCI'.

<input type="checkbox"/>	Software name	Current version	Downloadable	0/57	Bulk update
<input type="checkbox"/>	ALFAROMEODS IMMO	--	32.53	Ready to download	
<input type="checkbox"/>	AUDI ODO	--	32.04	Ready to download	
<input type="checkbox"/>	BMW ODO	--	30.07	Ready to download	
<input type="checkbox"/>	BMWDS IMMO	--	30.38	Ready to download	
<input type="checkbox"/>	BORGWARD IMMO	--	30.19	Ready to download	
<input type="checkbox"/>	BRILLIANCE IMMO	--	30.53	Ready to download	
<input type="checkbox"/>	BYD IMMO	--	30.45	Ready to download	

Tap main screen “batch update”, start downloading and upgrading

Upgrade					SN:956499990015
<input checked="" type="checkbox"/>	Software name	Current version	Downloadable	3/60	Bulk update
<input checked="" type="checkbox"/>	DISPLAY	--	10.20	Upgrade completed	
<input checked="" type="checkbox"/>	ALFAROMEODS IMMO	--	32.53	81.9% [English 1/3]	
<input checked="" type="checkbox"/>	AUDI ODO	--	32.04	99.4% [English 1/3]	
<input checked="" type="checkbox"/>	BENZ ODO	--	30.46	Upgrade completed	
<input checked="" type="checkbox"/>	BESTURN ODO	--	30.95	Upgrade completed	
<input checked="" type="checkbox"/>	BMW ODO	--	30.07	2.5% [English 3/3]	
<input checked="" type="checkbox"/>	BMWDS IMMO	--	30.38	-0.0% [English]	

If a software needs to be canceled, just tap the corresponding Check Box. As following photo shown:

Upgrade					SN:956499990015
<input type="checkbox"/>	Software name	Current version	Downloadable	3/57	Bulk update
<input type="checkbox"/>	ALFAROMEODS IMMO	--	32.53	Ready to download	
<input checked="" type="checkbox"/>	AUDI ODO	--	32.04	Ready to download	
<input checked="" type="checkbox"/>	BMW ODO	--	30.07	Ready to download	
<input checked="" type="checkbox"/>	BMWDS IMMO	--	30.38	Ready to download	
<input type="checkbox"/>	BORGWARD IMMO	--	30.19	Ready to download	
<input type="checkbox"/>	BRILLIANCE IMMO	--	30.53	Ready to download	
<input type="checkbox"/>	BYD IMMO	--	30.45	Ready to download	

After the upgrade is completed, you can enter the diagnostic programming to view the upgrade version

description and the version number, and you can perform related diagnostic operations and functions. (Notes: Ensure Internet connection is normal when updating. Besides, because of many software, it may take several minutes, please wait patiently.)

 
IV. DIAGNOSIS INSTRUCTION

1 CONNECT VCI CONNECTOR

Procedure to connect VCI connector:

1. Locate vehicle's DLC socket. The DLC (Data Link Connector or Diagnostic Link Connector) is the standardized 16-pin connector where diagnostic code readers interface with the vehicle's on-board computer. The DLC is usually located 12 inches from the center of the instrument panel (dash), under or around the driver's side for most vehicles, as shown below. If Data Link Connector is not located under dashboard, a label should be there telling location. For some Asian and European vehicles, the DLC is located behind the ashtray and the ashtray must be removed to access the connector. If the DLC cannot be

found, refer to the vehicle's service manual for the location.

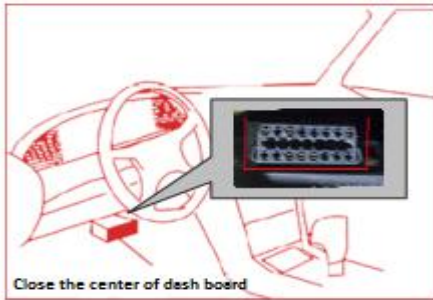

2. Plug the diagnostic connector into the vehicle's DLC socket (It is suggested to use the OBD 2 extension cable to connect VCI connector and DLC socket.). For non-16PIN DLC socket, please select the corresponding non-16 pin connector adapter, then plug the non-16pin end of the adapter into the DLC socket, and then connect the standard 16pinend VCI connector.

2 DIAGNOSIS FLOWCHAT

 
For new users, please follow the 3.1 to get familiar with and start using this device.

Connect the diagnostic connector →user registration→user login→download or upgrade software→select function or vehicle type→proceed diagnosis

3 USER REGISTRATION

3.1 User Registration

Click to **VCI** enter diagnostic software, select “the user information” in “Settings” menu, and then enter user registration window. As following photo shown:

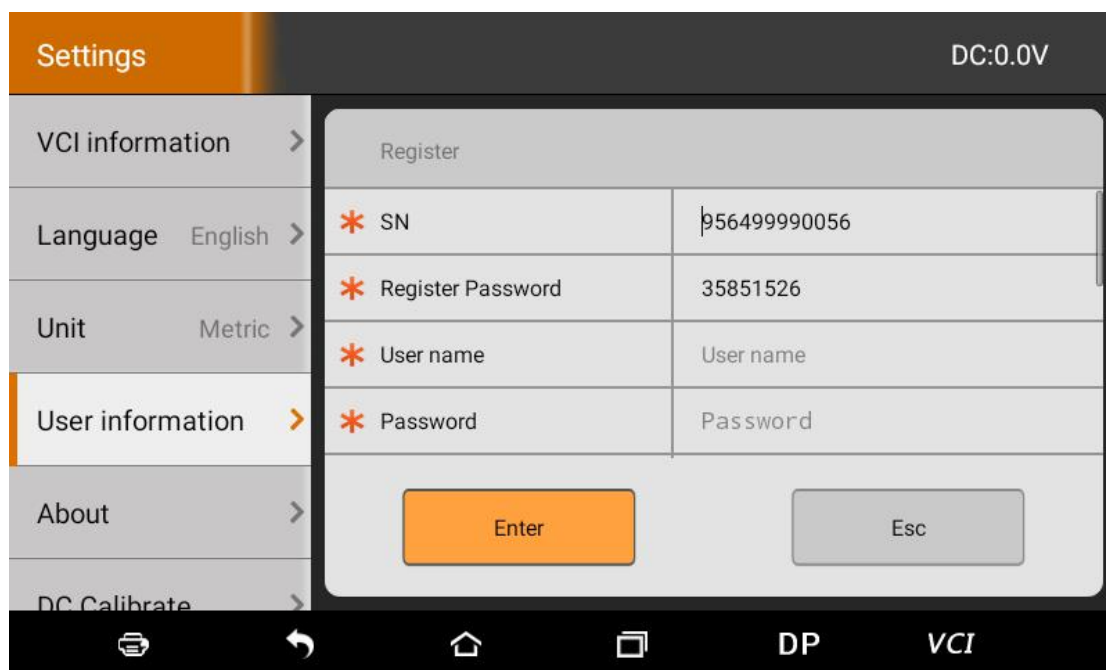


The screenshot shows the 'Settings' menu with 'User information' selected. The 'Register' window is open, displaying a table with registration fields. The 'SN' field is pre-filled with 'p56499990056'. The 'Register Password' field is pre-filled with '35851526'. The 'User name' and 'Password' fields are empty. Below the table are 'Enter' and 'Esc' buttons. The bottom navigation bar shows 'DP' and 'VCI' options.


Register	
* SN	p56499990056
* Register Password	35851526
* User name	User name
* Password	Password

Fill in the information in each field (Items with * must be filled). After inputting, tap “OK”

 If you have registered to be a member, click “the user information” to enter user login page, as following picture shown:

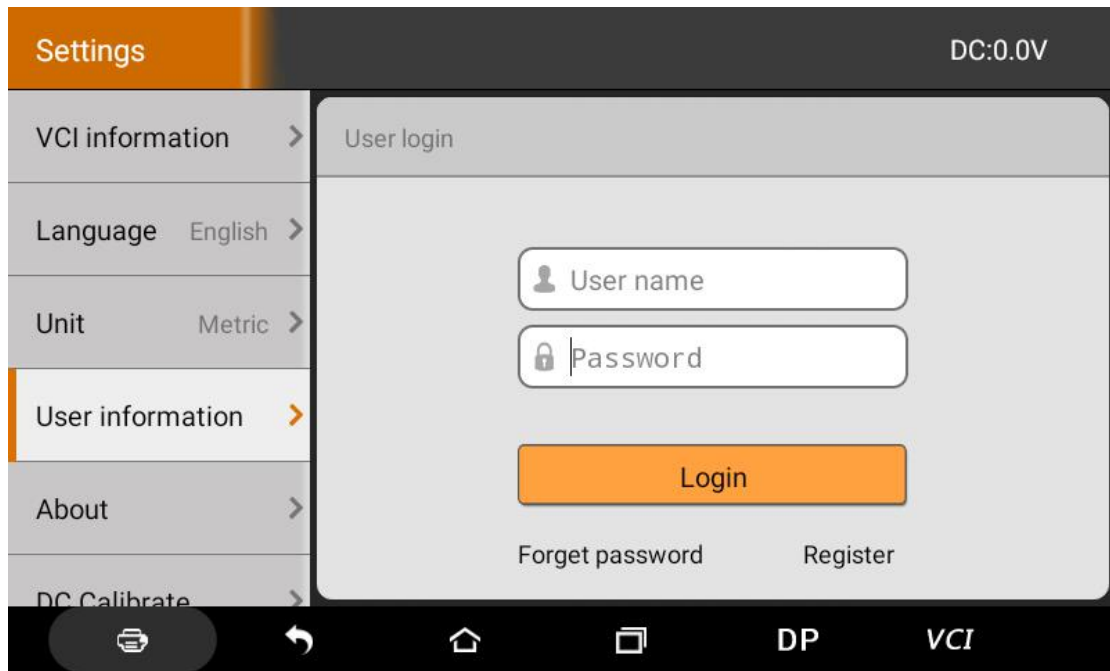

 4 DIAGNOSTIC SOFTWARE MAIN INTERFACE INTRODUCTION

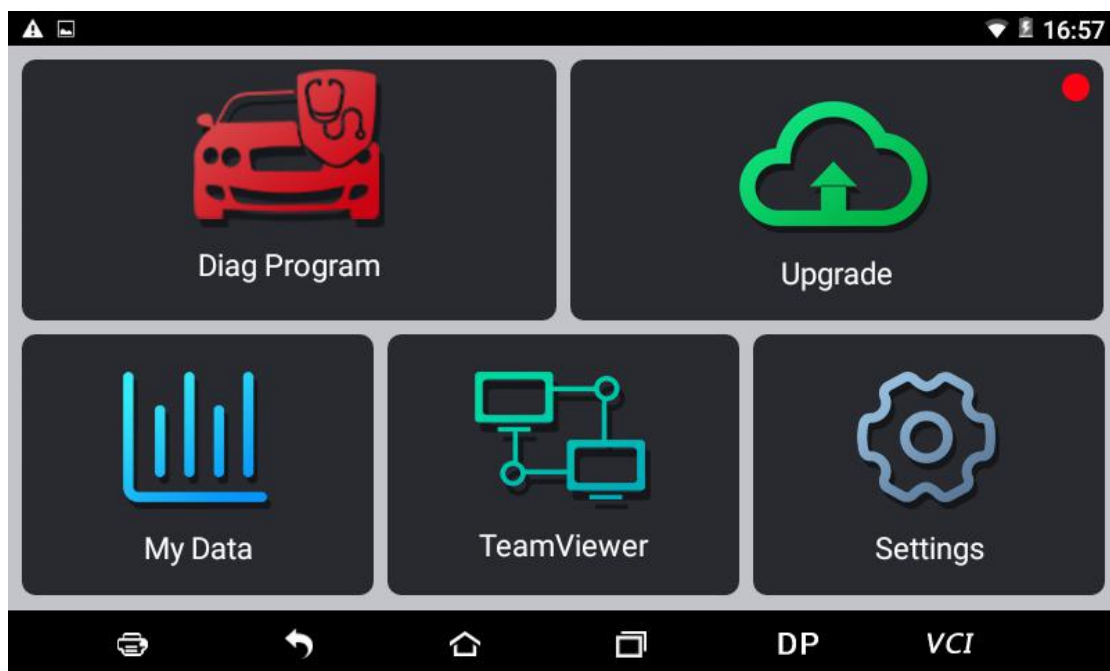

Function menu included as follows:

Diag Program: Operate as a diagnostic tool.

Upgrade: To download diagnostic software or upgrade diagnostic software to the latest version.

 
My Data: Easy to handle the renewing data..

Settings: It includes VCI information, language, unit, data records, user information, about.

Remote assistance: Realize remote hosting operation.


5 START DIAGNOSING

Tap on the main menu screen, and then choose “Diag Program” to enter the function selection and vehicle selection page. As following photo shown:

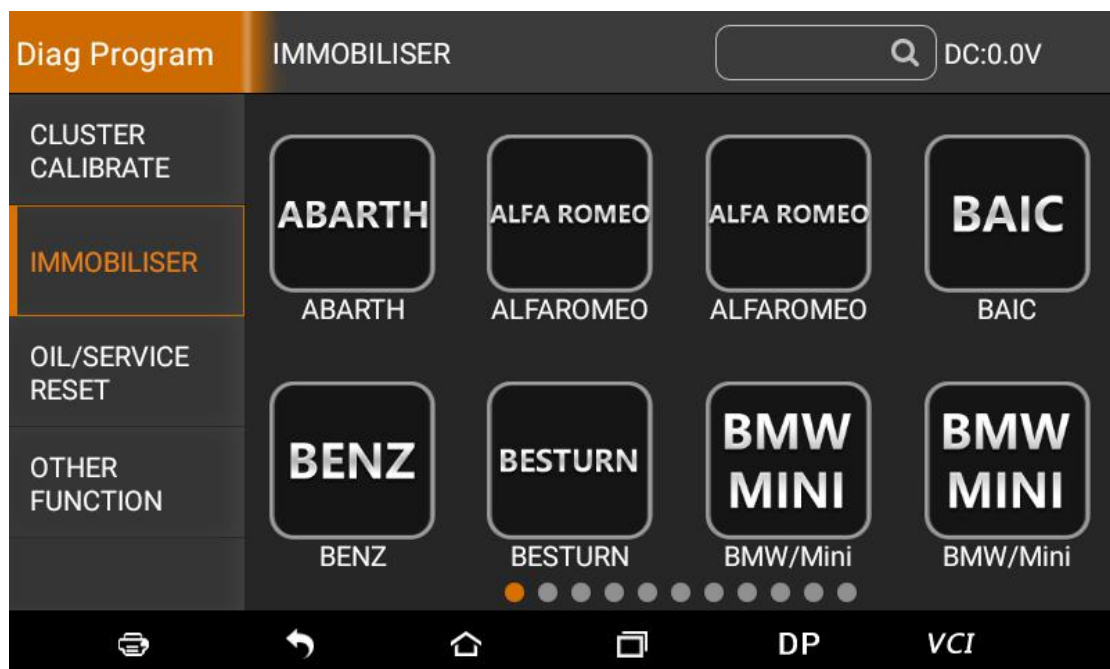


Hereinafter, take OBDII for example, to introduce how to start diagnosing.

 Tap "OBDII", and tap "OBDII" icon. As following photo shown:

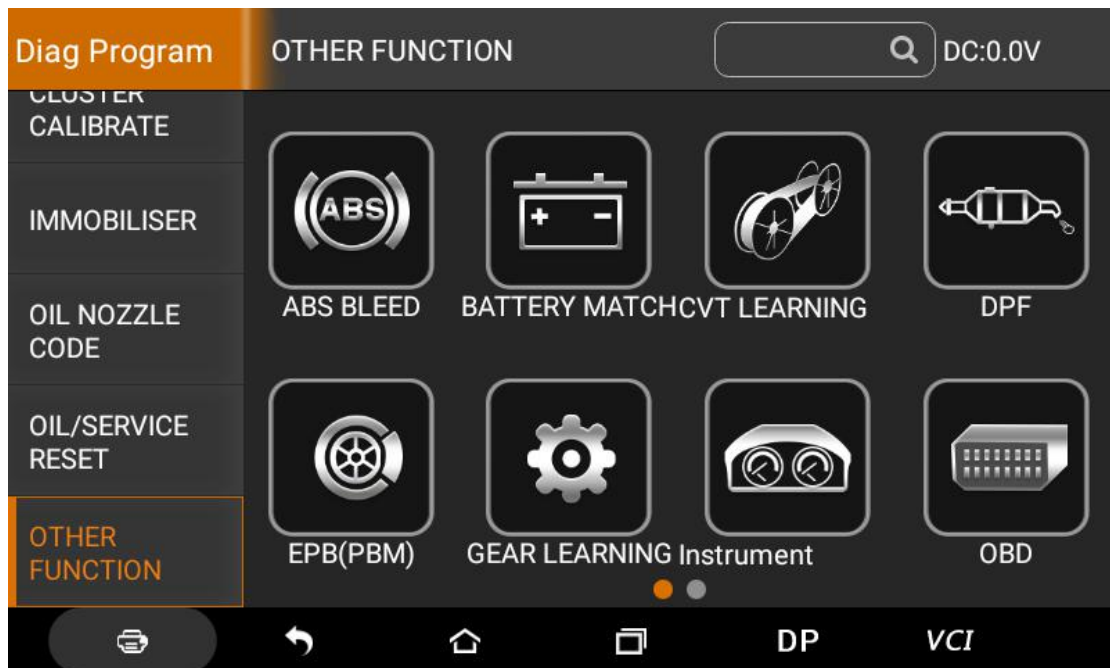

 
To select software version, as following photo shown:

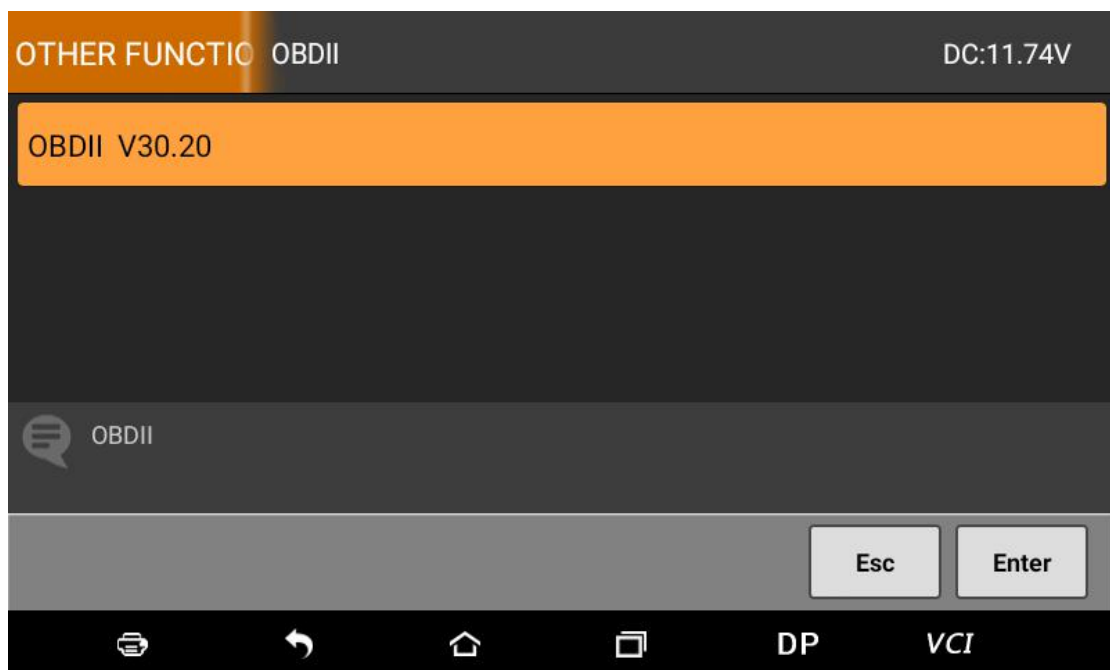

To enter diagnostic function menu, as following photo shown:



 To select AUTO SCAN, as following photo shown:

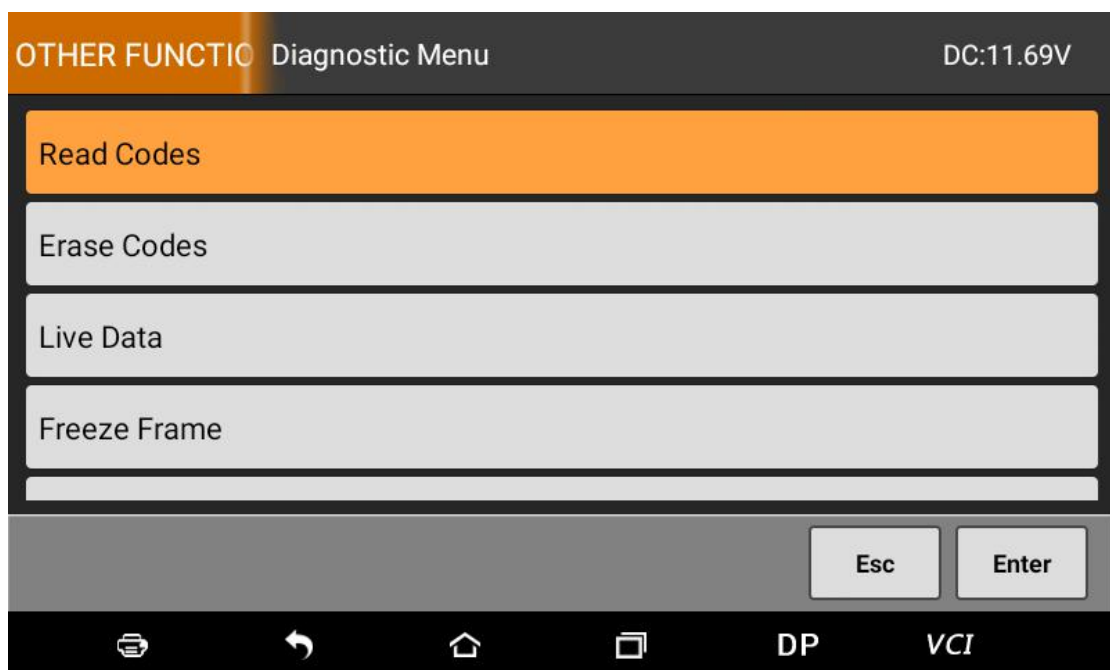

5.1 Read vehicle information

Tap “Read vehicle information”, as following photo shown:


OTHER FUNCTION AUTO SCAN		DC:11.69V
Name	Value	
ECU Mode	\$11	
Vehicle Identification Number	LVVDA11B6AD028146	
Esc		

5.2 Read trouble code


Tap “Read trouble code”, as following photo shown:

OTHER FUNCTION AUTO SCAN		DC:11.71V	
DTC id	DTC description	State	Other
P2122	Throttle/Pedal Position Sensor/Switch D Circuit Low		
P2127	Throttle/Pedal Position Sensor/Switch E Circuit Low		
P2104	Throttle Actuator Control System - Forced Idle		
P2110	Throttle Actuator Control System - Forced Limited RPM		
P0122	Throttle/Pedal Position Sensor/Switch A Circuit Low		
Esc			

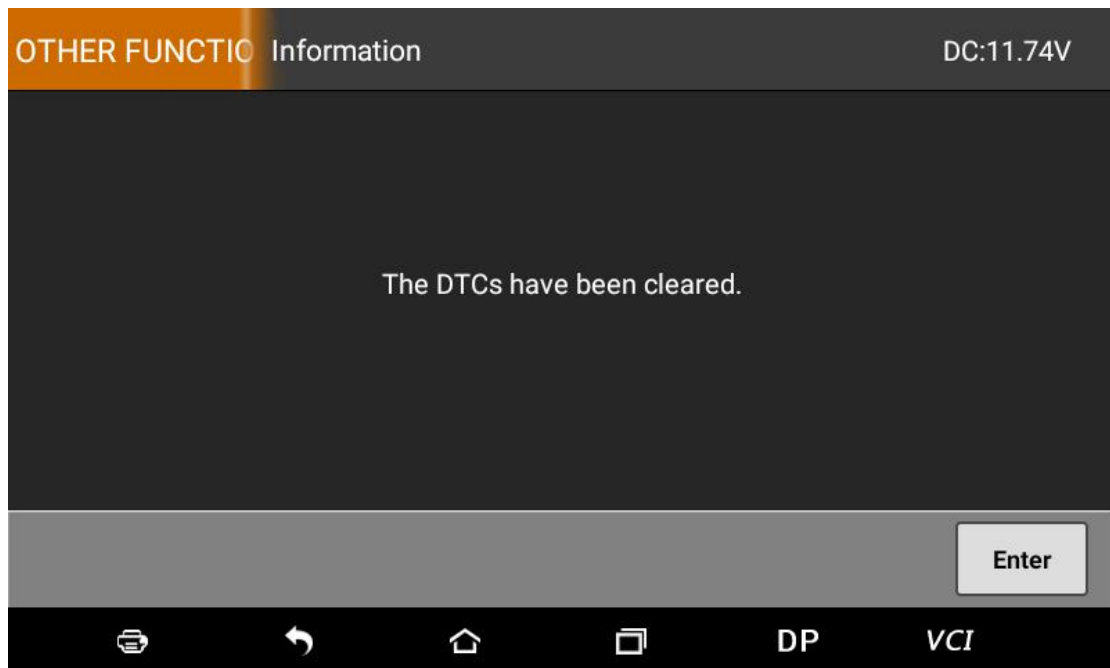 

 
5.3 Clear trouble code

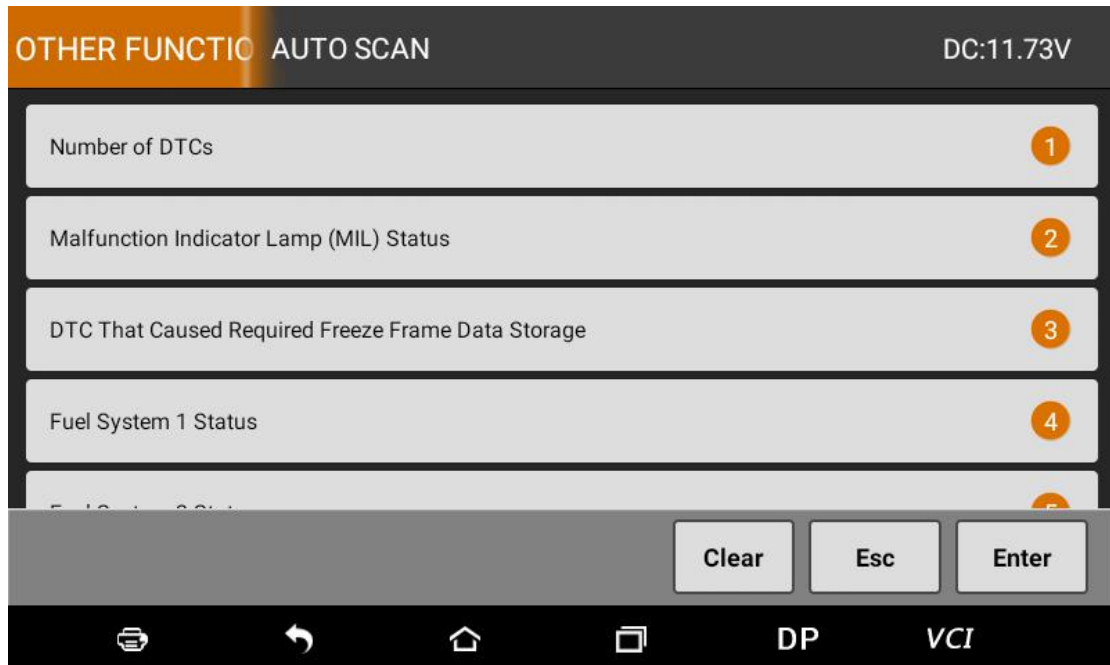

5.4 Read data stream



OTHER FUNCTION		AUTO SCAN		DC:11.71V	
NO.	Data stream name	Value	Range	Unit	
001	Number of DTCs	2			
002	Malfunction Indicator Lamp (MIL) Status	MIL ON			
003	DTC That Caused Required Freeze Frame Data Storage	P0122			
004	Fuel System 1 Status	Not Used			
005	Fuel System 2 Status	Not Used			

 
Esc

🖨
↶
🏠
📄
DP
VCI

6 SYSTEM SETTINGS

It includes VCI information, language, unit, data records, user information and about etc.


6.1 VCI information

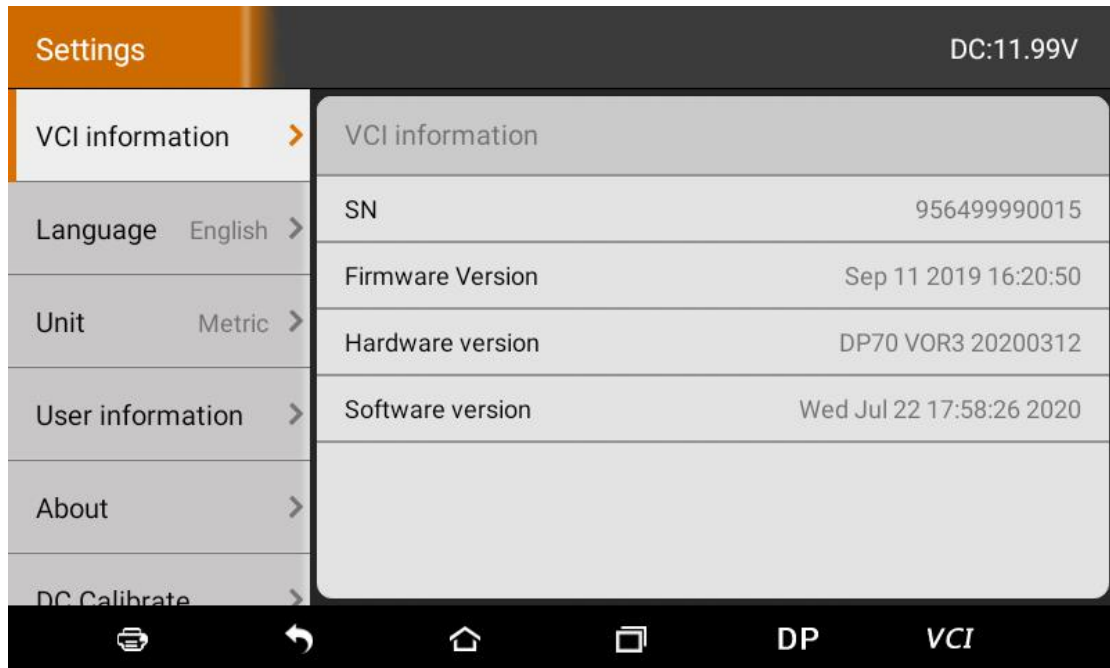

6.2 Language



 
6.3 Unit

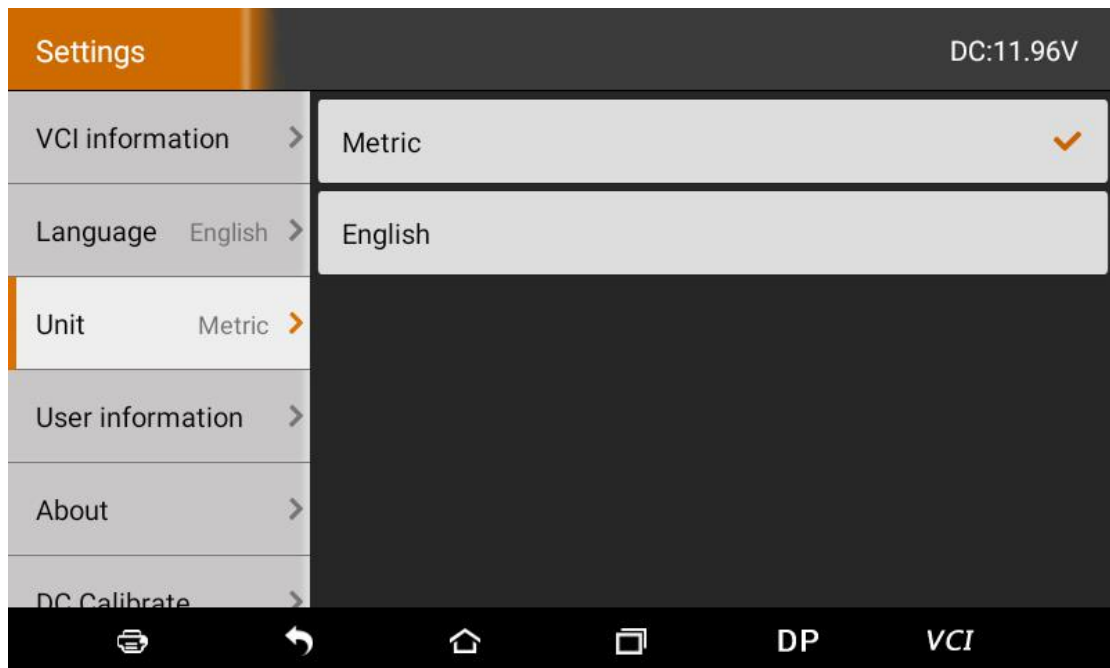

6.4 User information

It used to set and manage user's information.

 6.4.1 User login

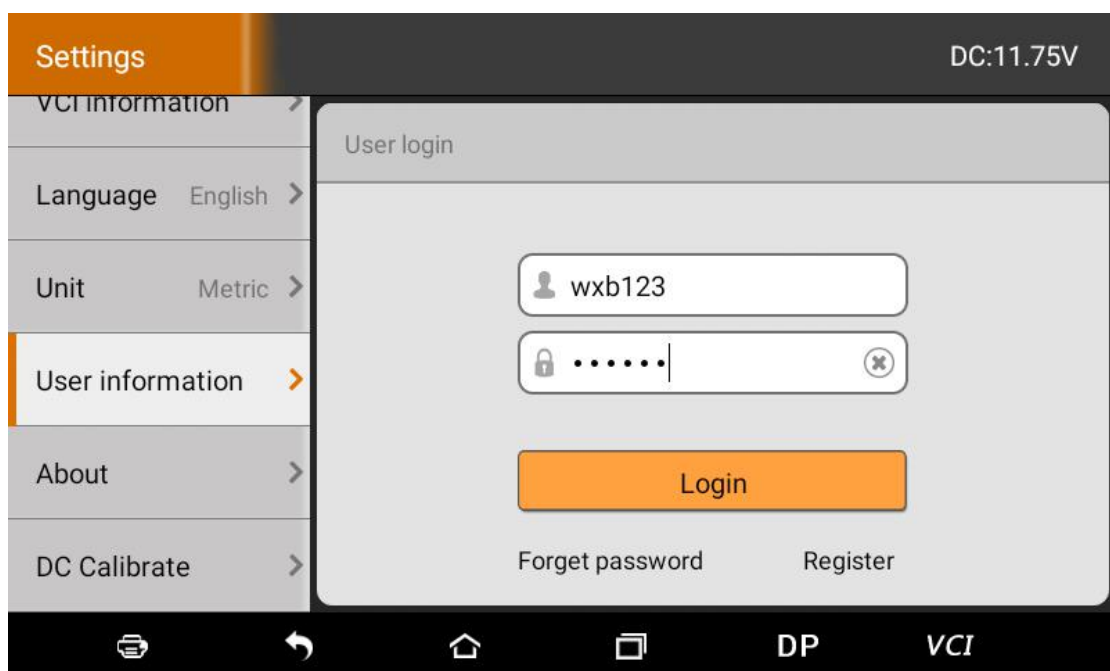

6.4.2 User registration

Settings DC:11.99V

VCI information >

Language English >

Unit Metric >

User information >

About >

DC Calibrate >

Register

* SN	956499990015
* Register Password	22182879
* User name	User name
* Password	Password

Enter Esc

DP VCI

6.4.3 Forget password

Settings DC:11.98V

VCI information >

Language English >

Unit Metric >

User information >

About >

DC Calibrate >

Password recover

Registered email Get verification

Verification code

New password

Confirm password

Enter

User login Register

DP VCI

6.4.4 Registration information

Settings DC:11.98V

User information

* SN	956499990015
* User name	wxb123
* Email	dghkgf@qq.com
Company Name	
Address	

info modification Password mod Log out

6.4.5 Info modification


Settings DC:11.98V

info modification


* SN	956499990015
* User name	wxb123
* Email	dghkgf@qq.com
Company Name	Company Name
Address	Address

Enter Esc

 6.4.6 Modify password

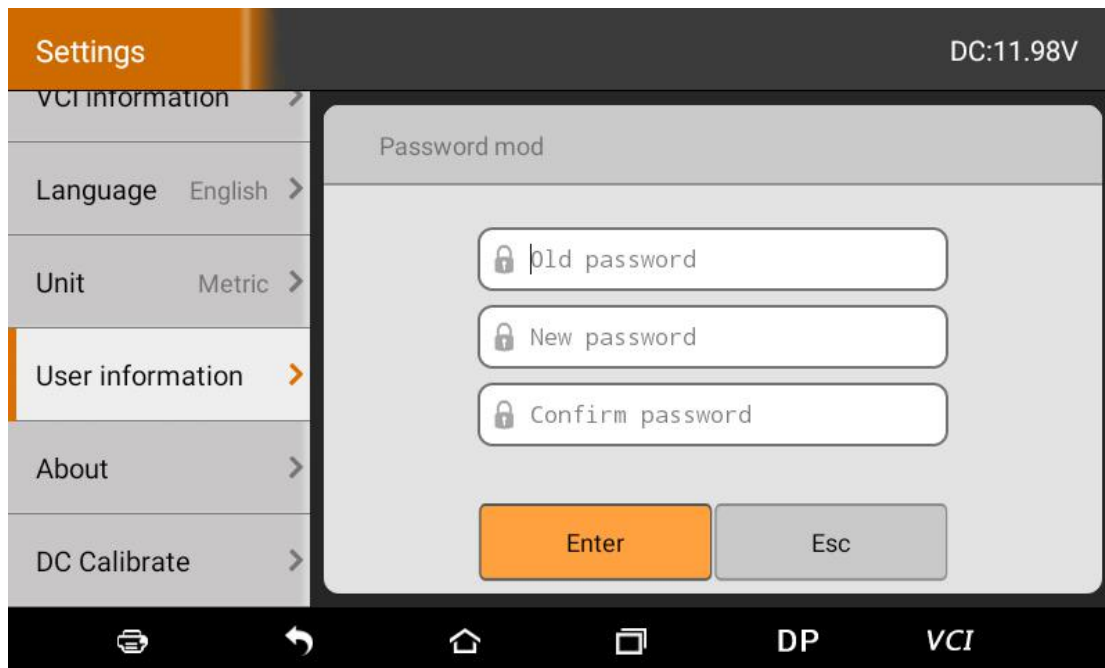

 
6.5 About

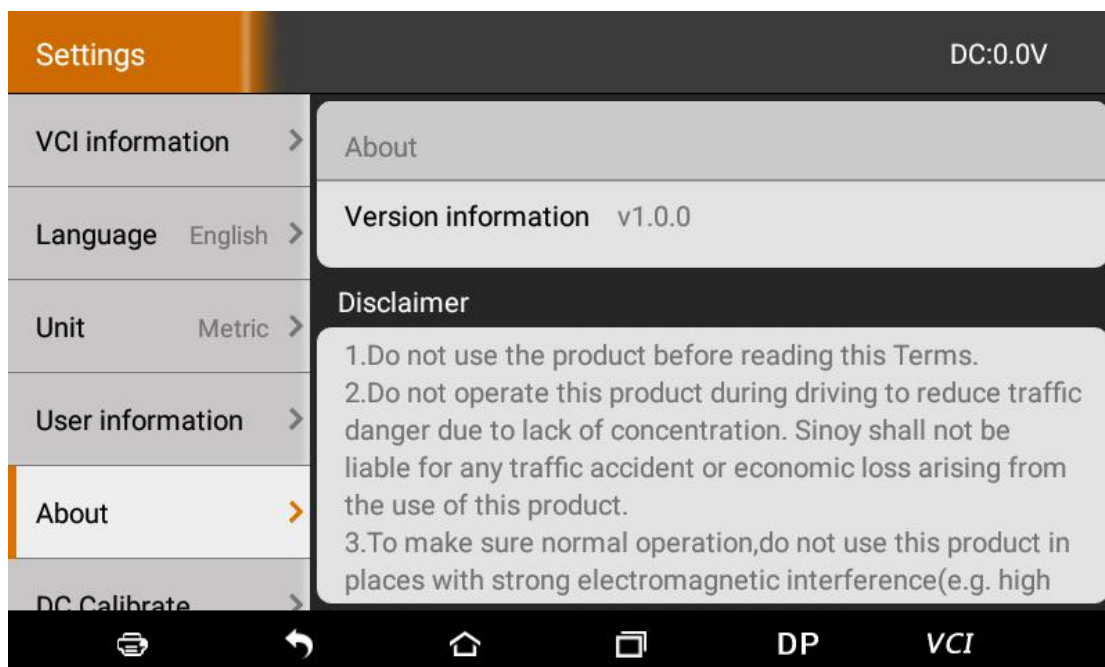


Display software version updates and product announcements.

6.6 DC Calibrate

 Voltage calibration is performed when the voltage is abnormal:

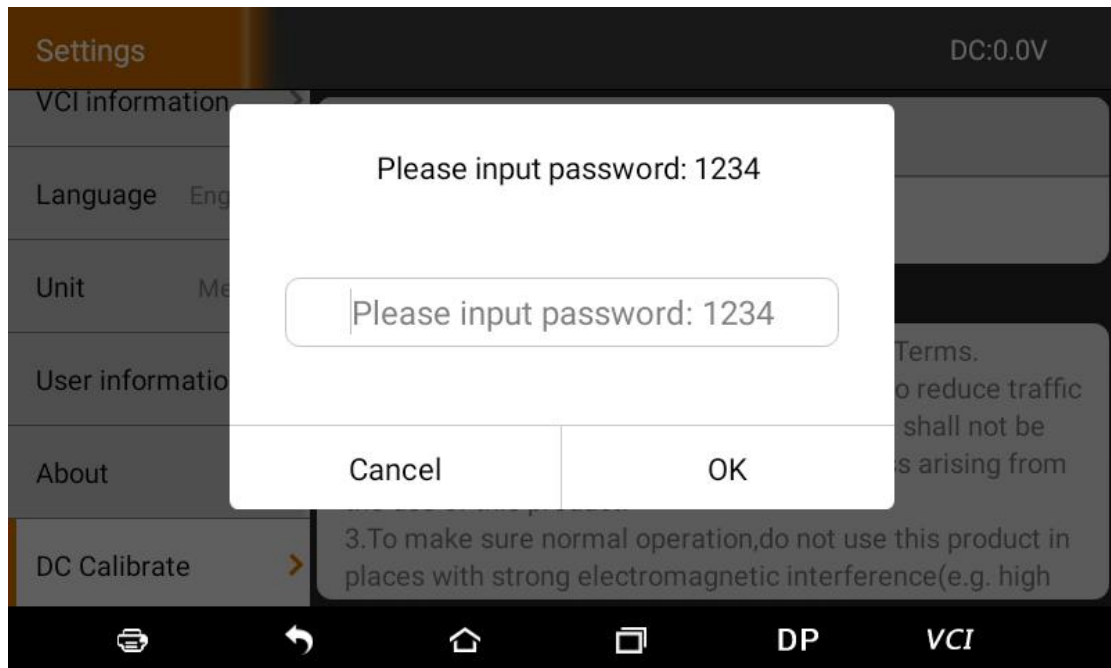

Enter the PinCode to access:

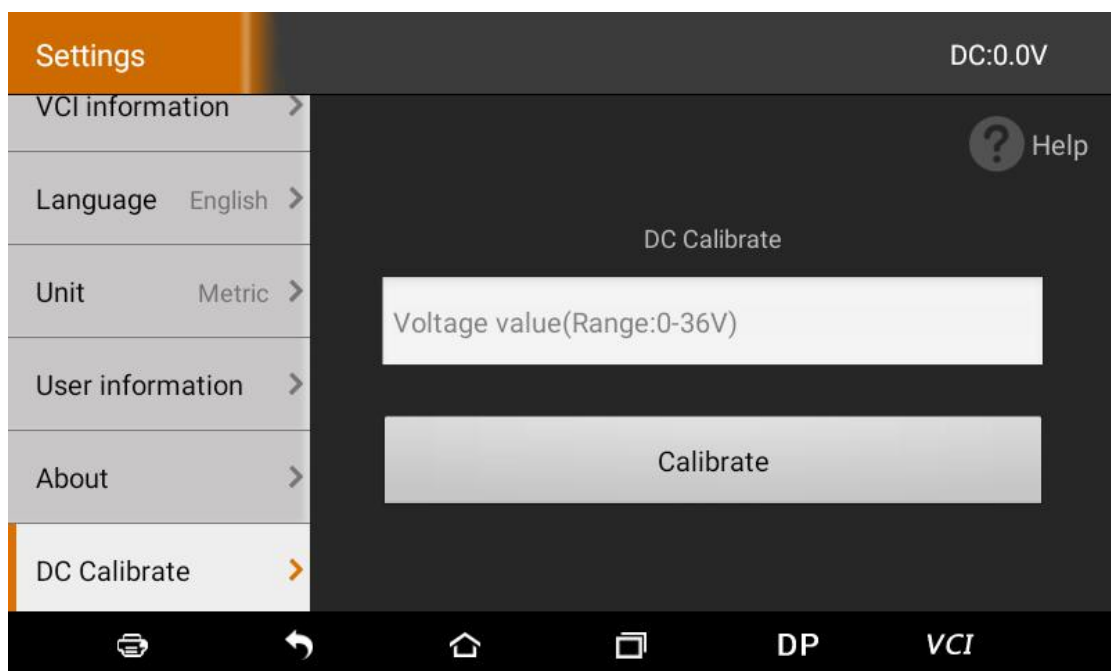 


Enter the correct voltage for calibration. When it is completed, display the correct voltage value in the

upper right corner of the diagnostic programming interface.

7 REMOTE ASSISTANCE

 This application can realize remote hosting operation via the Third Party's software: Quick Support.

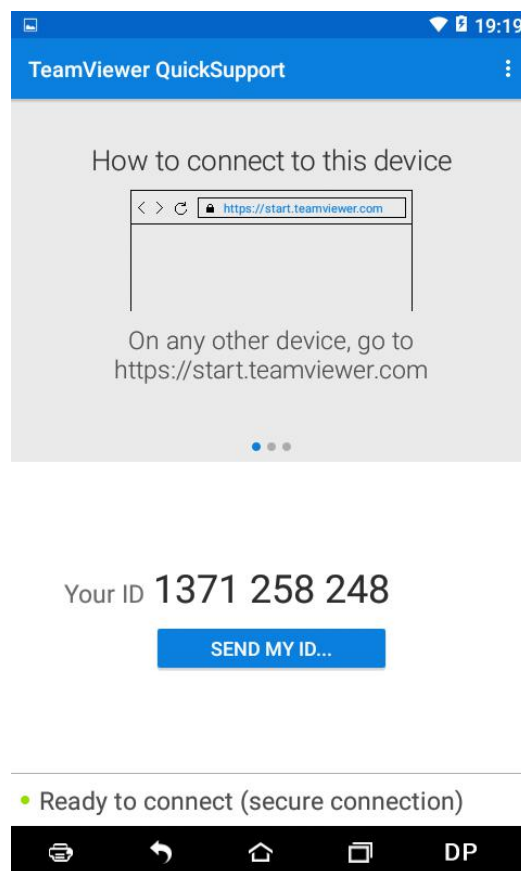

FCC Caution.

(1)§ 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Changes or modification warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.