

刀模线不印刷


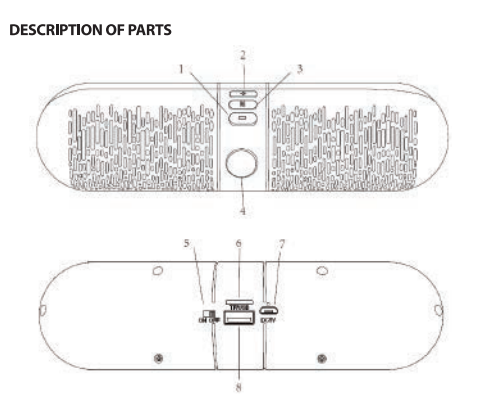
型号：5B409BT

尺寸：折后 70*100mm




印刷材质及要求：80g 书纸，单色正反面印刷，5 折页

美工：钟雪梅

正面印刷

 <p>FDJAMBAR Bluetooth® Speaker</p> <p>INSTRUCTION MANUAL</p> <p>PLEASE READ ALL INSTRUCTIONS CAREFULLY & RETAIN FOR FUTURE USE</p> <p>FC BC</p> <p>1</p>	<p>Getting Started Remove the unit from the box. Remove any packaging from the product. Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.</p> <p>Package Contents JAMBAR Speaker USB Charging & 3.5mm auxiliary 2 in 1 cable Instruction manual</p> <p>IMPORTANT SAFETY INFORMATION</p> <ol style="list-style-type: none"> Read all instructions before using this product. Do not leave this product unattended while connected to the power supply. Do not immerse in water or any other liquids. Do not use if unit has been dropped or damaged in any way. Repairs to electrical equipment should only be performed by qualified personnel. Improper repairs may place user at serious risk. Place unit on sound, even surface, free of vibrations and away from sources of heat. Do not use with wet hands. Do not put objects into openings. Keep free of dust, lint, hair etc. Do not use this unit for anything other than its intended use. Keep this product out of reach of children. This product is not a toy. Do not play music at excessive levels especially near children, as damage to hearing may occur. <p>2</p>	<p>DESCRIPTION OF PARTS</p>  <table border="1"> <tr> <td>1</td> <td>Skip Backward / Decrease Volume</td> <td>6</td> <td>TF Card Slot</td> </tr> <tr> <td>2</td> <td>Skip Forward / Increase Volume</td> <td>7</td> <td>USB Charging Port</td> </tr> <tr> <td>3</td> <td>Mode Button</td> <td>8</td> <td>USB Slot</td> </tr> <tr> <td>4</td> <td>Play & Pause</td> <td></td> <td></td> </tr> <tr> <td>5</td> <td>ON/OFF Switch</td> <td></td> <td></td> </tr> </table> <p>3</p>	1	Skip Backward / Decrease Volume	6	TF Card Slot	2	Skip Forward / Increase Volume	7	USB Charging Port	3	Mode Button	8	USB Slot	4	Play & Pause			5	ON/OFF Switch			<p>INSTRUCTIONS FOR USE</p> <p>Charging the speaker For best results, fully charge the speaker before use.</p> <ol style="list-style-type: none"> Connect the USB cord (included) to the charging port of the speaker and insert the other end into a port on your computer or similar suitable power source. The Red LED turns on, indicating that the battery is being charged. Once it is fully charged, the Red LED will turn off. It takes about 2-3 hours to charge the speaker fully. <p>Turn On/Off the Speaker</p> <ol style="list-style-type: none"> To Turn "ON", slide the "ON/OFF" switch to the ON Position. To Turn "OFF", slide the "ON/OFF" switch to the OFF Position. <p>Pairing your device with Bluetooth Speaker – Your Bluetooth Speaker can wirelessly stream audio from any Bluetooth enabled device within 30 Feet. Simply follow the below steps.</p> <ol style="list-style-type: none"> Turn ON the speaker. You would hear the indication tone. The speaker is now in pairing mode. Turn on the Bluetooth on your Mobile Phone or Tablet or Computer. It will search for various devices. The pairing name of our Bluetooth Speaker is "JAMBAR", pair it with this device. If required, enter the password '0000' to confirm to finalize pairing. Once paired successfully, you would hear an indication tone. If you fail to pair it within the time frame or you want to pair it with a new device please follows the steps outlined above. <p>Select your favorite song at the Bluetooth device and music would now stream through Bluetooth speaker. (Note: Speaker will automatically pair with previously paired devices)</p> <p>4</p>	<p>Talking using the Bluetooth Speaker Please ensure that your cell phone is paired with the Bluetooth Speaker to use the below functions.</p> <table border="1"> <thead> <tr> <th>Function</th> <th>Operation</th> <th>Button</th> </tr> </thead> <tbody> <tr> <td>Answer Incoming Call</td> <td>Incoming Call</td> <td>Press the iHip button(4) once to answer an incoming call.</td> </tr> <tr> <td>End Call</td> <td>Incoming Call</td> <td>After your phone conversation, short press the iHip button(4)</td> </tr> <tr> <td>Volume Increase</td> <td>During a call</td> <td>Long press on the + button will increase the volume</td> </tr> <tr> <td>Volume Decrease</td> <td>During a call</td> <td>Long press on the - button will decrease the volume</td> </tr> <tr> <td>Redial last number</td> <td>Standby mode and connected to a device</td> <td>Short press the iHip button(4) twice</td> </tr> </tbody> </table> <p>Listening to Music Wirelessly Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Speaker to stream music wirelessly. Once it is paired, play music from your device.</p> <table border="1"> <thead> <tr> <th>Function</th> <th>Operation</th> <th>Button</th> </tr> </thead> <tbody> <tr> <td>Increase Volume</td> <td>Playing music</td> <td>A long press on the + button(2) once will increase the volume</td> </tr> <tr> <td>Decrease Volume</td> <td>Playing music</td> <td>A long press on the - button(1) once will decrease the volume</td> </tr> <tr> <td>Pause</td> <td>Playing music</td> <td>Short press iHip button(4) once to pause the music</td> </tr> <tr> <td>Play</td> <td>Pause</td> <td>Short press iHip button(4) once resume the music</td> </tr> </tbody> </table> <p>5</p>	Function	Operation	Button	Answer Incoming Call	Incoming Call	Press the iHip button(4) once to answer an incoming call.	End Call	Incoming Call	After your phone conversation, short press the iHip button(4)	Volume Increase	During a call	Long press on the + button will increase the volume	Volume Decrease	During a call	Long press on the - button will decrease the volume	Redial last number	Standby mode and connected to a device	Short press the iHip button(4) twice	Function	Operation	Button	Increase Volume	Playing music	A long press on the + button(2) once will increase the volume	Decrease Volume	Playing music	A long press on the - button(1) once will decrease the volume	Pause	Playing music	Short press iHip button(4) once to pause the music	Play	Pause	Short press iHip button(4) once resume the music
1	Skip Backward / Decrease Volume	6	TF Card Slot																																																						
2	Skip Forward / Increase Volume	7	USB Charging Port																																																						
3	Mode Button	8	USB Slot																																																						
4	Play & Pause																																																								
5	ON/OFF Switch																																																								
Function	Operation	Button																																																							
Answer Incoming Call	Incoming Call	Press the iHip button(4) once to answer an incoming call.																																																							
End Call	Incoming Call	After your phone conversation, short press the iHip button(4)																																																							
Volume Increase	During a call	Long press on the + button will increase the volume																																																							
Volume Decrease	During a call	Long press on the - button will decrease the volume																																																							
Redial last number	Standby mode and connected to a device	Short press the iHip button(4) twice																																																							
Function	Operation	Button																																																							
Increase Volume	Playing music	A long press on the + button(2) once will increase the volume																																																							
Decrease Volume	Playing music	A long press on the - button(1) once will decrease the volume																																																							
Pause	Playing music	Short press iHip button(4) once to pause the music																																																							
Play	Pause	Short press iHip button(4) once resume the music																																																							

反面印刷

<table border="1"> <tr> <td>Previous track</td> <td>Playing music</td> <td>Short press the - button(1) to the previous track</td> </tr> <tr> <td>Next track</td> <td>Playing music</td> <td>Short press the + button(2) to the next track</td> </tr> </table> <p>Aux function of the Speaker (to play music from non-Bluetooth devices)</p> <ol style="list-style-type: none"> Turn on the speaker, and short press M button (3) to switch into AUX input mode. Plug the 2 in 1 cable (included) which the side is charging cord into the Charging port (7) of the speaker. And, connect the other end of the cable (3.5mm auxiliary cord) to the audio device (such as MP3 Players / computer / tablet etc.). Select your favorite song at the source device. <p>Note: Once AUX cable is connected to the Speaker, music through the Bluetooth will be stopped.</p> <p>Listening to Music using USB / TF Card Slot</p> <ol style="list-style-type: none"> Turn on the speaker. Insert TF card or USB flash drive into the TF Card Slot or USB Slot. Music would be automatically streamed. Short press + or - button to move forward or backward on your playlist. Short press iHip button to Play or Pause a track. <p>Note: While using Bluetooth, if you insert TF Card or USB Flash drive, speaker would disconnect the Bluetooth connection and switch to TF card or USB card function. You can short press Mode button each time until it goes back Bluetooth mode. TF Card/USB Flash Drive not included.</p> <p>FM Radio</p> <ol style="list-style-type: none"> Turn ON the Speaker. Insert the charging cable into Micro port, leave the other <p>6</p>	Previous track	Playing music	Short press the - button(1) to the previous track	Next track	Playing music	Short press the + button(2) to the next track	<p>end of the cord open. The charging cable serves as FM Antenna.</p> <ol style="list-style-type: none"> Short press Mode button each time until FM mode is selected. Short press iHip button (4) and the device would automatically search and store all the FM Radio stations. Short press + or - button to change the FM Radio stations. <ol style="list-style-type: none"> When the unit is not in use, turn OFF the device to save the battery power. <p>Do's and Don'ts Do not play music at excessive levels as damage to hearing and/or equipment may result. Do not use in wet or in damp surroundings.</p> <p>Specification</p> <table> <tr> <td>Bluetooth Version</td> <td>: 5.3</td> </tr> <tr> <td>Speaker Output</td> <td>: 2x3W</td> </tr> <tr> <td>Frequency Response</td> <td>: 190Hz - 10KHz</td> </tr> <tr> <td>Playing Time</td> <td>: 2 hours</td> </tr> <tr> <td>Charging Voltage</td> <td>: DC 5V</td> </tr> <tr> <td>Bluetooth Range</td> <td>: 30 Feet</td> </tr> <tr> <td>Battery</td> <td>: 400mAh Rechargeable Battery</td> </tr> </table> <p>(Note: Battery life & charging time may vary based on usage & types of devices used.)</p> <p>Troubleshooting</p> <table border="1"> <thead> <tr> <th>Problem</th> <th>Possible Cause</th> <th>Solution</th> </tr> </thead> <tbody> <tr> <td>Low sound level</td> <td>Source (Tablet, Mobile Phone, Laptop, etc.) volume too low. Battery dead</td> <td>Adjust source volume. Charge Battery.</td> </tr> <tr> <td>Sound distorted</td> <td>Battery nearly dead</td> <td>Charge Battery.</td> </tr> </tbody> </table> <p>7</p>	Bluetooth Version	: 5.3	Speaker Output	: 2x3W	Frequency Response	: 190Hz - 10KHz	Playing Time	: 2 hours	Charging Voltage	: DC 5V	Bluetooth Range	: 30 Feet	Battery	: 400mAh Rechargeable Battery	Problem	Possible Cause	Solution	Low sound level	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low. Battery dead	Adjust source volume. Charge Battery.	Sound distorted	Battery nearly dead	Charge Battery.	<table border="1"> <tr> <td>No sound at all.</td> <td>Source (Tablet, Mobile Phone, Laptop,) turned off. Speaker turned off. Volume turned down source. Media paused on source.</td> <td>Turn the source on. Turn the speaker on. Adjust volume source. Play media from source.</td> </tr> </table> <p>Care and Maintenance</p> <p>Clean the unit with a soft, damp cloth. Never use chemicals or hard abrasives. Keep this unit away from wet or damp surroundings.</p> <p>The crossed out wheelie bin symbol on this item indicates that this product needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authorities for details of where to take the item for re-cycling.</p> <p>FCC STATEMENT</p> <p>This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be</p> <p>8</p>	No sound at all.	Source (Tablet, Mobile Phone, Laptop,) turned off. Speaker turned off. Volume turned down source. Media paused on source.	Turn the source on. Turn the speaker on. Adjust volume source. Play media from source.	<p>determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. <p>Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.</p> <p>This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</p> <p>9</p>	<p>© 2022 Zeikos, Inc. iHip is a trademark of Zeikos, Inc. iPod, iPhone and iPad are trademarks of Apple Inc., Registered in the U.S. and other countries. The illustrated product and specifications may differ slightly from that supplied. All other trademarks and trade names are those of their respective owners. United States and international patent pending. All Rights Reserved. For ages 12+up. This is not a toy. Designed by iHip, Manufactured in China.</p> <p>The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by "iHip" is under license. Other trademarks and trade names are those of their respective owners.</p> <p>Limited 1 Year Warranty. Customer service: 1-800-500-4434 To activate your product warranty go to our website www.ihip.com & register this product.</p> <div style="display: flex; justify-content: space-between; align-items: center;"> <div style="text-align: center;">  <p>19 Progress St Edison, NJ 08820 www.ihip.com</p> </div> <div style="text-align: center;">  #iHip  Find us on Facebook. Keyword: iHip: Portable Entertainment </div> </div> <p>10</p>
Previous track	Playing music	Short press the - button(1) to the previous track																																		
Next track	Playing music	Short press the + button(2) to the next track																																		
Bluetooth Version	: 5.3																																			
Speaker Output	: 2x3W																																			
Frequency Response	: 190Hz - 10KHz																																			
Playing Time	: 2 hours																																			
Charging Voltage	: DC 5V																																			
Bluetooth Range	: 30 Feet																																			
Battery	: 400mAh Rechargeable Battery																																			
Problem	Possible Cause	Solution																																		
Low sound level	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low. Battery dead	Adjust source volume. Charge Battery.																																		
Sound distorted	Battery nearly dead	Charge Battery.																																		
No sound at all.	Source (Tablet, Mobile Phone, Laptop,) turned off. Speaker turned off. Volume turned down source. Media paused on source.	Turn the source on. Turn the speaker on. Adjust volume source. Play media from source.																																		