

Speakers User Manual

1. Precautions

- Keep it in a place with room temperature;
- Do not expose this product to rain or moisture;
- Do not drop to prevent damage;
- Do not disassemble this product for repair;
- This product currently has lithium battery, you can not throwing away and prevengalo fire, to avoid the danger!

2. Tips

- 1、 To help prolong the life of the speakers and your health, please do not listen to very high volume speaker, to avoid damaging your ears.
- 2、 If a fault occurs, immediately turn off the speaker interuptor, and disconnect the USB to prevent damage to the speakers and other components.
- 3、 Battery shortage affects the distance bluetooth and is easy to disconnect, please, load it.

3. Components

- 1 Speaker
- 1 Charger
- 1 Manual


3. Technical specifications

- Mode : BW-SDB0
- BT Version : 3.0+EDR
- Speaker : 3Ω5W
- Power : 5W *2
- Signal To Noise Ratio : ≥90dB
- Working Voltage : DC 5V 500MA
- Battery Capacity : 1200mAh
- Dimensions: 375*55*65mm
- Net weight : 520g
- Recharge time : 2.5h
- Play time: 6-10h
- Colors: black,red,blue,gold

4. Compatibility

Compatible with most phones,pc,tablet bluetooth

5. Functions

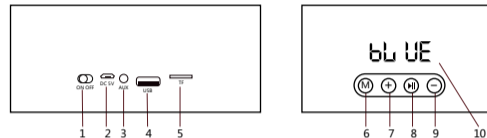

- | | |
|-------------------------------|------------------------------------|
| 1. ON/OFF | 2. Micro USB for charging |
| 3. Audio input | 4. USB Port |
| 5. TF card entry | 6. Change(Bluetooth/Radio/clock) |
| 7. Next/Volume up(hold) | 8. Play/Pause/catch call/hang call |
| 9. Previous/Volume down(hold) | 10. Display(time,mode,music) |

6. Description of modes

1. **Bluetooth mode:** Turn on the speaker, immediately enters the connection "S12", connect the bluetooth phone and synchronize it with his altavoz. Después successfully linking can play audio and answer the call.

2. **FM mode:** Turn on the speakerphone, press the "M" button to change the mode FM, hold the " " button, automatically search channels, press again " " to stop the search. you can also press the "+" or "-" to change the channel.
3. **Clock mode:** I turn on the speakerphone, press the "M" button, change the mode Clock, hold the " " button, then press the "-" To change the time. "+" Or button
4. **USB mode:** Turn on the speaker, insert the USB device or TF card, playback is automatic.
3. **AUX mode:** Turn on the speakerphone, insert the audio cable, playback is automatic.

8. Frequent questions

- No synchronized devices:**
- Check that the speaker is in mode search or reset the speakerphone.
 - i there are many bluetooth devices around, It can cause difficulties search must off other devices.
- Low or distorted sound:**
- Check the speaker volume and device.
 - Reload speaker
- The music is jerky:**
- Check if the speaker is lejo the device or if there is an obstacle.
- The LED does not light:**
- It indicates that the battery power is low, recharge the battery.
 - Restart the speaker

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator your body: Use only the supplied antenna.