


IN THE BOX:
Keychron K4 Bluetooth Mechanical Keyboard x 1
Type-C Cable * 1
Manual * 1
Quick Start Guide * 1
Extra Keycaps Set * 1

K4 Bluetooth Mechanical Keyboard Specifications


Mac / Windows

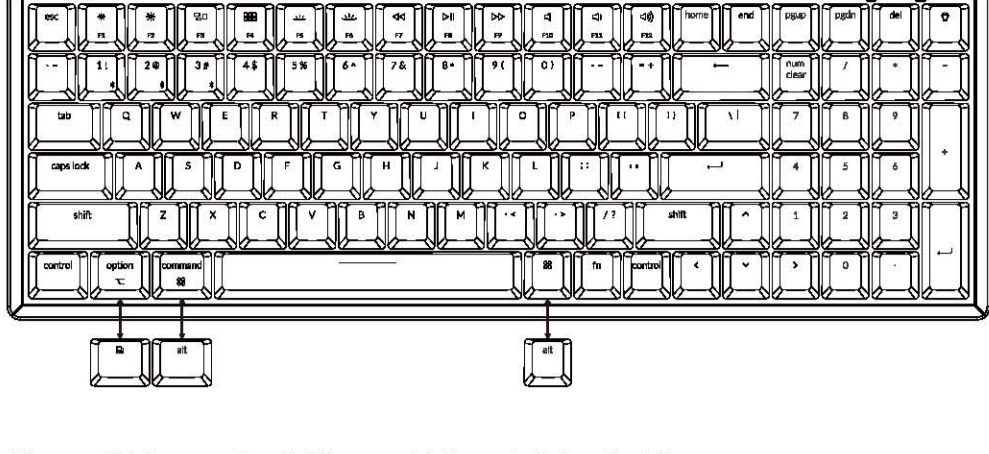

If you are a Windows user, please find the appropriate keycaps in the box, then follow the instructions above to find and replace the following keycaps.

Number of keys: 100
Switch type: Mechanical / Optical Switch
Number of multimedia keys: 12
Battery: 4000mAh
Working time: 3 - 5 weeks - depending on usage / 20 - 80 hours RGB lighting - varies with brightness and usage
Charging time: Around 3 hours
Charging port: USB Type-C
Mode: Bluetooth/Wired
Bluetooth operating distance: Within 10 meters (open space)
Name of Bluetooth device: Keychron K4
Operating Environment: -10 to 50°C
Technical specifications can be subjected to change without notice, we apologize for any inconvenience caused.

K4 Bluetooth Mechanical Keyboard Overview

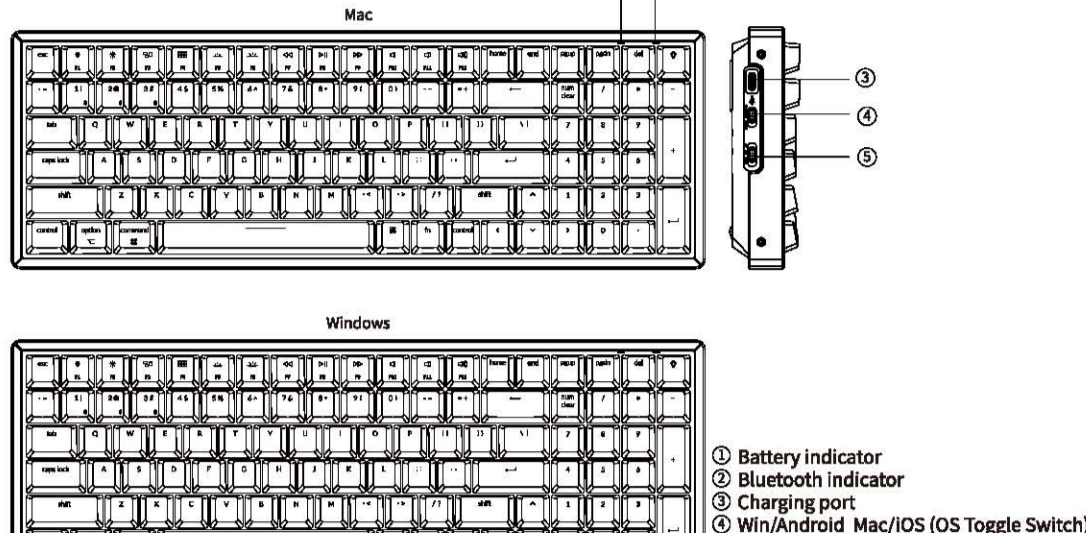

LED STATUS OVERVIEW

LED Location	Function	Status
Battery indicator	Charging	Low battery - Blinking Charging - Static Fully charged - Green light
Bluetooth indicator	Bluetooth	Pairing - fast blinking Paired - light off Switching - slow blinking

FUNCTION DESCRIPTION: CHARGING

Plug the cable into a USB port and plug the other end into the keyboard port. Charging Indicator: When battery is below 15%, a red battery blinking indicator will be triggered. A red light will stay on while charging; Fully charged in around 3 hours, a green battery indicator will appear.

*The Keychron keyboard is compatible with all USB ports. Please use a 5V 2A adapter or USB 3.0 for the best performance. The Keychron K4 can be charged in Bluetooth/on/off mode.
** This product supports up to 5V charging voltage and 2A charging current. We are not responsible for any problems caused by improper charging.

BLUETOOTH/WIRED MODE (TOGGLE SWITCH) WIRED MODE

1. Switch the toggle switch to Cable option (it only works when a USB cable is plugged in).
2. Connect our cable with your PC and keyboard.
3. Backlit will be turned on.

*Under Wired Mode, keyboard will not enter into Battery Saver Mode.

BLUETOOTH MODE

1. Switch the keyboard to Bluetooth option.
2. Backlit will be turned off.
3. Hold "Fn+1" key for 3 seconds to activate Bluetooth pairing (the Bluetooth indicator fast flashes for 3 minutes to detect pairing).
4. Search for the Bluetooth device "Keychron K4" on your device and connect it (the Bluetooth indicator goes off after successful pairing).

Note: This keyboard supports pairing up to 3 devices simultaneously via combination key "fn" + "1" / "fn" + "2" / "fn" + "3". Simply short press combination keys "fn" + "2" / "fn" + "3" to switch. Follow the above procedures to connect with other devices.

*The Bluetooth indicator will continue to flash for 3 minutes.
**Slow or failed connections may exist due to different Bluetooth versions, please make sure all the settings are correct.

SWITCH BLUETOOTH DEVICES

Short press combination key "fn" + "1" / "fn" + "2" / "fn" + "3" to switch to other device.

Reconnect:

1. Switch the keyboard to the Bluetooth option to activate the keyboard (the keyboard will connect to the last connected device by default).
2. The Bluetooth indicator flashes for 3 seconds and automatically pairs with the last paired device.
3. If the Bluetooth indicator is off, press any button to enter the connection again.

* The keyboard must have been paired with the device to perform this function.

Turn off the Keyboard Switch to "OFF"

BATTERY SAVER

Under Bluetooth mode, the keyboard backlit turns off when it is inactive for 10 minutes. Tap any button to wake the keyboard. If want to disable this auto battery save mode, press Fn+S+O for 4 seconds. Then if want to enter this power save mode again, press Fn+S+O for 4 seconds.

BACKLIT SETTING

- Short press [F12] to switch between different types of lighting effects.
- When backlit is on, press [F12] button to switch among them. Short press fn and "left arrow" or fn and "right arrow" to adjust light colors. (For RGB version only)

OS SWITCH

- 1- **MAC/iOS**
Turn the switch to Mac/iOS when you are connected to a Mac or iOS operating system. To use multimedia keys, simply press F1 to F12.

2-WINDOWS/ANDROID

Switch the toggle to Windows/Android when the keyboard is connected to a Windows or Android operating system. To use multimedia keys, simply press "fn" and F1 to F12.

*When using the Windows/Android mode, [Fn] keys are used for "Windows" and "Alt" functions.

3-INPUT METHOD SWITCH

For iOS:
Input method switch: Ctrl + Space
Caps Lock: Caps (Enable General+Keyboards+Hardware Keyboard+Caps Lock Language Switch)

For Android:
Input method switch: Shift + Space

NOTE: Functions of certain multimedia key may be disabled due to compatibility, versions, brands and drivers of Windows/Android OS. We also recommend not to switch OS frequently as it may impact keyboard operations.

MULTIMEDIA FUNCTION

OS	Screen brightness -	Screen brightness +	Mute control	Launchpad	Backlight decrease	Backlight increase
macOS	Screen brightness -	Screen brightness +	Mute control	Launchpad	Backlight decrease	Backlight increase
Windows	Screen brightness -	Screen brightness +	-	-	Backlight decrease	Backlight increase
Android	Screen brightness -	Screen brightness +	-	-	Backlight decrease	Backlight increase

OS	Previous track	Play/Pause	Next track	Mute	Volume down	Volume up
macOS	Previous track	Play/Pause	Next track	Mute	Volume down	Volume up
Windows	Previous track	Play/Pause	Next track	Mute	Volume down	Volume up
Android	Previous track	Play/Pause	Next track	Mute	Volume down	Volume up

OS	Capture screen	Delete	Home	End	Scroll up	Scroll down
macOS	Capture screen	Delete	Home	End	Scroll up	Scroll down
Windows	Capture screen	Delete	Home	End	Scroll up	Scroll down
Android	-	-	-	-	Scroll up	Scroll down

[1] In macOS, multimedia keys have been set as default, simply press fn+function key to use the function of F1-F12. In Windows OS, the function of F1-F12 have been set as default, simply press F1-F12 key to use the function of F1-F12, press fn+function key for the multimedia keys function.
Press fn+X+L simultaneously for 4 seconds to switch the function between the F1-F12 function and the multimedia keys, then, you need to press the fn key to use F1-F12 function. (Notes: fn+X+L function only works in Windows OS, this doesn't apply to MacOS and other operating systems.)

TROUBLESHOOTING

If unable to pair keyboard to device, confirm that the device you're trying to pair with is Bluetooth-capable. If so, restart the device and try pairing it with the keyboard again.

Note: On a Windows computer, a new Bluetooth connection will sometimes require additional software updates—a process that may still be ongoing after a message appears indicating a successful completion. Wait at least 20 minutes after pairing to make sure all updates are completed before restarting the computer.

Confirm that the device is configured to accept Bluetooth connections (Windows) and supports an external keyboard (HID profile).

Go to Bluetooth Devices > Open Settings and select the following:
Allow Bluetooth devices to find this computer
Allow Bluetooth devices to connect to this computer
Alert me when a Bluetooth device wants to connect

My keyboard isn't working.

For the keyboard: Turn the keyboard off and back on.
Turn Bluetooth off and restart the computer. (Windows)
For the device:
Go to Bluetooth settings and turn off Bluetooth and "forget" the keyboard.
Restart the device and turn on Bluetooth to reconnect.

Bluetooth connection is interrupted even within 10 meter.
Check if the keyboard is resting on a metal surface that can interfere with the Bluetooth signal.

Third party input tools are not compatible with the keyboard.
Due to compatibility, versions, brands and drivers of Windows/Android OS, functions of third party input tools may be affected while using the keyboard. Please make sure your operating system and drivers are up to date.

Certain fn keys or multimedia keys does not work under Windows/Android mode.
Functions of certain multimedia keys may be disabled due to compatibility, versions, brands and drivers of Windows/Android OS.

Safety Precaution:
Keep the product, accessories and packaging parts out of reach of children to prevent any accidents and choking hazards.
Always keep the product dry to avoid corrosion.
Do not expose the product to extreme temperatures below -10°C (5°F) or above 50°C (131°F) to prevent the lifespan of the keyboard and battery.

COMPLIANCE AND SAFETY

FCC DECLARATION OF CONFORMANCE

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the Instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Plug the equipment into an outlet on a circuit different from that to which the receiver is currently using.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.

Cafang Import and Export Trading Co., Ltd
Find us at:
https://www.keychron.com
hello@keychron.com
@keychron
@keychron
Designed by Keychron
Made in China

Keychron K4蓝牙机械键盘

注意事项:
请勿将本产品,其配件或包装材料放在儿童接触到的地方,以防止意外触电。
请将本产品平铺,以免弯曲。
请勿将本产品置于位于-10°C (5°F) 或高于50°C (131°F) 的温度下,以防止键盘或电池的使用寿命。


盒内包含

Keychron K4 蓝牙机械键盘 x 1
Type-C 数据线 x 1
说明书 x 1
快速入门指南 x 1
备用键帽 x 1

K4键盘规格

按键: 100键
输入: 机械 / 光学
多媒体按键: 12
电池: 4000mAh
工作电压: 3.7V (标配使用 20-80小时 RGB 灯光, 随亮度和使用频率而变化)
充电时间: 3小时
充电接口: USB Type-C
模式: 蓝牙 / 有线
蓝牙二模: 兼容 iOS / Android / Windows
蓝牙设备名称: Keychron K4

K4键盘概述

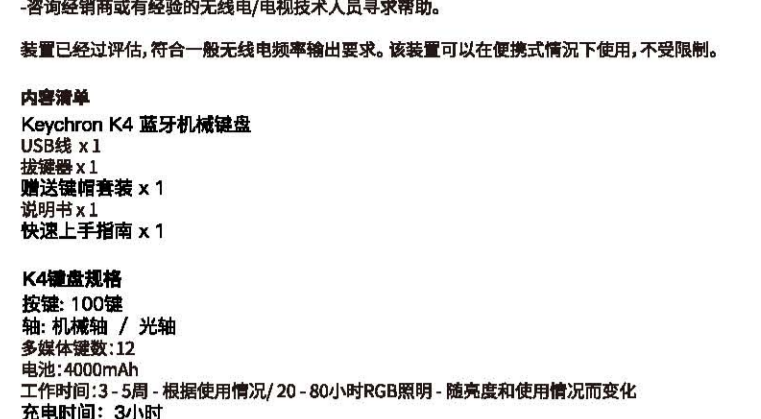

LED状态概览

LED位置	功能	状态
电池指示	充电	电量低 - 闪烁 充电 - 常亮 完全充电 - 绿灯
蓝牙指示	蓝牙	配对 - 快速闪烁 配对成功 - 灯灭 切换 - 慢速闪烁

功能描述: 充电

将线缆插入USB端口,并将另一端插入键盘的USB端口。充电指示灯: 当电量低于15%时,红色电池指示灯快速闪烁;充电时,红色电池指示灯常亮;在约3小时内充满电,指示灯变为绿色。

*Keychron K4键盘兼容所有USB端口。请使用5V 2A适配器或USB 3.0以获得最佳性能。Keychron K4可在蓝牙/有线模式下充电。
**本产品支持最高5V充电电压和2A充电电流。我们不对因不当使用而产生的任何问题负责。

BLUETOOTH/WIRED MODE (TOGGLE SWITCH) WIRED MODE

1. 将拨动开关切换到有线模式 (仅在插入USB线缆时有效)。
2. 将线缆插入您的PC和键盘。
3. 背光将被打开。

*在有线模式下,键盘不会自动进入省电模式。

BLUETOOTH MODE

1. 将键盘切换到蓝牙模式。
2. 背光将被关闭。
3. 长按"Fn+1"键3秒钟以激活蓝牙配对 (蓝牙指示灯快速闪烁3分钟)。
4. 在您的设备上搜索名为"Keychron K4"的蓝牙设备并连接它 (蓝牙指示灯熄灭)。

注意: 此键盘支持同时最多连接3台设备。只需长按组合键"Fn+2"/"Fn+3"进行开关,按照上述步骤重新配对即可。

*蓝牙连接速度可能因不同版本的蓝牙协议而异,请确保所有设备的蓝牙设置正确。

切换蓝牙设备

1. 将键盘切换到蓝牙模式以激活键盘 (键盘将连接到上次连接的设备)。
2. 蓝牙指示灯闪烁3秒钟并自动配对上次连接的设备。
3. 如果蓝牙指示灯熄灭,请尝试重新配对。

*键盘必须在配对设备范围内才能完成此操作。

省电模式

在蓝牙模式下,当键盘在5分钟内无操作时,背光将关闭。10分钟后键盘进入休眠状态,点击任意按键即可唤醒。当电量为20%时,电池指示灯快速闪烁,请及时充电。

基础功能

- 1- **MAC/iOS**
将拨动开关切换到Mac/iOS模式,当连接到Mac或iOS操作系统时。使用多媒体键,只需按F1到F12。

2- **WINDOWS/ANDROID**
将拨动开关切换到Windows或Android模式,当连接到Windows或Android操作系统时。使用多媒体键,只需按"Fn"和F1到F12。

*当使用Windows/Android模式时,[Fn]键用于"Windows"和"Alt"功能。

3-输入方法切换

对于iOS:
输入方法切换: Ctrl + Space
大写锁定: Caps (启用通用+键盘+硬件键盘+大写锁定语言切换)

对于Android:
输入方法切换: Shift + Space

注: 由于Windows/Android系统的兼容性、版本、品牌和驱动程序,某些多媒体键的功能可能无法使用。我们还建议不要频繁切换操作系统,因为它可能会影响键盘的操作。

多媒体功能

OS	屏幕亮度 -	屏幕亮度 +	静音控制	Launchpad	背光调暗	背光调亮
Mac OS	屏幕亮度 -	屏幕亮度 +	静音控制	Launchpad	背光调暗	背光调亮
iOS	屏幕亮度 -	屏幕亮度 +	-	-	背光调暗	背光调亮
Windows	屏幕亮度 -	屏幕亮度 +	-	-	背光调暗	背光调亮
Android	屏幕亮度 -	屏幕亮度 +	-	-	背光调暗	背光调亮

OS	上一首	播放/暂停	下一首	静音	音量下	音量上
Mac OS	上一首	播放/暂停	下一首	静音	音量下	音量上
iOS	上一首	播放/暂停	下一首	静音	音量下	音量上
Windows	上一首	播放/暂停	下一首	静音	音量下	音量上
Android	上一首	播放/暂停	下一首	静音	音量下	音量上

OS	截屏	删除	主页	结束	向上滚动	向下滚动
Mac OS	截屏	删除	主页	结束	向上滚动	向下滚动
iOS	截屏	删除	主页	结束	向上滚动	向下滚动
Windows	截屏	删除	主页	结束	向上滚动	向下滚动
Android	-	-	-	-	向上滚动	向下滚动

[1] 在 macOS 中,多媒体键已设置为默认,只需按 fn+功能键即可使用 F1-F12 的功能。在 Windows OS 中,默认情况下 F1-F12 的功能已设置为默认,只需按 F1-F12 键即可使用 F1-F12 的功能,按 fn+功能键即可使用多媒体键的功能。
同时按下 fn+X+L 4 秒钟以在 F1-F12 的功能和多媒体键之间切换功能。然后,您需要按下 fn 键以使用 F1-F12 的功能。(注意: fn+X+L 功能仅在 Windows OS 中有效,不适用于 macOS 和其他操作系统。)

故障排除

无法将键盘与设备配对。请确认设备支持蓝牙。如果设备支持蓝牙,请重新启动设备并尝试再次配对。
注意: 在 Windows 系统上,新的蓝牙连接可能需要更新驱动程序。在出现配对成功消息后,该过程可能仍在进行中,请耐心等待 20 分钟,以确保重新配对并安装驱动程序之前完成所有更新。

确认设备配置为接受蓝牙连接 (Windows) 并支持外部键盘 (HID 配置文件)。

转到蓝牙设备 > 打开设置并选择以下选项:
允许蓝牙设备发现此计算机
允许蓝牙设备连接到此计算机
当蓝牙设备想要连接时通知我

我的键盘不工作。

对于键盘: 关闭并重新打开键盘。
关闭蓝牙并重启计算机。(Windows)
对于设备:
转到蓝牙设置并关闭蓝牙和“忘记”键盘。
重启设备并打开蓝牙以重新连接。

蓝牙连接在 10 米范围内中断。
检查键盘是否放在可能干扰蓝牙信号的金屬表面上。

第三方输入工具与键盘不兼容。
由于兼容性、Windows/Android 系统的兼容性、版本、品牌和驱动程序,第三方输入工具在使用时可能会受到影响。请确保您的操作系统和驱动程序是最新版本。

某些 fn 键或多媒体键在 Windows/Android 模式下不起作用。
由于 Windows/Android 系统的兼容性、版本、品牌和驱动程序,某些多媒体键的功能可能无法使用。我们还建议不要频繁切换操作系统,因为它可能会影响键盘的操作。

安全警告:
保持产品、配件和包装材料远离儿童,以防止意外触电。
始终保持产品干燥,以防止腐蚀。
请勿将产品暴露在极端温度下,低于 -10°C (5°F) 或高于 50°C (131°F),以防止键盘和电池的寿命。

合规性和安全

FCC 符合性声明

本设备符合 FCC 第 15 部分的规定。操作受以下两个条件的限制: (1) 本设备不得产生有害干扰,且 (2) 本设备必须接受任何接收到的干扰,包括可能引起不期望操作的干扰。
任何更改或未经授权的修改可能会使操作者无法遵守负责合规性的机构的规定。

注意: 本设备已测试并符合 FCC 规则中关于 B 类数字设备的限制,旨在为住宅安装提供合理的干扰保护。该设备会产生并使用无线电频率能量,并且如果未按照说明安装和使用,可能会对无线电通信造成有害干扰。

然而,我们不能保证在特定的安装中不会发生干扰。如果此设备对无线电或电视接收造成有害干扰,您可以通过以下一种或多种措施来纠正干扰:

- 重新定位或重新定位接收天线。
- 增加设备与接收器之间的距离。
- 将设备插入与接收器所在电路不同的电路。
- 咨询经销商或经验丰富的无线电/电视技术人员寻求帮助。

该设备已评估符合通用 RF 暴露要求。该设备可在不受限制的便携式暴露条件下使用。

Cafang Import and Export Trading Co., Ltd
Find us at:
https://www.keychron.com
hello@keychron.com
@keychron
@keychron
Designed by Keychron
Made in China