 




3 a




head size adjustment

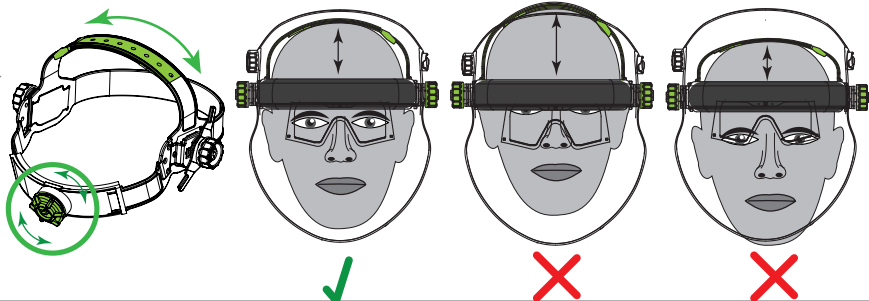

3 b

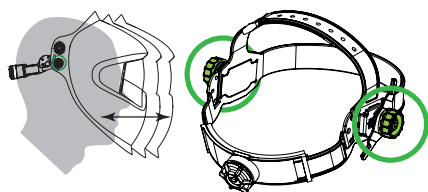


Distance adjustment

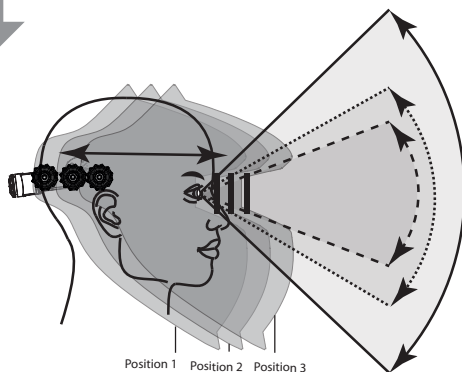


Position 1 Position 2 Position 3


3 c

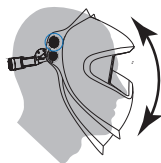

Excenter/ angle adjustment

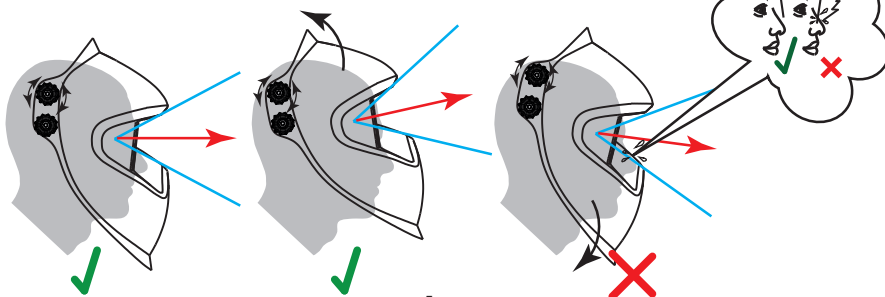


I Sensitivity

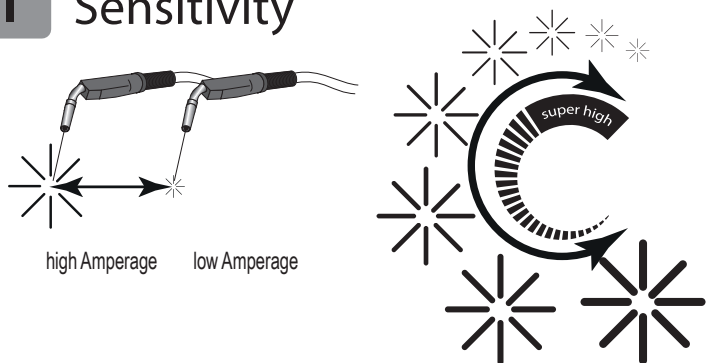

welding




Functions

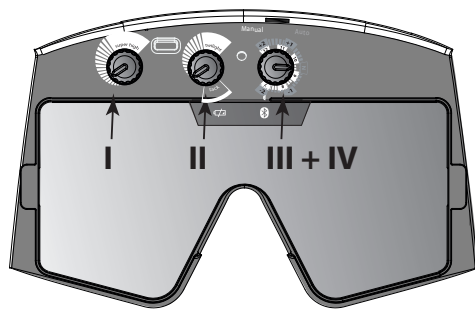


II Delay and Twilight Function

contineous welding

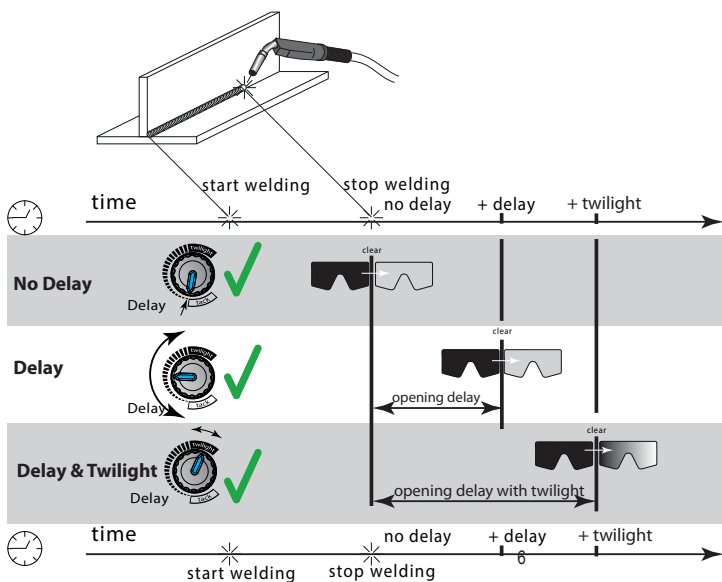

tack welding

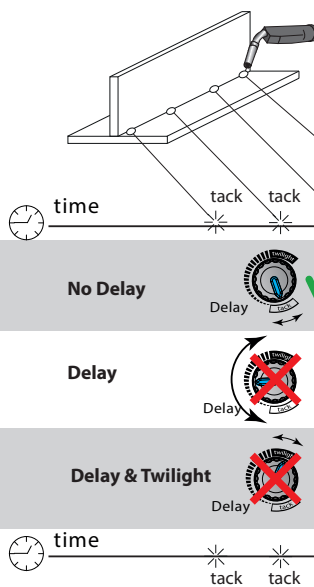



Auto mode




Manual

Auto


Autopilot

individual shade level correction +/- 2 shade levels

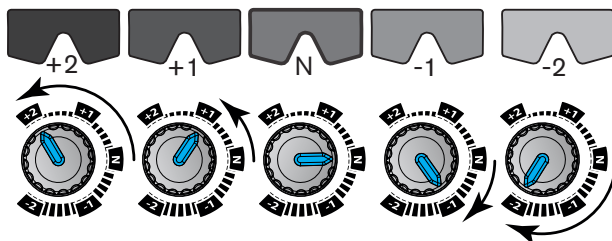

IV

Manual mode


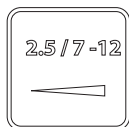


Manual


Auto


Manual Shade level adjustment

shade level 7 up to shade level 12

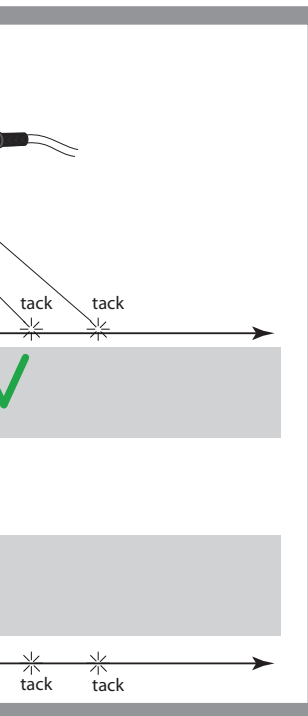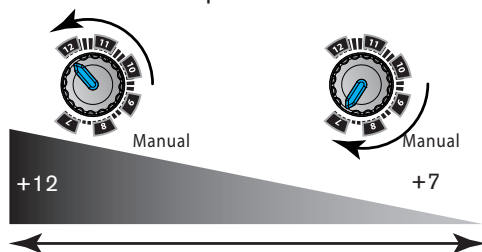


V Bluetooth/grinding

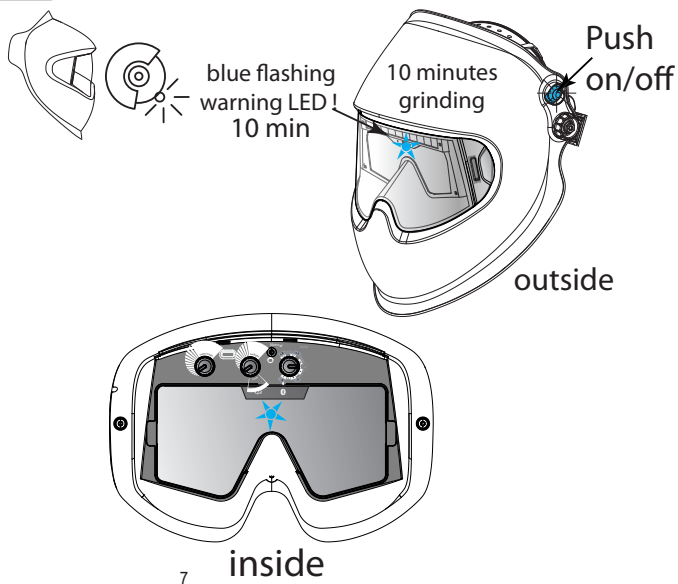

 


head band

exchange of headband

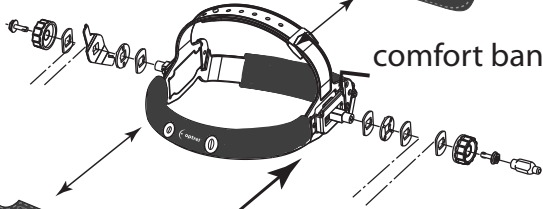


sweat band

 comfort band





nose protection

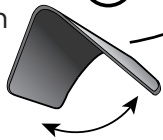


1

3

exchange of front cover lens & inside cover lens

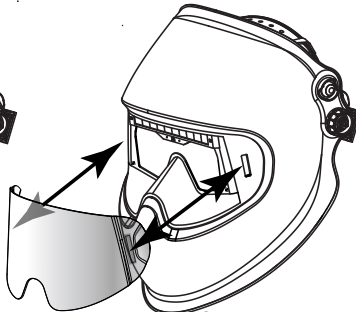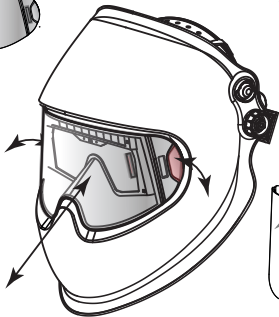

front cover lens

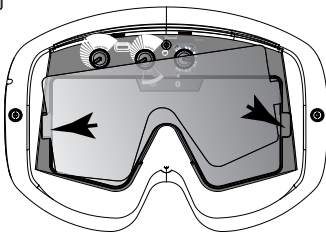

inside cover lens

Spa
order nu

