

1:18 4WD R/C CAR **ROCK CRAWLER**

INSTRUCTION

Thank you for choosing our toys! Please read through this instruction manual before use as it contains all the information you need to know about how to correctly, joyfully use this product.

CAUTIONS:

. Electric Product

Do not give this product to children aged 6 or below. Like other electric products, this product is also to be used in a safe way to avoid electric shock.

 
. Adult's Supervision Required

Warning! Do not try to modify this product, which may void your right to use it.

CHARGING

- (1) First of all, please make sure the safe connection between the rechargeable battery pack with USB cable and charging plug with USB port (or the computer, the power bank).
- (2) Charging time of the rechargrable battery pack is about 3-4 hours.


TRANSMITTER & TRIMMER




INSTALLATION OF BATTERIES & ANTENNA

- (1) Replace the battery cover.
- (2) Locate the hole on the top of the transmitter for installing the antenna. Insert the antenna in and turn clockwise to fix it.
- (3) Correctly install the rechargeable battery pack in the battery case and replace the battery

(4) Fasten the screw with a plus driver.

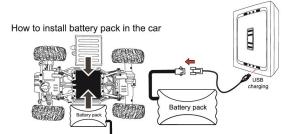

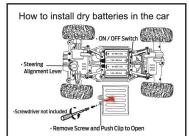

FCC ID: 2ASGE9042023

(1) Turn on the car, turn on the controller, and set the band selectors on the transmitter and the chassis to the same position.

- (2) While rotating the steering wheel of the controller to the right or the left, pull the trigger backward, the car will be steering to the right or to the left and run forward; while roeating the steering wheel of the controller to the right or to the left, push the trigger forward, the car will be steering to the right or to the left and run backward.
- (3) If the car can't run along a straight line, please use the trimmer on the chassis for

(4) Remember to turn off the car and the transmitter after use.

BATTERY SAFETY

OPERATIONS

- (1) Adult's supervision is required for charging.
- (2) To charge the rechargeable battery pack in the car, first remove it from the chassis.
- (3) Timely remove exhausted batteries from the car and the transmitter.
- (4) Make sure the main switch is set to OFF before installing the battery pack into the car body.
- (5) Note polarity marks in the battery compartments when installing the batteries.
- (6) Do not try to charge non-rechargeable batteries.
- (7) Do not short-circuit the batteries.
- (8) If you plan to stop use for a tong time, remove the batteries from the transmitter and the car body to avoid leakage.
- (9) Never throw the batteries into fire to avoid explosion or leakage.
- (10) Do not mix batteries from different producers or new and old batteries.
- (11) Use only recommended batteries or equivalent ones.
- (12) Check the batteries on a regular basis to avoid leakage.
- (13) Keep this manual well for future reference as it contains important information about this product.

MAINTENANCE

- (1) If you plan to stop use for a long time, remember to remove all the batteries.
- (2) If necessary, use a towel to gently wipe the car body clean.
- (3) Do not expose this toy to high temperature, high humidity or direct sunlight.
- (4) Do not put this toy in water to avoid damaging its electronic components.

CAUTIONS FOR PLAYING

When the car is in motion, do not touch the wheels by hand to avoid damages to the car.



When there's more than one car played in the same place, set the cars to different bands to avoid mutual interference



Do not play by the roads or in any other dangerous places to avoid accidents



Do not bend the antenna or point it at othe people or articles to avoid hurts.



Do not play in a place with puddle, mud or sand