

ERP机型: PL5531Q-GL-SMT00011A-V1

ERP P/N:

描述:说明书:PL5531Q/PGK728WRHK, SMT000,REV.A(MPGK728WRHK240425),Size:165×165mm,
105g双粉纸, 双面4C印刷, 过哑油, 14页28面,装订成本,RoHS2.0,REACH,Prop65,POPs,PAHs

C

 
M

Y

K

Diecut

PGK728WRHK

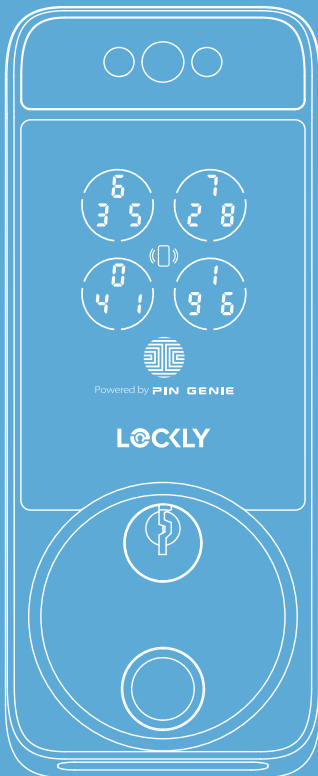

Welcome to Lockly Visage

Start Here

FCC ID: 2ASIVPGK728WRHK

IC ID: 25517-PGK728WRHK


LOCKLY
Enjoy the freedom™

Table of Contents

Download the Lockly app	3	Using the PIN Genie Keypad	15
Scan for easy installation	4	Adding a Access Code	16
Installation overview	5	Unlock with Facial Recognition	17
We are here to help!	6	Unlock with Apple Home Keys	18
Getting to know your Lockly Visage	7	Unlock with digital keypad	19
Install battery & setup with app	9	Unlock with you finger	20
Set up facial recognition	10	Auto and manual locking	21
Set up Apple Home	11	More ways to access and control	22
Fingerprint scanning	12	Alerts and Sounds	23
Adding a Fingerprint	13	Troubleshooting/FAQ	24
The PIN Genie Keypad	14		


Download the Lockly app

 Scan or visit [Lockly.com/app](https://lockly.com/app)

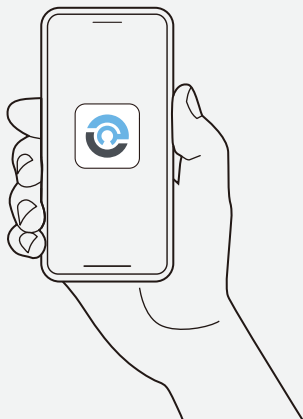

This app will guide you through the **installation** and **setup** process of your Lockly smart lock. **Create your profile** for a more tailored experience and optimised device performance and battery life.

 Scan for easy installation


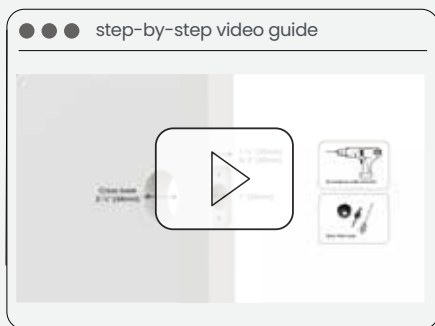


Watch our step-by-step video guide for easy installation and setup.

We will guide you through each step making it a breeze.

Installation guide included in the package. Check support.Lockly.com for the most updated version.

  Installation overview

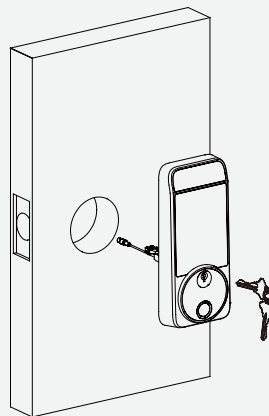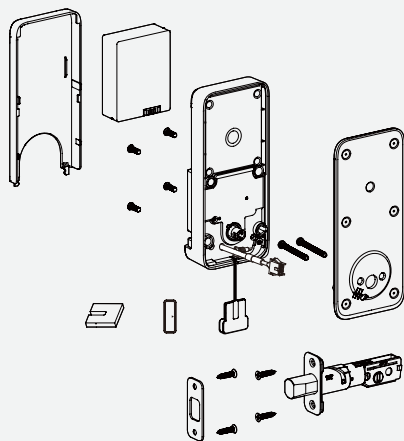

Installation
Guide



User
Manual

Scan for full Installation Guide and
User Manual

We are here to help!



Your Lockly smart lock comes with Lifetime technical support. Feel free to contact us with any questions or comments.



(669) 500-8835

 


help@Lockly.com




support.Lockly.com

Getting to know your Lockly Visage

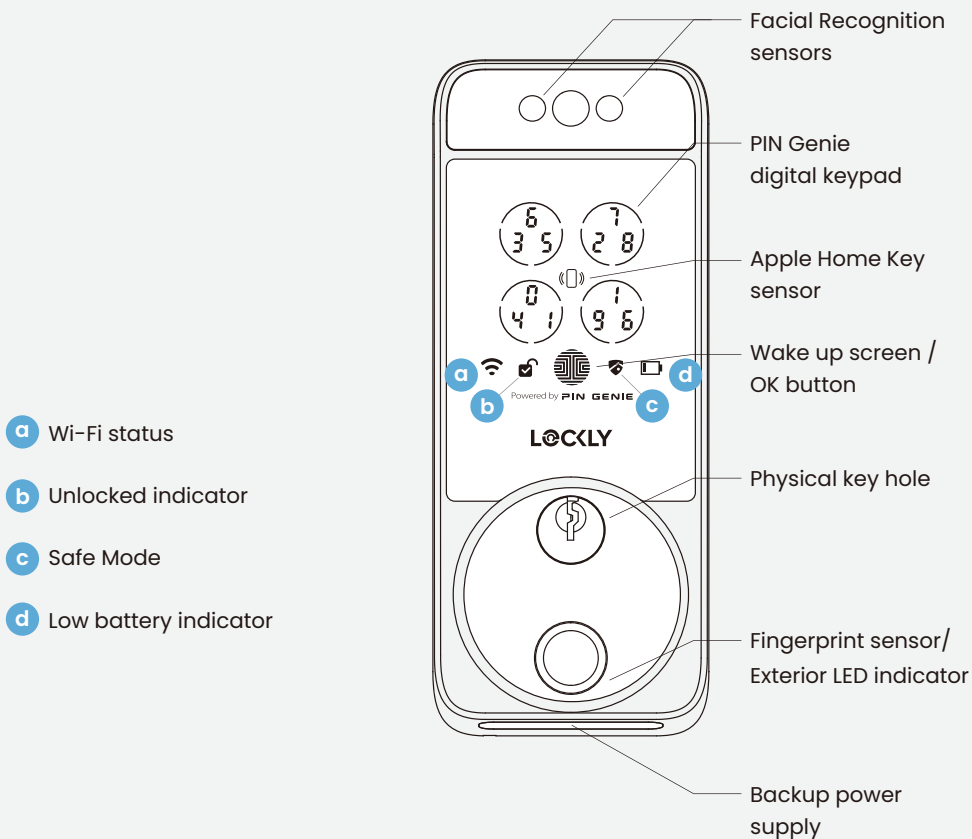

Getting to know your Lockly Visage

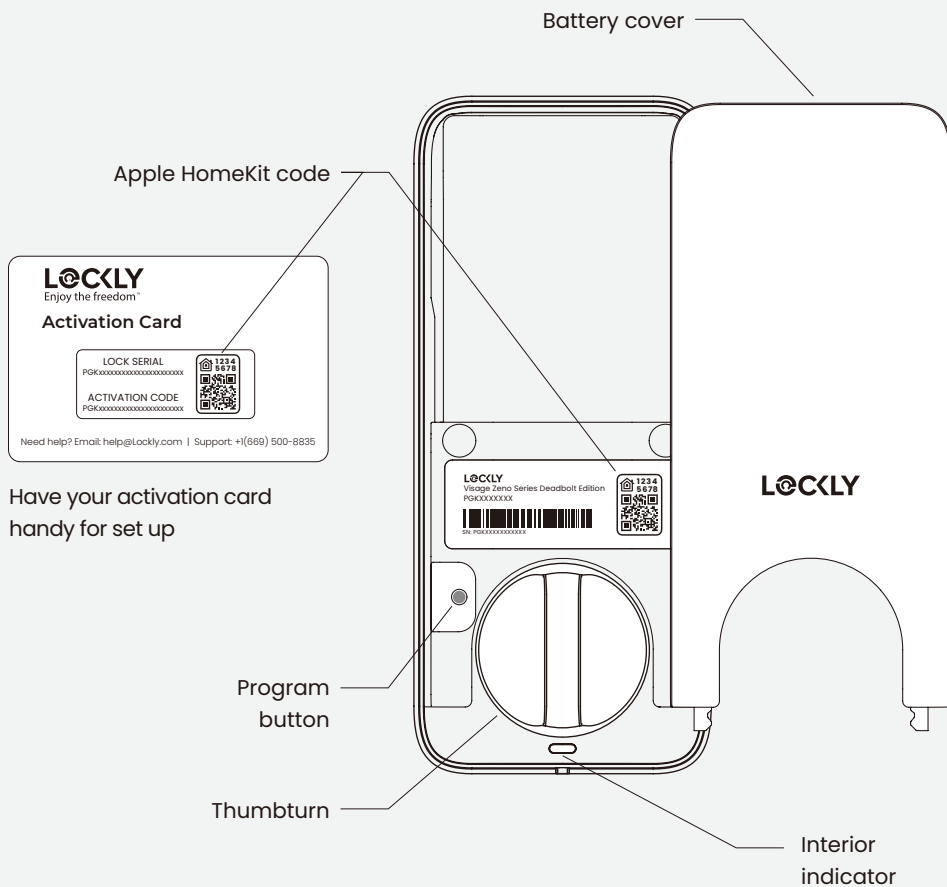 

Install battery & setup with app

STEP 1

 
Slide the battery into the battery slot.

STEP 2


When powered, hold the Program button for 4 seconds, the lock will perform self diagnostics by extending and retracting the deadbolt multiple times.

STEP 3

Open the Lockly app, tap on plus (+) to add a new device. Follow in-app instructions.

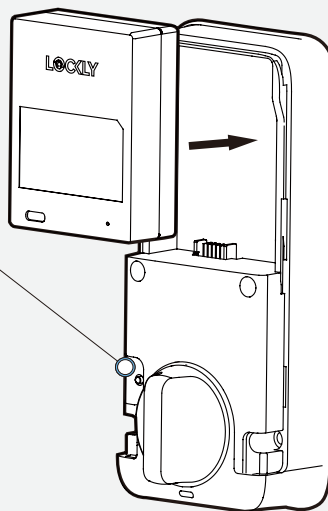

Set up facial recognition

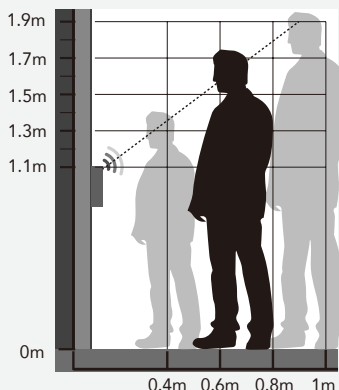 

Environment

Ensure the environment is well-lit but not excessively bright.

Facial recognition positioning:

For optimal recognition stand between 1 to 3 feet directly in front of the lock.

Use Lockly app to register a face:

Open Lockly app, register a new user and follow the in-app instructions to add a user's face.



If you have a twin or sibling that looks like you, or for children under the age of 13, we recommend using a PIN code, fingerprint, or mobile app for authentication.

Set up Apple Home



(Optional, iOS only)

Unlock your door with your iPhone and Apple Watch. Monitor status from your Home app.

STEP 1

Open Home app.

STEP 2

 
Tap '+' in the upper right corner and select 'Add Accessory.'

STEP 3

Remove the battery cover and locate the Apple HomeKit code in the interior assembly or on the activation card. Scan the code when prompted.

STEP 4

Follow the in-app instructions to add your Home Key to your Wallet app.

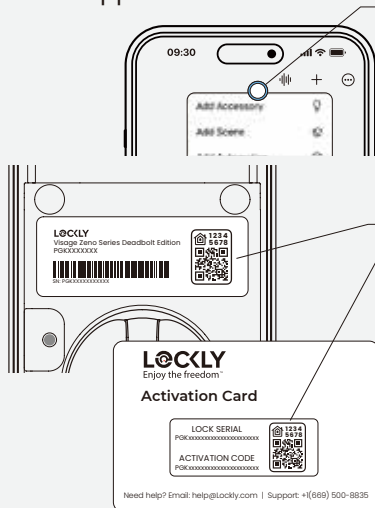

System requirements

 
Sharing access with others and controlling the Lockly Visage away from home through Apple Home requires an Apple TV® (4th generation tvOS 12.0 or higher), an iPad® (iOS 12.0 or higher), a HomePod® or HomePod mini® setup as a home hub.

Fingerprint scanning



To achieve consistent and quick fingerprint recognition, it's crucial to understand the correct procedure for registering fingerprints.

Place your fingertip flat on the sensor. Ensure it is centered.

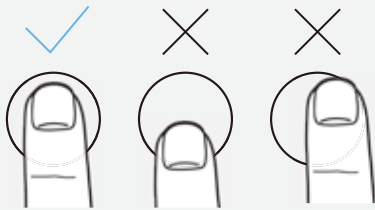


Avoid Misalignment:

Height:

Avoid positioning your finger too high or too low on the sensor.

Left/Right:

 Do not place your finger off-center to the left or right.

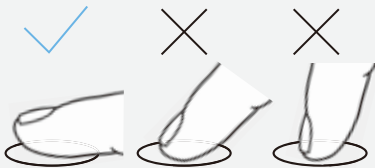

Angle and Touch:

 
Angle:

Keep your finger straight; avoid holding it at an angle.

Adding a Fingerprint


Select your lock from the Lockly app.

Go to the 'Access tab' and follow on-screen instructions.

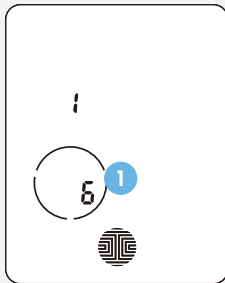

STEP 1 - Fingerprint Scanning

 - The sensor will scan each fingerprint multiple times, as shown by the countdown **1** on the screen.
- Lightly place your finger on the sensor until you hear a beep with the number counting down.

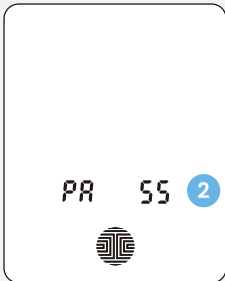

STEP 2 - Lift and Repeat

- After each scan, lift your finger.
- Continue this process until you see the word "PASS" **2** on the screen accompanied by a long beep.

STEP 3 - Repeat for Each Finger

 


If adding a fingerprint fails, return to the previous app menu to rescan.

The PIN Genie Keypad



Our hack proof, exclusive PIN Genie™ dynamic shuffling technology shuffles access codes after each use.

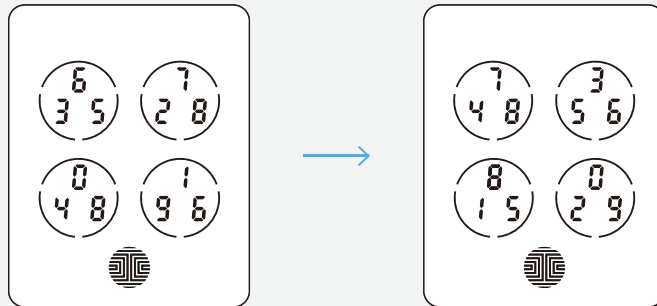

You can also toggle to a fixed keypad, refer to the Lockly app for more information.

 
Using the PIN Genie Keypad




Default access code

STEP 1


Press the one of the four buttons that contain the digits of your access code.

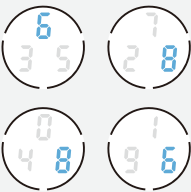

 Sometimes the same digit will appear in two buttons, **tab either button**.

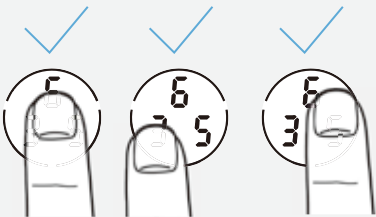

 Press the button where your number is shown. You do not need to press the actual number.

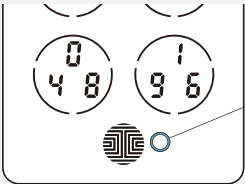

STEP 2

Press the **OK button**  when finish.

Adding a Access Code



Select your lock from the Lockly app.

Go to the 'Access tab' and follow on-screen instructions.

 
The default access code is **1 2 3 4 5 6**.

During set up, you are required to set a new access code to replace the default access code.



You can set up via the Lockly app the valid period of your access codes – permanent, recurring or one-time use.

Unlock with Facial Recognition

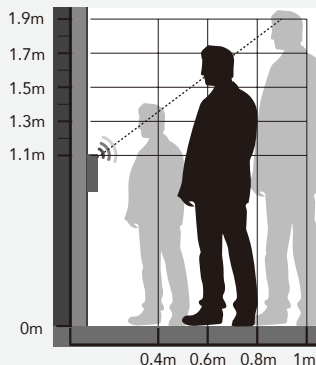

Stand in front of the lock
at a distance of 1 – 3 feet
(0.4m – 1m)

Refer to the diagram for the
recommended distance for
optimal distance from between
yourself and the lock.

Blue Light

 
Face detected; scanning has started

Green Light

Door is unlocked

Red Light

Adjust your distance and ensure nothing is
obstructing your face*

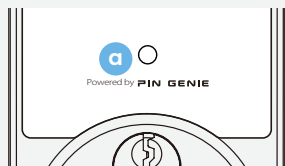

After eight consecutive incorrect attempts within two minutes, the facial recognition feature will be temporarily disabled.

*See troubleshooting to learn more.



To protect low battery automatic facial recognition detection switches off
when the battery is below 20%. Wake up the recognition by touching the
a circle button .

Unlock with Apple Home Keys

STEP 1

Add a home key to Apple Wallet with the Home app on your iPhone or Apple Watch.

 
Refer to page 11 for details.




STEP 2

Turn on Express Mode in the Wallet app.

STEP 3

 Place your device near the  icon to unlock your door.

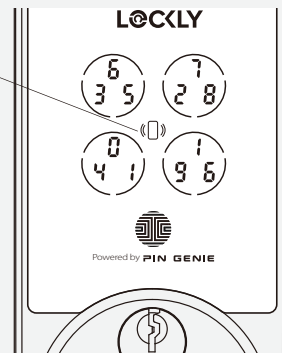


Unlock with digital keypad



Our hack proof, exclusive PIN Genie™ dynamic shuffling technology shuffles access codes after each use.


STEP 1

 Press the circle button **O** to wake up the keypad.

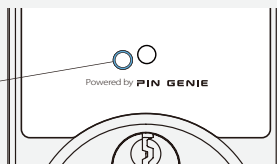


STEP 2

 Press the buttons that contain the digits of your access code.

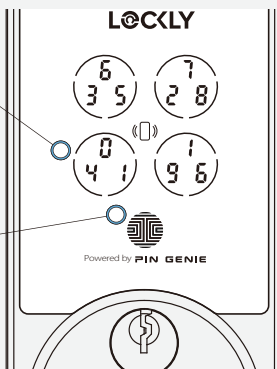

STEP 3

 Press the OK button.

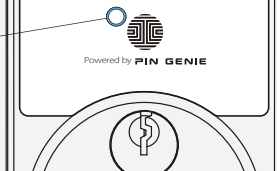


Ten consecutive wrong attempts will put Lockly into "Safe Mode". Refer to support.Lockly.com for details.



Temporarily boost the brightness of the keypad by pressing and holding any of the 4 buttons for 3 seconds.

 Unlock with you finger

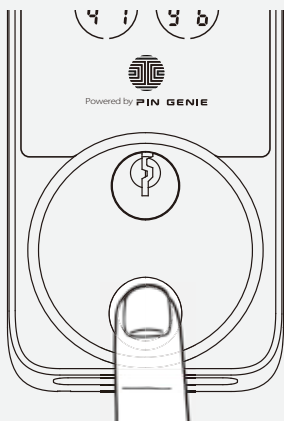

Place a registered finger flat and centered on the fingerprint sensor.

Green LED with a 'beep' sound.

Door is unlocked.

 
Red Light with two 'beep' sounds.

Finger is not recognized. Try again or use another registered finger.



Our advanced biometric sensor recognizes your fingerprint in 0.2 sec. With AI learning technology, it improves speed and accuracy over use.

Auto and manual locking

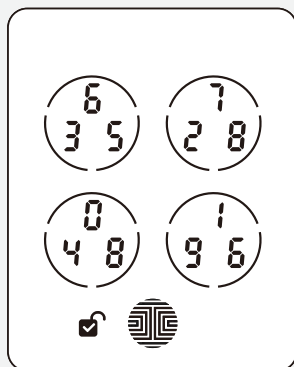

When the Lockly smart lock is unlocked, the  icon will display on the screen.

Lock with Screen

Press the OK button  on the screen or swipe across when the screen is off.

Auto-Lock

Set up auto-lock when you close your door in the Lockly app.

Thumbturn

Rotate the thumbturn on the interior assembly.

Physical Key

Insert physical key and rotate.



When the Lockly smart lock is unlocked, the unlocked  icon will display on the screen.

More ways to access and control

Lockly smart lock offers a wide range of secured ways to access and grant access to your property. Refer to the Lockly app to learn more or visit support.Lockly.com.



eKeys & eBadges

Revokable access (permanent, recurring or one-time) to unlock, or setup sub-admin to let others help you manage your property.



Offline Access Codes™

Grant access even if your internet is down. Issue one-time access via Lockly app.



Welcome Mode

Disable auto-lock according your preset schedule for instant access.



Voice Control

Setup Alexa and Google Assistant to control and monitor your lock status.



Air Transfer

Easily transfer user profiles between Lockly device for seamless setup and access management.



LocklyOS

Managing multiple properties with dashboards, reports exporting, email templates and many more.



We bring several new features to our smart locks every year.

Subscribe to our newsletter to receive latest product updates, expert tips and stay updated with our latest innovations.

Alerts and Sounds

Exterior Assembly Alerts

Facial Recognition

Exterior LED indicator flashes blue	Approach detected; Facial recognition started
-------------------------------------	---

Exterior LED indicator flashes green	Door unlocked
--------------------------------------	---------------

Exterior LED indicator flashes red	Facial recognition failed
------------------------------------	---------------------------

Fingerpint

Exterior LED indicator flashes green with a 'beep' sound	Door unlocked
--	---------------

Exterior LED indicator flashes red with two 'beep' sound	Fingerprint recognition failed
--	--------------------------------

Access Code

Exterior LED indicator flashes green	Door unlocked
--------------------------------------	---------------

Exterior LED indicator flashes red	Incorrect access code entered
------------------------------------	-------------------------------

Apple Home Key / Voice Control

Exterior LED indicator flashes green	Door unlocked
--------------------------------------	---------------

Interior Assembly Alerts



Battery

Interior LED indicator flashes red with a beep sound (x3)	Battery level is less than 20%
---	--------------------------------

Interior LED indicator flashes red with a beep sound (x5)	Battery level is critically low (3 unlocks remaining). Charge battery immediately.
---	--

Troubleshooting / FAQ


Why is my keypad not responding?

- Press the circle button  to activate the keypad.
- If  is flashing, your smart lock is in **Safe Mode**. Unlock with other access credentials (fingerprint, mobile app, home key or physical key) to exit.
- If water is detected, **Rain Mode** may be activated. Unlock your door with other authentication methods (Apple Home Keys, facial recognition, Lockly app..)
- Check if batteries are installed correctly.
- Refer to support.Lockly.com for more information about **Safe Mode** and **Rain Mode**.

Why is my keypad on full blackout?

- Battery may have been completely depleted. Use the physical key or a Type-C cable to connect your Lockly to a mobile power source to temporary activate the lock. Charge the battery immediately after unlock.


Why is my facial recognition sensor not responding?

- Check battery level. Automatic facial detection will be disabled when battery level is below 20%. Touch the Circle button  to activate the sensor.
- Facial recognition sensor will be temporarily disabled after consecutive incorrect attempts. Try again after 30 minutes or unlock with other authentication methods (fingerprint, access code, Lockly app..) to re-activate.

Why is my fingerprint not recognized?

- Check that you are using a registered finger.
- Make sure your finger is clean and dry.
- Position your finger at the centre of the sensor.

Why is my Lockly not locked automatically?

- Check if auto lock is disabled in the Lockly app.
- Check if  is displayed (not flashing). If so, **Welcome mode** is currently active. Disable or change setting in Lockly app.

Why is the battery of my Lockly Visage depleting quickly?

- Refer to support.Lockly.com for more tips to improve battery life.

How to pair my smart lock with a new phone?

- Download the Lockly app on your new device and log in using the same account credentials, follow in-app instructions.

How to pair my smart lock with a new Lockly account?

- You will need to perform a factory reset with the following steps.
 1. On the old Lockly app account, go to Settings > Reset and Pairing > Perform Factory Reset
 2. Download, register and log in to the new Lockly app account. You will need your activation card to set up the device.
- You can perform factory reset on the lock. Refer to Lockly app or support.Lockly.com for more details.

Lockly Technical Support

(669) 500-8835

help@Lockly.com

support.Lockly.com

FCC Warning:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. It should be installed and operated with minimum distance 20cm between the radiator & your body.

IC WARNING

This device contains licence-exempt transmitter(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

IC Radiation Exposure Statement

This equipment meets the exemption from the routine evaluation limits in section 2.5 of RSS-102. It should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.

Cet équipement est conforme à l'exemption des limites d'évaluation habituelle de la section 2.5 de la norme RSS-102. Il doit être installé et utilisé à une distance minimale de 20 cm entre le radiateur et toute partie de votre corps.



WARNING: This product can expose you to chemicals including Lead, which is known to the State of California to cause cancer. For more information go to www.P65Warnings.ca.gov.

Let's co-create!

Have an innovative idea?

Facing an inconvenient situation?

(669) 500-883

hello@Lockly.com



Own a business?

Learn about how LocklyPRO and LocklyOS
can help you in your business.

(510) 288 9928

prosales@Lockly.com

© Copyright 2024 Lockly All rights reserved

US Patent No. US 9,881,146 B2 | US Patent No. US 9,853,815 B2 | US Patent No. US 9,875,350 B2 | US Patent No. US 9,665,706 B2 | US Patent No. US 11,010,463 B2 | AU Patent No. 2013403169 | AU Patent No. 2014391959 | AU Patent No. 2016412123 | UK Patent No. EP3059689B1 | UK Patent No. EP3176722B1 | patternity technology patterned or parents and pattern pending

Use of the Works with Apple badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc., and any use of such marks by Lockly is under license. Other trademarks and trade names are those of their respective owners. Google, Android, Google Play and Google Home are trademarks of Google LLC., Amazon, Alexa and all related logos are trademarks of Amazon.com, Inc., or its affiliates.

Apple, Apple Home, Apple Watch, HomeKit, HomePod, HomePod mini, iPad, iPad Air, iPhone, and tvOS are trademarks of Apple Inc., registered in the U.S. and other countries and regions.