

PEARL RIVER

F-33 DIGITAL PIANO
USER MANUAL

Safety Guideline

Before playing the digital piano, please read the following content. Please put this instruction book in a safety place, in order to read it in the future.

Warning

In case of getting seriously injured or killed because of electric shock, short circuit, damage, fire or other dangers, please obey the following warnings. These warnings include but not limited to the following situations:

Power/Electric Cable

- * The rated voltage of this device is fixed. The required voltage is printed on the nameplate of this device.
- * Check the plug regularly, clean the dirt and ash piled up on the plug.
- * This digital piano only matches with the provided power cable and plug.

- * Please don't put electric cable beside heaters or radiators. Don't bend too much or cause damage to electric cable. Don't put any heavy stuff on the wire. Don't put it where it may be run over or trampled to make people stumble.

Do Not Open

- * Please do not open this device and try to dismantle inner components or transform it in any ways. This device does not include any components for users to fix. If you find any problems, please stop using and ask qualified Pearl River service staffs to examine and repair the device.

Warning about humidity

- * In case of any liquid splashing into the device, please do not get this device rained or use it nearby water, in a wet surrounding or put a container of liquid on it. If any liquid, like water, splashes into the instrument, please cut off power and pull out the electric cable from the AC socket immediately. Then ask qualified Pearl River service staffs to examine and repair the device.
- * Do not plug with wet hands.

Fire

- * Do not place any burning stuff, like candle, on the instrument. It may cause fire.
- * When sensing any unusual situations, such as worn away and damage of power cable, sound suddenly stops during playing and the smell and smoke it causes, please turn off the power immediately and pull out plug from the socket. Ask qualified Pearl River service staffs to examine and repair the device.

Attention

In case that people around you and you get injured or get loss of device and property, please obey the following basic instructions. These instructions include but not limited to following situations.

Power/Electric Cable

- * When pulling out plug from socket, please grab the plug instead of power cable. Drawing directly will cause damage to the power cable.
- * If not using the instruments for a long time or during a lighting storm, please

- * Do not connect the instrument to the socket by multiple connector, or it will lower the sound quality, or it will make socket overheat.

Assemble Use

- * Please carefully read the attachment that explains the assemble process. If assembling the instrument in a wrong order, it will damage the instrument and hurt the user.
- * Please connect the external equipment while the digital piano is off.
- * Before using, please install the supporting screw and adjust it close to the ground, in case of trampling pedal.

Installation place

- * In case of deformation of control panel and damage to inner components, please do not place this device in an environment with a lot of dirt, vibration, extreme cold and hot (such as, direct sunshine, closing to heater and inside a car under the burning sun)
- * Please do not use this device near the television, radio, stereo, cell phone or other electronic devices. This may make noise on the device itself and

television or radio nearby.

- * Please do not put this device on unstable place, or it may cause a sudden fall down.
- * Before moving the device, please pull out all electric cables from the socket.
- * When you set this device, please confirm the AC socket going to be used is reachable. The device should be connected to the socket with protecting grounding connection. If you find any problems and questions, please immediately turn off the power and pull out the plug from the socket. Even though the power is turned off, there is still a small amount of electricity current flowing through it. If you decide not using this device for a long time, please pull out the plug from AC socket.
- * This product uses all extreme power switch as a device to cut off from network power. The power switch button is on the right side of the keyboard. When the power button is pressed, it is switched on. When the power button up rises, it is switched off.

The graphic and screen in this hand book is only for introduction purpose. It may be different from the instrument you buy.

Catalogue

Installation Guideline	8
Control Panel	9
Power\Adjust Volume\Connect the Headset.....	10
Demo song\Sound	11
Function\1) Chord	12
2) Octave	13
3)Transpose	14
4)Soundboard resonance\5) Effect	15
6) Reverb	16
7)Chorus\8) Beat	17
9)Touch	18
10)Split\Touch switch.....	19
Sound choosing.....	20
Record and Play	23

Metronome	24
Using Accompany	25
Dual Sound	28
Double Keyboard	29
Bluetooth MP3 function	31
Back board function	33
USB MIDI function\Audio connecting.....	34
Sound list	36
Rhythm list	37
MIDI keyboard percussion music list	38
Demo List	42
Specification	43
Troubleshooting	45


Thank you for buying Pearl River Digital Piano. No matter you are a student, piano hobbyist or the professional, this digital piano will impress you with its perfect sound and fashion design. It can be competent with piano studying, music listening, MIDI production, which satisfies your entertainment demand. It also has grand hammer dynamics keyboard, making you express yourself easily.

For further information about this new digital piano, we suggest you should read this hand book carefully in order to make full use of its advanced and convenient functions. Meanwhile, we also suggest you should keep this hand book well for reference in the future.

If you like Pearl River digital piano, please recommend Pearl River to your friends.


Installation Guideline

During the installation process, the screws under the pedal must be screwed close to the ground. Or it will be easily broken down.

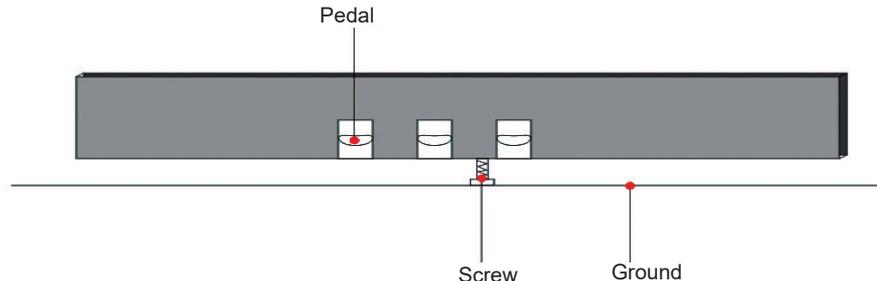

Control Panel

All the function keys are on the left side control panel of the digital piano.

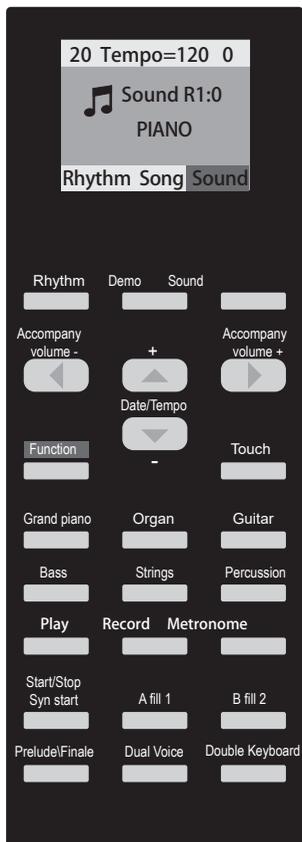

Turn on the power

 
Connect the power with wall outlets and press the power button on the right side of the keyboard. The piano is on and the default voice is grand piano.



Adjust Volume

Adjust the [Volume]pushing button on the right side of the control panel to set the volume of the instrument. When you push up the volume will be increased,On the contrary the volume will be turned down.

Warning: Do not master excessive volume to avoid any harm to your hearing,(Especially when wearing headphone)



Connect the Headset


You can connect two standard stereo headphones except the built-in sound amplifying system. The headphone jacks are at the lower left of keyboard. One is mute interface which automatically shuts off the speakers when using it. The other one is headphone interface that the headphone and speaker sound in



10 the same time. You can use the pushing volume button to adjust the sound level.


Demo song

1. Press[Demo]button,the light is on and the screen shows the demo song and play it automatically. Press[Date/Tempo+/-] to choose the demo song you want.
2. Press[Demo]button again, the light is off and the demo playing function will be stop.

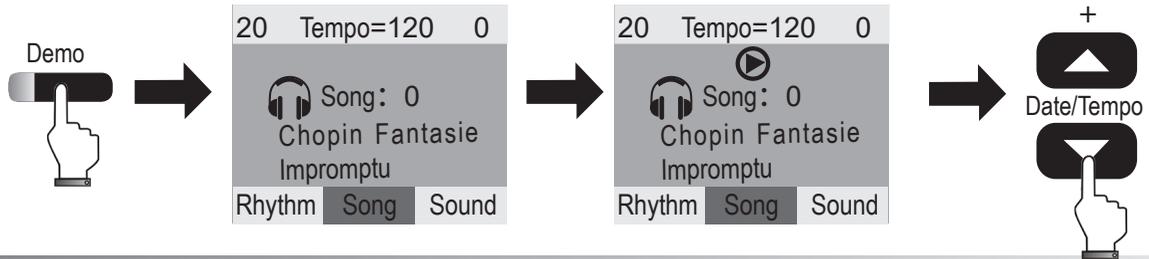


Sound

1. Press[Sound]button,the light is on and the screen shows the sound. Press[Date/Tempo+/-] to choose the sound you want. [For the sound list, please see the Appendix]
2. No operation within 5seconds,the sound light will be off and exit the sound function automatically.

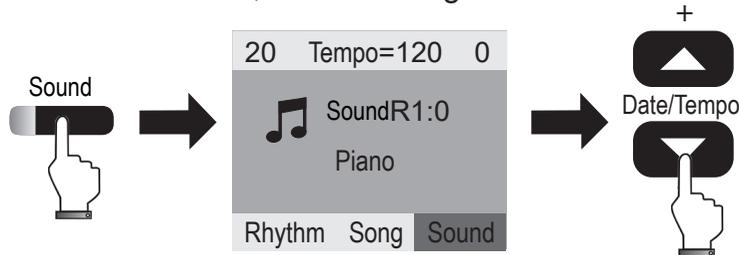

Function

The instrument is easy to handle. All the function are easy to be activated and every key has a function for you to use.(The function is printed the front of the key)

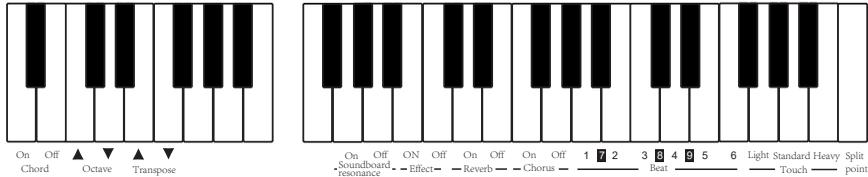


1.Press [Function]button,the function light will be on and activated, then press the corresponding key for the function you need.

2.Press the [Function]button again or no operation within 5 seconds.The function light will be off and exit the function setting. Here the keyboard have the corresponding function which you choose. **(Note: when you are in the function setting status, the keyboard is silent)**

1) Chord


1.The piano has Chord function: Press[Function]button, the function light is on and screen shows"Function choosing"; Press the[Chord on] key within 5seconds. The screen show"Chord:On" mean that the chord function is on.

2. Press[Function]key, the function light is on,then press[Chord off]key,The screen show"Chord:Off" mean that the chord function is off.

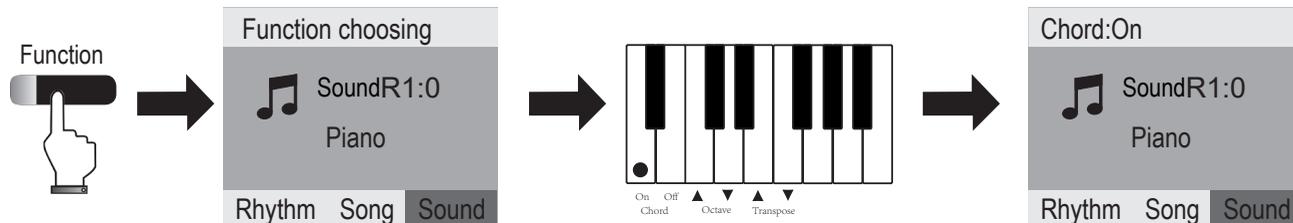

2) Octave

- 1.Press[Function]button, the function light is on, the screen shows"Function choosing"
Press[Octave+/-]key, the screen shows"Octave:+8/-8"on the top then you can adjust the pitch of the keyboard.
- 2.Press[Function]button again or no operation within 5 seconds, the light will be off and exit the keyboard pitch setting.

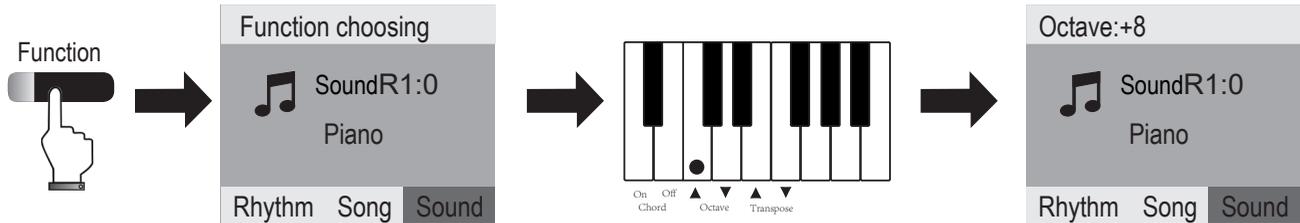


3) Transpose

With this function you can sharp or flat a semitone of twelve in the octave.

1. Press[Function]button, the light s on, the screen show"Function choosing"

Press[Transpose+/-]key, the screen shows"Transpose+1/-1",then adjust the pitch between -12 and +12.

2. Press[Function]button or no operation within 5seconds, the light is off and shut off the Transpose function.

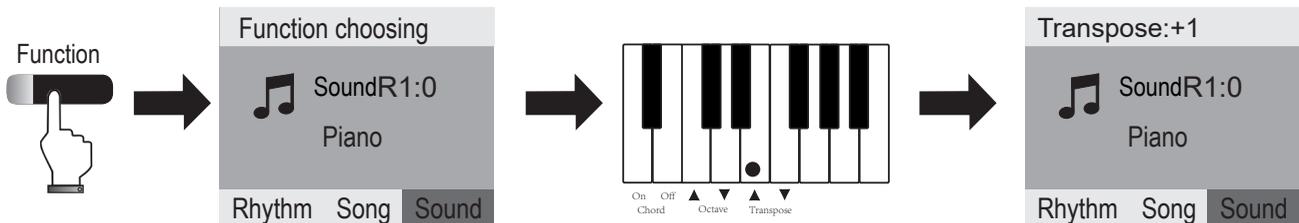


4) Soundboard resonance

1. Press[Function]button, the light is on, the screen show"Function choosing"

Press[Soundboard resonance On]key, the screen shows"Soundboard resonance:On",then the soundboard resonance function is activated and it will have the resonance effect when playing.

2.Press[Function]button,and the light is on,Press[Soundboard resonance Off]key within 5seconds, screen shows"Soundboard resonance:Off" and shut off the Soundboard resonance function.

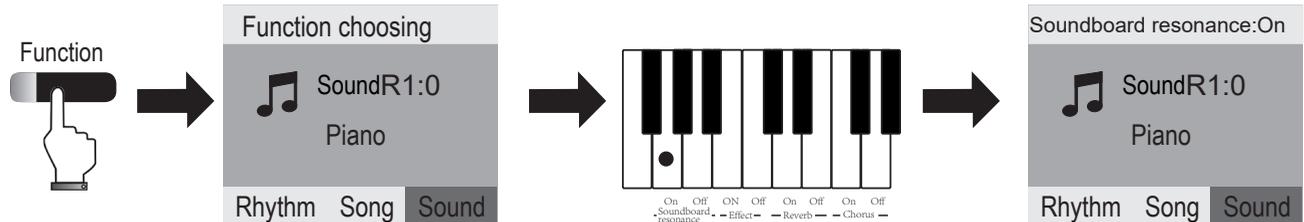


5) Effect

1. Press[Function]Button, the light is on and the screen shows"Function choosing"

Press[Effect On]key within 5 seconds, and the screen shows"Effect:On" means the effect function is activated and it will have the special effect when playing.


2. Press[Function]button, the light is on, press the[Effect off]key within 5 seconds, The screen shows”Effect:Off” and shut off the effect function.

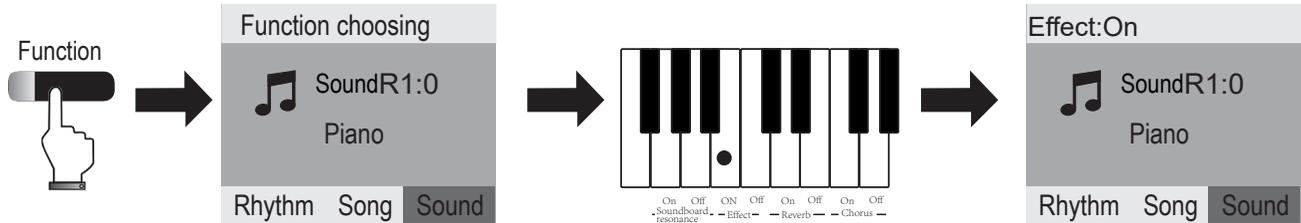

6) Reverb


1. Press[Function]Button, the light is on and the screen shows”Function choosing”
 Press[Reverb On]key within 5 seconds, and the screen shows”Reverb:On” means the Reverb function is activated and it will have the Reverb effect when playing.

2. Press[Function]button, the light is on, press the [Reverb off]key within 5 seconds, The screen shows”Reverb:Off” and shut off the reverb function.

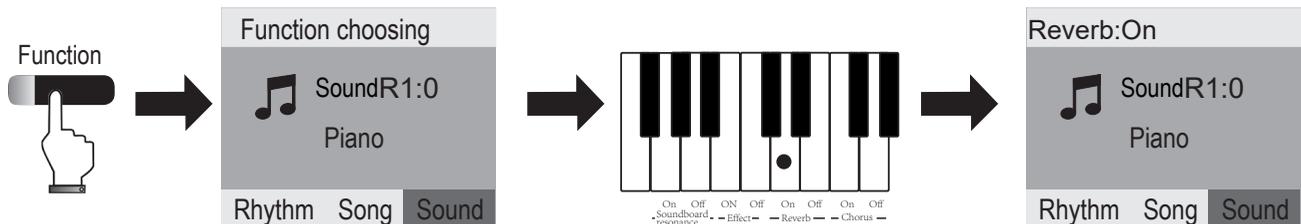


7) Chorus

1. Press[Function]Button, the light is on and the screen shows"Function choosing"
Press[Chorus On]key within 5 seconds, and the screen shows"Chorus:On" means the Chorus function is activated and it will have the Chorus effect when playing.
2. Press[Function]button, the light is on, press the [Chorus off]key within 5 seconds, The screen shows"Chorus:Off" and shut off the Chorus function.

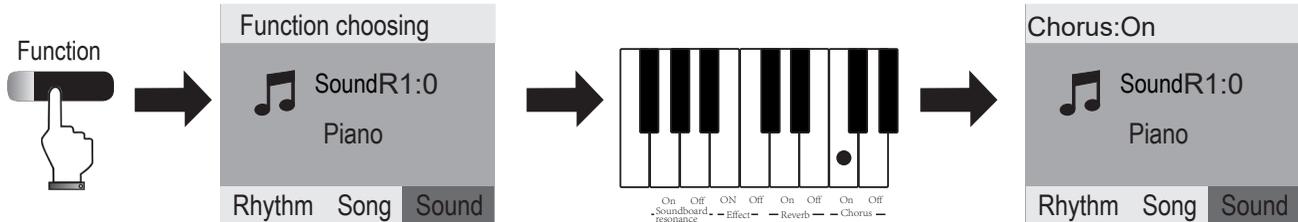

8) Beat

- 1.The instrument has 9 beats, 1,2,3,4,5,6,7,8,9 respectively. Press[Function]button, the light is on and screen shows"Function choosing"
Press the corresponding beat key, the screen shows the corresponding beat, then choose the one you need.
- 2.Press[Function]button again or no operation within 5 seconds, The light is off and confirm the best setting (7,8,9 correspond to the black keys above)

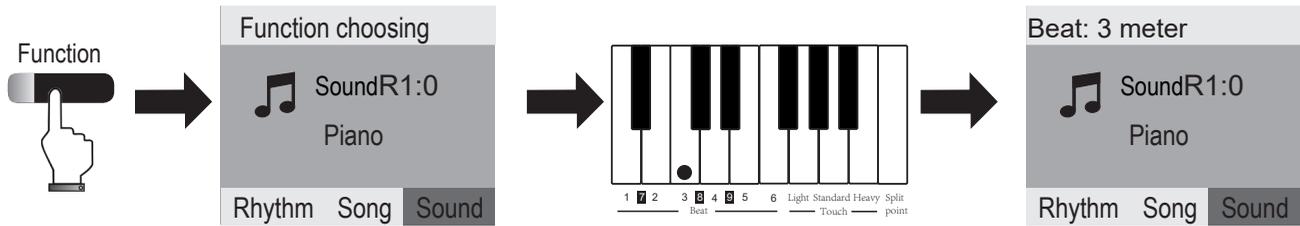


9) Touch

1. There are 5 touch curves, Default, Light, Standard, Heavy, Touch On/Off. Light, Standard, Heavy are available for you to choose. Press[Function]button, the indicated light is on and screen shows"Function choosing"


Press the corresponding touch key within 5 seconds, the screen shows the corresponding touch means the keyboard touch function is activated.

2. Press[Function]button again or no operation within 5 seconds, The light is off and the touch back to the default.

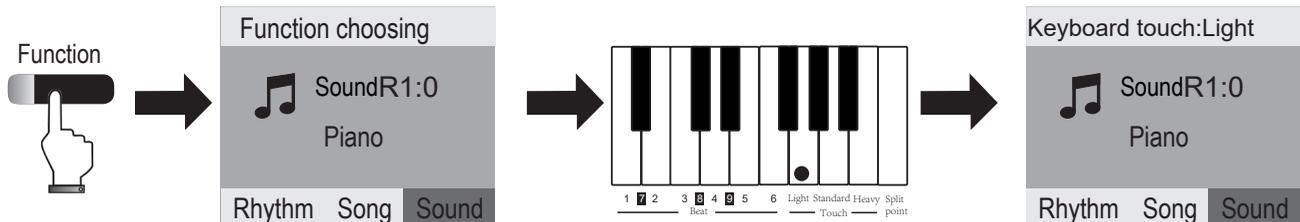

10) Split

1. Press[Function]button, the indicated light is on and screen shows"Function choosing"
Press the[Split]key within 5 seconds, the screen shows "keyboard split point=65" means the keyboard get in the Split setting status.
2. Press[Function]button again or no operation within 5 seconds, The light is off and confirm the Split point setting.

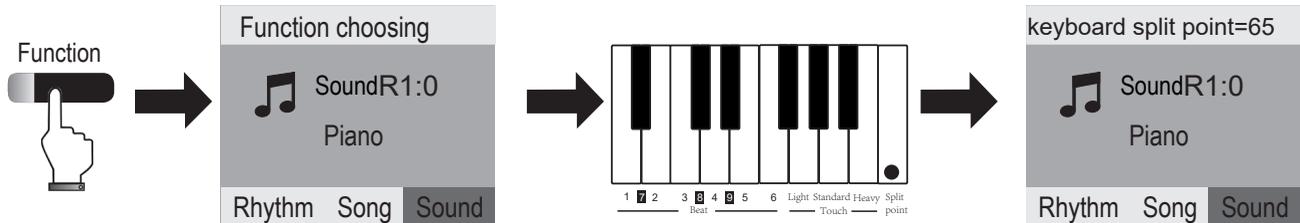

Touch switch

1. Touch On: The default touch is on when you turn on the instrument.
2. Touch Off: Press[Touch]button and the indicated light off, the Touch Function Off.




Sound choosing

Grand piano: Grand piano sound is default sound,when you turn on the instrument, the Grand piano sound light will be on.


Organ: Press[Organ]Button, the indicated light [Organ]and[Sound] buttons will be on at the same time. The screen shows “Church Organ” and get in the Organ Sound.

Press[Date/Tempo +/-] button to choose other sounds. (The[Sound] indicated light will be off and exit the Organ sound setting function when there is no operation within 5 seconds)

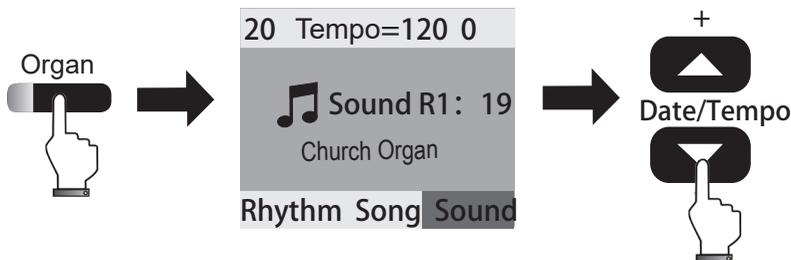


Guitar: Press[Guitar]Button, the indicated light [Guitar]and[Sound] buttons will be on at the same time. The screen shows “Classical Guitar” and get in the Guitar Sound.


Press[Date/Tempo +/-] button to choose other sounds. (The[Sound] indicated light will be off and exit the Guitar sound setting function when there is no operation within 5 seconds)

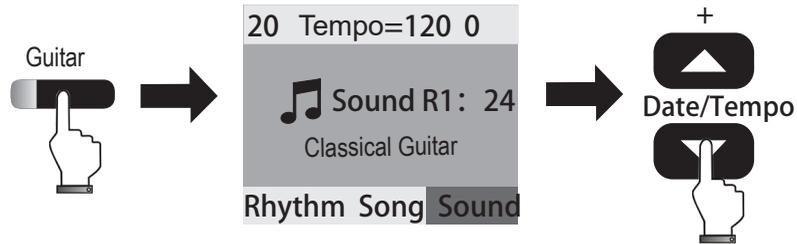


Bass: Press[Bass]Button, the indicated light [Bass]and[Sound] buttons will be on at the same time. The screen shows “Acoustic Bass” and get in the Bass Sound.Press[Date/Tempo +/-] button to choose other sounds. (The[Sound] indicated light will be off and exit the Bass sound setting function when there is no operation within 5 seconds)

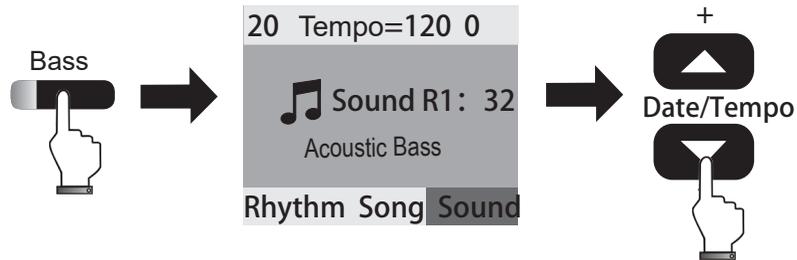

Strings: Press[Strings]Button, the indicated light [Strings]and[Sound] buttons will be on at the same time. The screen shows “String Ensemble1” and get in the String Sound. Press[Date/Tempo +/-] button to choose other sounds.(The[Sound] indicated light will be off and exit the String sound setting function when there is no operation within 5 seconds)

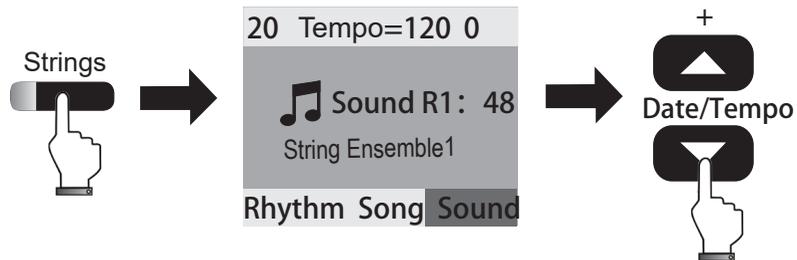

Percussion: Press[Percussion]button, the indicated light is on, the screen shows”GM standard kit”. Then press[Sound]button again. The indicated light on and get in the percussion sound setting. Press Date/Tempo +/-] button to choose other sounds. (The[Sound] indicated light will be off and exit the Percussion sound setting function when there is no operation within 5 seconds)

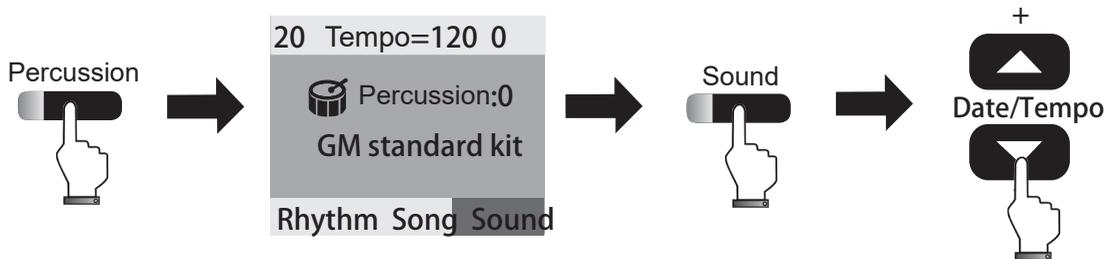


Record and Play

The digital piano can record the music you played, including the build-in accompany of the piano. Operation as follows:


Record: 1. Press [Record] button and the indicated light on, the metronome function will be turned on and record. If you want to turn off the metronome voice, press [Metronome] to close it.

2. Press [Record] button, the indicated light off and exit the record function.

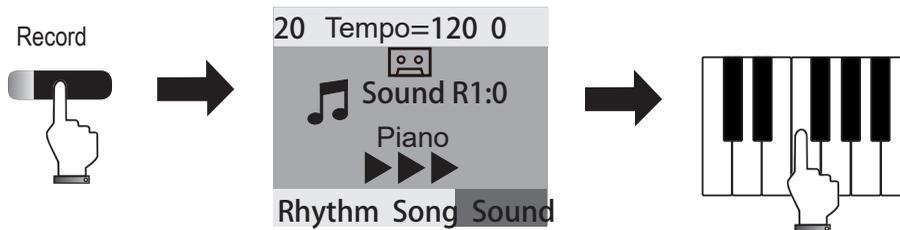


Play: 1. Press [Play] button, the indicated light on, the screen shows you the music is playing as the icon below. (The music you recorded will be played.)

2. After playing, the indicated light off and the playing icon will be disappeared.

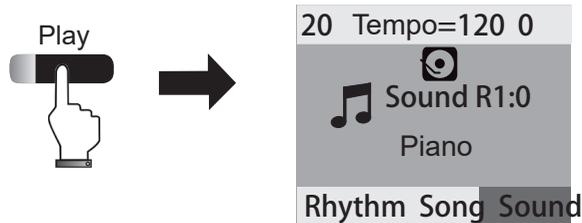

Metronome

1. Press[Metronome]button, the indicated light on, the screen show the blink icon“ ▶▶▶ ” and the metronome voice sound.
2. Press[Date/Tempo+/-], the screen shows “ Tempo=120” (Default), In the moment, you can adjust the tempo by press the [Date/Tempo+/-]button.
- 3.Press[Metronome]button, the indicated light off and exit the metronome setting function.

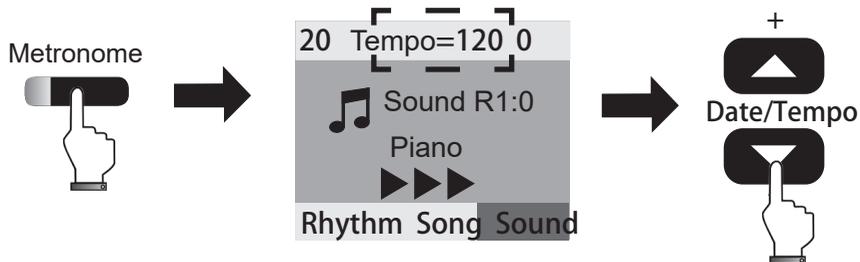


Using Accompany

Accompany makes your music more expressive and injects interest into your music:

Rhythm: 1. Press[Accompany]button, the indicated light on, the screen shows“Rhythm”.


Press[Date/Tempo+/-] button to choose the rhythm, the screen will show the corresponding name of the rhythm.

2. No operation within 5 seconds, the indicated light off and exit the rhythm function automatically.

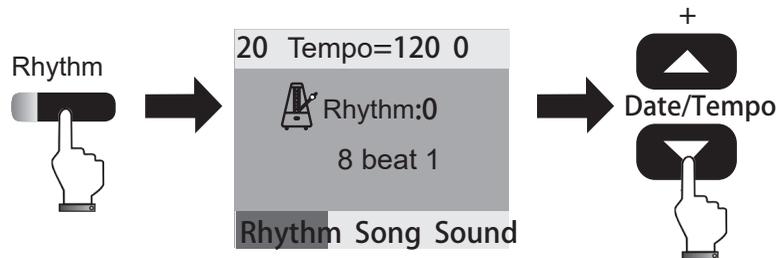


Accompany volume-/+: 1. Press[Accompany volume+/-] button, the screen show“20”(Default) on the top left. When you adjust the volume by pressing the Accompany volume+/-, it will show corresponding figure.(Accompany volume:0-32)

2. After adjusting, the accompany volume function will be exited automatically.

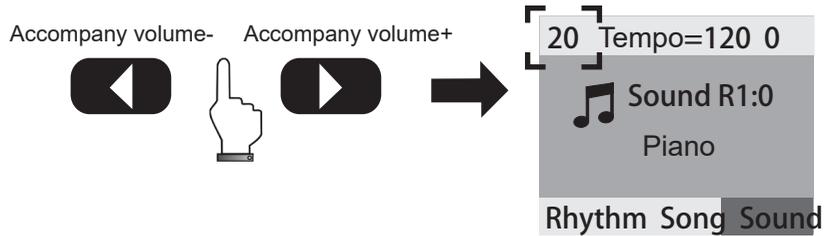


Start/Stop: Press the Start/Stop button, it will control the accompany.

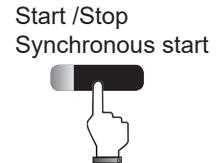


Synchronous Start: 1.Long press[SYN Start] button, the screen show three blinking triangular symbols (When the chord function off, press any keys the automatic accompany will be activated. If the chord function is on, press the corresponding key of the Chord.)

2. Press[SYN Start] button, the accompany will be stopped.

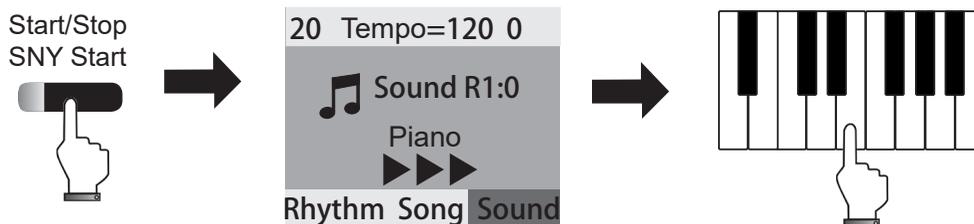


A fill 1: 1. When [A fill 1] button is on(default status), Press[Start/Stop] button, the screen shows three blinking triangular symbols.

2. Press[A fill 1] button, the indicated light is on. Accompany inserts A rhythm.

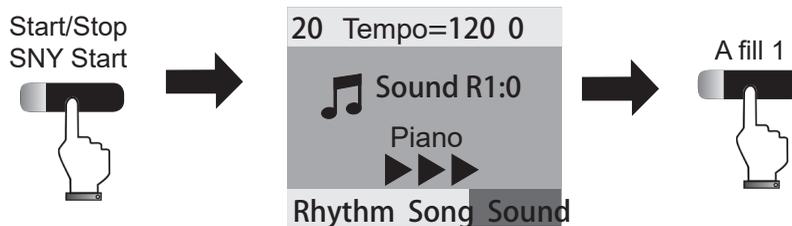


B fill 2: 1. Press[Start/Stop] button, the screen shows three blinking triangular symbols, Accompany sounds.

2. Press[B fill 2] button, the indicated light is on. Accompany inserts B rhythm.

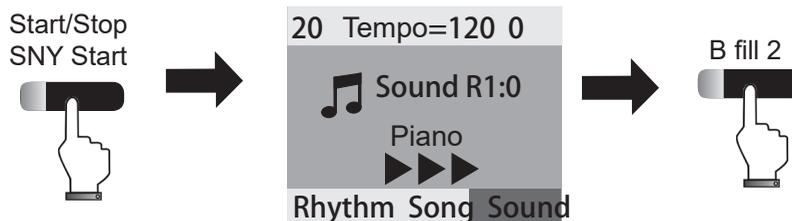


Prelude\Finale :1. Press[Prelude\Finale] button, the [Start/Stop] indicated light will be on simultaneously. The screen shows 3 blinking triangular symbols,the Prelude will be inserted into your music.

2. Press [Prelude\Finale] button, the indicated light is on, the finale will be inserted into your music. Then the indicated light off and accompany stop.

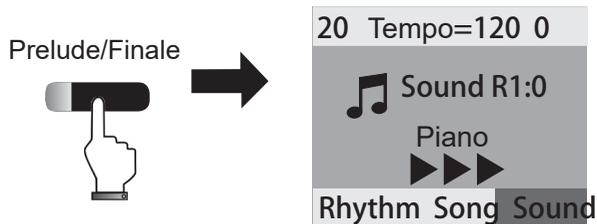


Dual Sound

1. Press[**Dual Sound**] button to get in the dual sound status, the indicated light on, the default sound is the second sound:048 STRINGS1.
2. Press [**Date/Tempo+/-**]button to select other second sound. The first sound setting needs to adjust before pressing [**Dual Sound**] button.
3. Press[**Dual Sound**] button turn off the dual sound effect and back to the first sound.

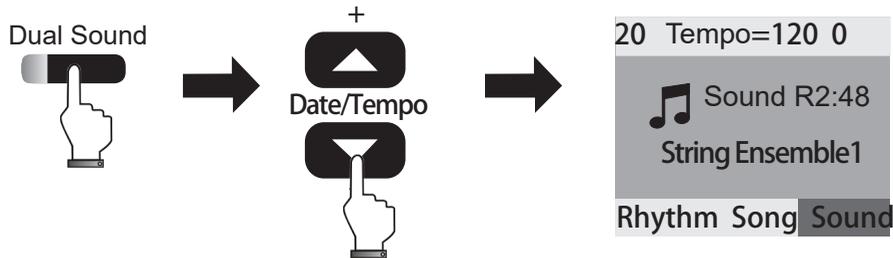



Double Keyboard

The function divides the keyboard into two separated operating areas.

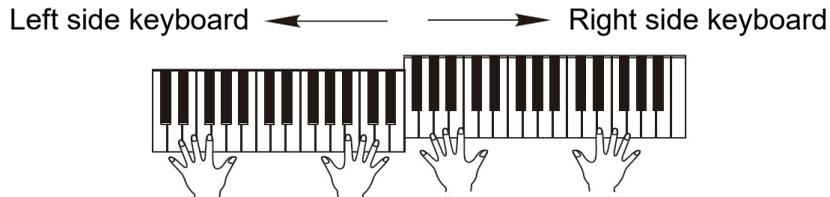


1. Select the sound of left side keyboard before pressing [Double keyboard] button. Press [Sound] button, the indicated light on, then press [Date/Tempo +/-] button to select the sound.
2. Press [Double keyboard] button to get into the double keyboard status, the keyboard will be divided into two separated operating areas. The default split point is C. Press [Sound] button, select the sound of right side keyboard by pressing [Date/Tempo +/-] button.

3. Press [Double keyboard] button to exit the double keyboard status.

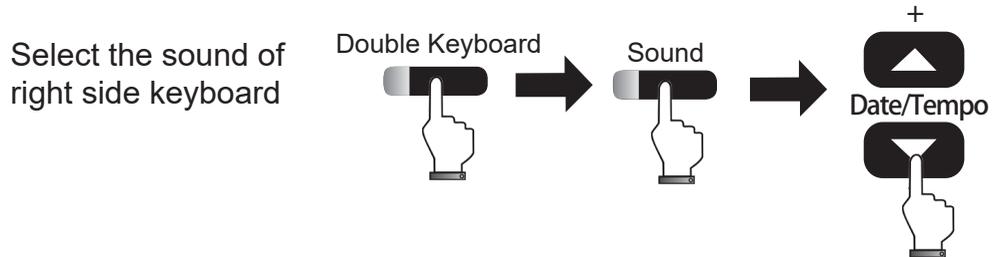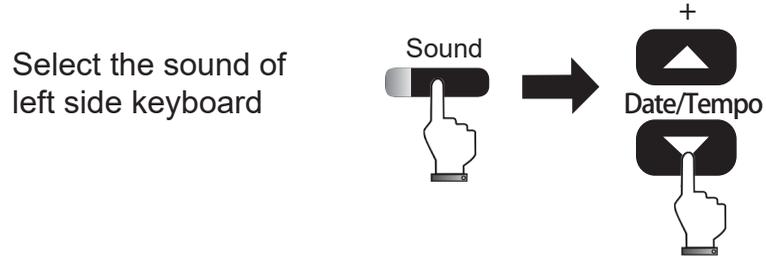

Bluetooth MP3 function

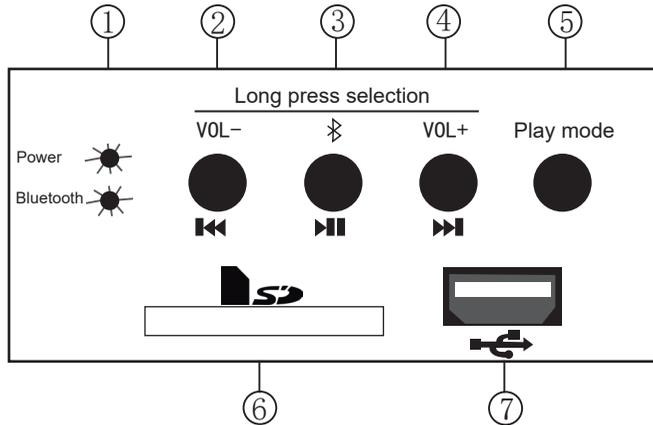

- 1. Status indicated light:** the red light means in USB, SD status; the blue light means in Bluetooth status.
- 2. Previous music/ Volume down:** short press the button will be turned to previous music. Long press the button will turned down the volume.
- 3. Play-pause/Bluetooth:** short press the button will be switched play or pause mode. Long press the button will be Bluetooth pairing function.
- 4. Next music/ Volume up:** short press the button will be turned to next music. Long press the button will turned up the volume.

5. **Play mode:** Switch between USB\SD and Bluetooth mode.
6. **SD card jack:** connect it to play the MP3 music in your SD card.
7. **USB jack:** connect it to play the MP3 music in your U-disk.

USB、SD card operating instructions:

When the instrument is on, the Bluetooth function is in standby. Insert the USB or SD card and the system gets into the loading status with a blinking LED red light. To select the music from your USB/SD card by pressing [◀◀] or [▶▶] . Perhaps the [▶▶] button to pause/play music. When in pause status, the red LED light will be on.

Bluetooth operating instructions:

Long press [⌘] to get into the Bluetooth pairing status, the blue LED light flashes slowly. At the moment, search the Bluetooth to pair with your cellphone. After pairing, it can play the music in your phone. When playing, the blue LED light flashes quickly, then you can select the music by pressing [◀◀] or [▶▶] . Or press the [▶▶] Pause/Play music button to set it. When in pause status, the blue LED flashes slowly.

In USB, SD loading status, if you need to switch to Bluetooth play, you need to press [play mode] button to switch Bluetooth mode then do the Bluetooth pairing.

Bluetooth Function

The digital piano supports the audio Bluetooth and Bluetooth MIDI connection, you can use phone or iPad to connect the audio Bluetooth and Bluetooth MIDI at the same time.

Note: We suggest to use two phone or iPad to connect with the piano separately, in order to avoid music stuttering while playing.

1 . Audio Bluetooth function


- (1) Turn on the piano, the Bluetooth function will be on at the same time.
- (2) Open your phone or iPad to get into Setting--Bluetooth, search "[AMASON AUDIO] device, the password is "6666", input the password if needed.
- (3) After successful pairing, we can play music through the phone or iPad.
- (4) You can switch song and volume with your phone. (Phone support required)

2. Bluetooth MIDI function (Software support required)

- (1) The Bluetooth MIDI transfer function is available on the piano.
- (2) Turn on the piano, the Bluetooth function will be on at the same time.
- (3) Turn on the Bluetooth function of your computer/phone/iPad, search MIDI Bluetooth device named "[AMASON]".
- (4) After successful pairing, we can transfer MIDI data through the phone or iPad.

Note: Bluetooth MIDI connection need your device support (computer/phone/iPad), different software have different connection method. For the specific connection method, please check the instruction of your software.

Back board function

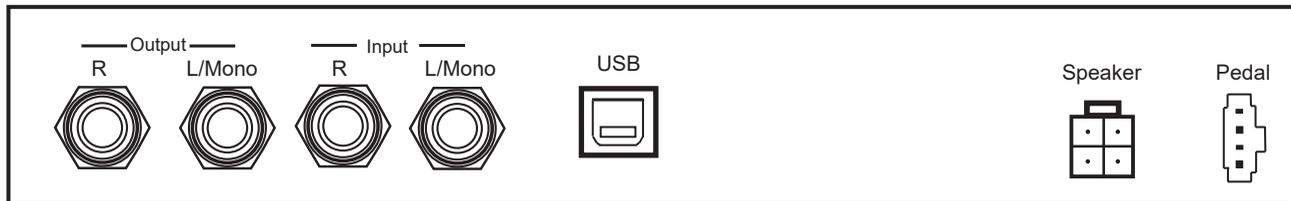


- 1. Audio Output** Stereo Output, connect the digital piano to an external amplifying system.
- 2. Audio Input** Stereo Input, connect the digital piano to an internal amplifying system.
- 3. USB** USB MIDI jack
- 4. Speaker** Connecting the external sound box.
- 5. Pedal** Connect with piano pedal.


Note: The internal speaker will be unavailable when connecting with Headphone. Volume master setting button can adjust Headphone volume.

USB MIDI function

- Connecting the digital piano from the back board USB jack to the host of CP, to start MIDI music production.

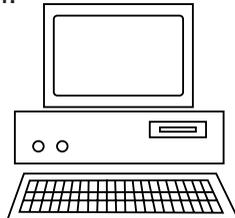

USB TO HOST connecting

 


Digital piano USB jack in the backboard

Audio connecting

- Audio input: To make the digital piano as a speaker by connecting the digital piano internal speaker system with other instrument.




Audio connecting

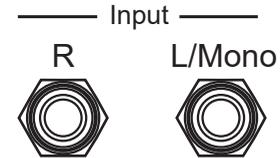

- Audio output: To make the digital piano as a sound source by connecting the digital piano with external amplifying system.



Audio connecting

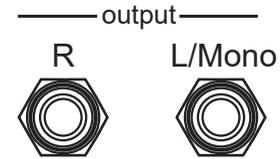

Sound list

Number	Instrument
00	Grand Piano
01	Bright Piano
02	Honky-Tonk Piano
03	Electric Piano 1
04	Electric Piano 2
05	Harpsichord
06	Marimba
07	Hammond Organ
08	Church Organ
09	Guitar (nylon)
10	Acoustic Bass
11	Pizzicato Strings
12	Orchestral Harp
13	String 2
14	Synth Strings 1
15	Muted Trumpet
16	Muted Trumpet
17	Clarinet

Number	Name
18	Pan FLute
19	Shakhachi
20	Pad 2 (warm)
21	Pad 8 (sweep)
22	FX3 (crystal)
23	Sitar
24	Shamisen
Drum	
0	Standard Kit

Rhythm List

Number	Name
00	8 Beat 1
01	8 Beat Pop 1
02	16 Beat 1
03	Guitar Ballad
04	Pop Ballad
05	Country Rock
06	Country Waltz
07	Salsa
08	Disco
09	Two Step
10	Polk Pop
11	80' s Fusion
12	Swing 1
13	Jazz Samba
14	Jive
15	Bebop
16	Cha Cha
17	TEX TEX

Number	Name
18	Rap
19	Blues
20	Rock 1
21	Rock 2
22	Rock Shuffle
23	March
24	Samba
25	Polka Ober
26	Miami Pop
27	Piano Ballad
28	Bossa Nova 2
29	Guitar Waltz

MIDI keyboard percussion music list

Note#	Note	Ostand set	1Room set	2Power set	3Electri set	4Synth set
27	C1	Syn Sound	Syn Sound	Syn Sound	Syn Sound	Syn Sound
28	C#1	Slap	Slap	Slap	Slap	Slap
29	D1	Scratch1	Scratch1	Scratch1	Slap	Scratch1
30	D#1	Scratch2	Scratch2	Scratch2	Scratch2	Scratch2
31	E1	Sticks	Sticks	Sticks	Sticks	Sticks
32	F1	Click	Click	Click	Click	Click
33	F#1	Metronome Click	Metronome Click	Metronome Click	Metronome Click	Metronome Click
34	G1	Metronome Bell	Metronome Bell	Metronome Bell	Metronome Bell	Metronome Bell
35	G#1	Kick2	Kick2	Kick2	Eleotry Kick2	Kick2
36	A1	Kick1	Kick1	Power Kick1	Eleotry Kick1	Synth Kick
37	A#1	Side Stick	Side Stick	Side Stick	Side Stick	Synth Side Stick
38	B1	Snare Drum2	Snare Drum2	Power Snare	Eleotry Snare Drum2	Synth Snare
39	C2	Hand Clap	Hand Clap	Hand Clap	Hand Clap	Hand Clap
40	C#2	Snare Drum1	Room Snare1	Snare Drum1	Eleotry Room	Snare Drum1

					Snare 1	
41	D2	Low Tom2	Power Low Tom2	Power Low Tom2	Eleotry Low Tom2	Synth Low Tom2
42	D#2	Closed Hi-Hat	Closed Hi-Hat	Closed Hi-Hat	Closed Hi-Hat	Synth Closed Hi-Hat
43	E2	Low Tom1	Power Low Tom1	Power Low Tom1	Eleotry Low Tom1	Synth Low Tom1
44	F2	Pedal Hi-Hat	Low Tom1	Pedal Hi-Hat	Pedal Hi-Hat	Synth Pedal Hi-Hat
45	F#2	Mid Tom2	Power Mid Tom2	Power Mid Tom2	Eleotry Mid Tom2	Synth Mid Tom2
46	G2	Open Hi-Hat	Open Hi-Hat	Open Hi-Hat	Open Hi-Hat	Synth Open Hi-Hat
47	G#2	Mid Tom1	Power Mid Tom1	Power Mid Tom1	Eleotry Mid Tom1	Synth Mid Tom1
48	A2	High Tom2	Power High Tom2	Power High Tom2	Eleotry High Tom2	Synth Tom2
49	A#2	Crash Cymbal	Crash Cymbal	Crash Cymbal	Crash Cymbal	Synth Crash Cymbal
50	B2	High Tom1	Power High Tom1	Power High Tom1	Power High Tom1	Synth High Tom1
51	C3	Ride Cymbal	Ride Cymbal	Ride Cymbal	Ride Cymbal	Ride Cymbal
52	C#3	Chinese Cymbal 1	Chinese Cymbal	Chinese Cymbal 1	Chinese Cymbal 1	Chinese Cymbal 1
53	D3	Ride Bell	Ride Bell	Ride Bell	Ride Bell	Ride Bell

54	D#3	Tambourine	Tambourine	Tambourine	Tambourine	Tambourine
55	E3	Splash Cymbal				
56	F3	Cowbell	Cowbell	Cowbell	Cowbell	Cowbell
57	F#3	Crash Cymbal				
58	G3	Vibra-Slap	Vibra-Slap	Vibra-Slap	Vibra-Slap	Vibra-Slap
59	G#3	Ride Cymbal				
60	A3	High bombo				
61	A#3	Low conga				
62	B3	Mute conga				
63	C4	High conga				
64	C#4	Low conga				
65	D4	High Timbale				
66	D#4	Low Timbale				
67	E4	High Agogo				
68	F4	Low Agogo				
69	F#4	Cabasa	Cabasa	Cabasa	Cabasa	Cabasa
70	G4	Msracas	Msracas	Msracas	Msracas	Msracas

71	G#4	Short Hi Whistle				
72	A4	Long low whistle				
73	A#4	ShortGüiro	ShortGüiro	ShortGüiro	ShortGüiro	ShortGüiro
74	B4	logn Güiro				
75	C5	Claves	Claves	Claves	Claves	Claves
76	C#5	Hi Wood Block				
77	D5	Low Wood Block				
78	D#5	Mute Cuica				
79	E5	Open Cueca				
80	F5	Mute Triangle				
81	F#5	Open Triangle				
82	G5	Shaker	Shaker	Shaker	Shaker	Shaker
83	G#5	Jingle Bell				
84	A5	Bell Tree				
85	#5	Castanets	Castanets	Castanets	Castanets	Castanets
86	B5	Mute Surdo				
87	C6	Open Surdo				

Demo List

Number	Demo Name
000	Chopin Fi
001	Bach Piano
002	Minuet Bach
003	Love Romance
004	Four Cygnets
005	Puppy Wlatz
006	CpnEtude
007	Turkey March
008	Chopin No.6
009	Menuett
010	MarciaAT
011	Chopin Night
012	Piano Ballad
013	Ragetime
014	Fn Rhythm
015	Dolly's Dream
016	4 Cygnets
017	Old France
018	Minuet Bath
019	Song of Joy
020	Doves
021	Curvet Piano
022	Spring Waltz

023	Aledeman
024	Bach 2 Creative
025	Moonlight Debussy
026	Gavotte Dance
027	Canon Piano
028	Cowboy & Flute
029	Turkey March
030	Humoresque
031	England March
032	Little Boat
033	Minuet Piano
034	Jingle Bells
035	Moscow Nights
036	Rainbow
037	Oh, Susanna
038	Lonely Goatherd
039	Missing In Moonlight
040	Old Black Joe
041	Santa Lucia
042	Good Scenery
043	Jambalaya
044	Little Cowboy

045	Fowing Stream
046	Little Swallow
047	Heart Love
048	Kaiser Waltz
049	Blue Danube Waltz

Specification

Technical Specifications	F-33
Exterior	Upright piano with flip cover
Feature	Imitation Carbon Fiber PVC, Black, White, Fold cover.
Keyboard	Italian Imported wooden 88 Grand-Response™ Key trends with hammer action & dynamic curve
Touch	5 piano touch curve, Default、 Light、 Standard、 Heavy、 Touch off.
Sound source:	Pearl River Amason independently developed the DSP sound source, Germany Famous grand piano sound sampling. , 10Layers dynamic, String overtone resonance analog audio technology.
Polyphony	512 (Stereo)
Sound	26 sounds
Rhythm	30 Styles
Demo	50 demos
Accompaniment control:	Chord auto-switch, SYN start, SYN stop, Start/Stop, A fill 1, B fill 2, Fade in/out, Prelude\Finale.
Record function:	CP program recording and playing system,record,replay,Maximum notes for one single song is 22000,MIDI,64tracks and 16channels,Support MIDI 0&1 file.
Sound Control	Grand piano tone, Dual voice, Double keyboard, Split mode, Split point.
Dual voice	Dual voice can be set when playing.

Technical Specifications	F-33
Volume control	Master volume, adjustable volume control when playing at night
Transposer :	25 (0,-/+12)
Octave:	Three Octaves (-8, 0, +8)
Effects:	127 tremolos,64 reverb, 64 chorus.
Metronome :	Dynamics click as per beat,1,2,3,4,5,6,7,8,9.
Tempo:	20-280per minute
Microphone:	Microphoe interface*2,Volume adjustment, Reverb adjustment,singing and playing, Accompany put in /Karaoke.
Build-in Bluetooth system:	It can connect with phone, pad to play audio music files.
Bluetooth MIDI wireless connection connection	To connect with smart device to achieve the MIDI interaction.(Software support required)
USB Interface	USB MIDI PC status, can achieve the record saving, support 64tracks and 16channels,Support MIDI 0&1 file, GM international standard can extend and upgrade the system.
Interface	USB jack, Microphone jack, Power jack, pedal jack, Headphone jack, Line IN/OUT.
Power	AC110V/60Hz,70W
Speakers:	2 woofer(5"), 2 tweeter(2")
Dimension (D x W x H) :	1375*415*789mm(L*W*H)

Troubleshooting

Problem	Cause/Action
There is noise when turn on/off the power	This is normal , please don't worry.
After turning on, no sound is produced when press the keys	Please adjust the master volume or check if there is headphone connecting the device.
The note and its timber are of a little differences under the same patch	This is normal.
When using the sustaining function, some patches are different long or short	This is normal.
The volume is too low	Please adjust the master volume knob.
MIDI transmission function fail when the MIDI Cord connecting well	This is normal.
Noise caused when near phone	This is normal, In order to avoid it please keep away when calling
When playing piano, the pitch is not in accordance with the keyboard	Please check if you have activated the SPLIT mode function and turn off it
Pitch can not be changed when playing piano, and the pitch is not in accordance with the keyboard	Please check if you have activated the SPLIT mode function and set the split point to the highest level, Turn off the split mode function and set the split point back to the original.

Distortion or intermittent when playing demo song	High temperature of the speaker when long time playing with max volume, at the time please turn down the volume or turn off the piano for a while then it will be great.
Two tones come out at the same time when playing	Dual sound function might by activated, please turn off it to avoid it.
Pitch wrong	Please confirm the pitch setting or set it to “Zero”
No automatic Accompany and Chord	Please confirm the accompany volume or if the Chord function is turned on.
Dynamics is not same as before	There are 5 piano touch curve, Default、 Soft、 Standard、 Hard、 Touch off. You might choose the wrong dynamics. Please set the one you need.

NOTE: This instrument has been tested and it is according with the relevant regulations of EMC. Wireless communication might caused the interference with this instrument. Or the instrument might caused the interference with wireless. The user should adopt the following measure to improve it.

Relocation or adjust the receiving antenna.

Keep a distance between the device and receiver.

Connect the receiver and the device cord in different plug.

Please consult your dealer or experienced wireless technician.

Caution:Do not modified the device by yourself.

*Pearl River Piano Group reserves the right to change or modify products or specifications at any time without prior notice.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

