

FLYKEYS

Achieve Your Music Dream

LK06S DIGITAL PIANO

USER MANUAL

Safety Guideline

Before playing the digital piano, please read the following content.

***Please put this instruction book in a safety place, in order to read it in the future.**



Warning

In case of getting seriously injured or killed because of electric shock, short circuit, damage, fire or other dangers, please obey the following warnings. These warnings include but not limited to the following situations:

Power/Electric Cable

- * The rated voltage of this device is fixed. The required voltage is printed on the nameplate of this device.
- * Check the plug regularly, clean the dirt and ash piled up on the plug.
- * This digital piano only matches with the provided power cable and plug.
- * Please don't put electric cable beside heaters or radiators. Don't bend too much or cause damage to electric cable. Don't put any heavy stuff on the wire. Don't put it where it may be run over or trampled to make people stumble.

Do Not Open

- * Please do not open this device and try to dismantle inner components or transform it in any ways. This device does not include any components for users to fix. If you find any problems, please stop using and ask our qualified service staffs to examine and repair the device.

Warning about humidity

- * In case of any liquid splashing into the device, please do not get this device rained or use it nearby water, in a wet surrounding or put a container of liquid on it. If any liquid, like water, splashes into the instrument, please cut off power and pull out the electric cable from the AC socket immediately. Then ask our qualified service staffs to examine and repair the device.
- * Do not plug with wet hands.

Fire

- * Do not place any burning stuff, like candle, on the instrument. It may cause fire.
- * When sensing any unusual situations, such as worn away and damage of power cable, sound suddenly stops during playing and the smell and smoke it causes, please turn off the power immediately and pull out plug from the socket. Ask our qualified service staffs to examine and repair the device.



Attention

In case that people around you and you get injured or get loss of device and property, please obey the following basic instructions. These instructions include but not limited to following situations.

Power/Electric Cable

- * When pulling out plug from socket, please grab the plug instead of power cable. Drawing directly will cause damage to the power cable.

- * If not using the instruments for a long time or during a lighting storm, please pull out plug from the socket.
- * Do not connect the instrument to the socket by multiple connector, or it will lower the sound quality, or it will make socket overheat

Assemble Use

- * Please carefully read the attachment that explains the assemble process. If assembling the instrument in a wrong order, it will damage the instrument and hurt the user.
- * Please connect the external equipment while the digital piano is off.
- * Before using, please install the supporting screw and adjust it close to the ground, in case of trampling pedal.

Installation place

- * In case of deformation of control panel and damage to inner components, please do not place this device in an environment with a lot of dirt, vibration, extreme cold and hot (such as, direct sunshine, closing to heater and inside a car under the burning sun).
- * Please do not use this device near the television, radio, stereo, cell phone or other electronic devices. This may make noise on the device itself and television or radio nearby.
- * Please do not put this device on unstable place, or it may cause a sudden fall down.
- * Before moving the device, please pull out all electric cables from the socket.
- * When you set this device, please confirm the AC socket going to be used is reachable. The device should be connected to the socket with protecting grounding connection. If you find any problems and questions, please immediately turn off the power and pull out the plug from the socket. Even

though the power is turned off, there is still a small amount of electricity current flowing through it. If you decide not using this device for a long time, please pull out the plug from AC socket.

- * This product uses all extreme power switch as a device to cut off from network power. The power switch button is on the right side of the keyboard.

The contents in this hand book is only for introduction purpose. It may be different from the instrument you buy.

INDEX

Attention to installation	7
Control Panel	8
Power On\Adjust Volume\Headphone Connection	9
Record Function\Play/Stop\ Play Demo Song	10
Accompany Function\ Syn Start\Variation	11
Voice Control\Teaching Function	12
Voice Restoration\Metronome	13
Function Control\Chord	14
Accompany Volume\Octave	15
Transposition\Soundboard resonance	16
Dual Voice	17
Split	18
Keyboard Split Point Setting\Effect	19
Reverb\ Chorus	20

Beat\ Touch	21
Percussion\Bluetooth function	22
Back Inserting Panel Function\USB MIDI Function	23
Audio Connection	24
Voice List	25
Rhythm List	29
MIDI Keyboard Percussion Check List	32
Demo Song List	35
Technical Specification	37
Trouble Shooting	39

 
Thank you for buying Our Digital Piano. No matter you are a student, piano hobbyist or the professional, this digital piano will impress you with its perfect sound and fashion design. It can be competent with piano studying, music listening, MIDI production, which satisfies your entertainment demand. It also has grand hammer dynamics keyboard, making you express yourself easily.

For further information about this new digital piano, we suggest you should read this hand book carefully in order to make full use of its advanced and convenient functions. Meanwhile, we also suggest you should keep this hand book well for reference in the future.

If you like Our digital piano, please recommend to your friends.


Attention to installation

In the process of installing the piano, be sure to contact the ground with the screw under the pedal, to make it close to the ground, in order to avoid any damage of the pedal.

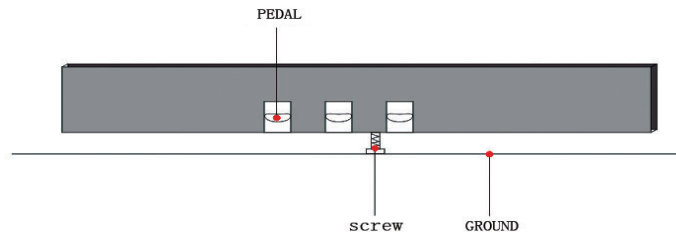

Control Panel

 All the function keys are on the left side control panel of the digital piano.

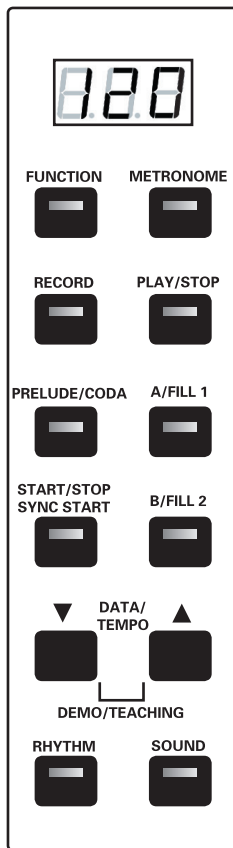

Power On

- 1) Connect the power to the piano and turn on the piano by pressing [Power] button.
Press the power button over 2 seconds to turn off the piano.
- 2) The default voice is grand piano.



Adjust Volume

Turn the Volume button on the control panel to set the volume.
Turn the button clockwise to raise volume. Turn the button anticlockwise to reduce volume



Warning: Too loud sound, especially when you wear the headphone, will do damage to hearing.

Headphone Connection

Apart from the built-in speaker system, you can also connect two standard stereo headphones. Headphone jack is on the left side under the keyboard. The built-in speaker system doesn't work after connecting the headphone. And just the headphone volume by switching master volume button.



Record Function

Start recording: Press [RECORD] button and the indicate light turns on, which means entering the record status. Meanwhile, the metronome starts automatically. It can be turned off manually if it isn't needed. (This digital piano has accompaniment track which can be recorded)



End recording:

- 1) Automatic Ending: During the recording process, when the storage space is full, recording will end automatically.
- 2) Manual Ending: Press the [RECORD] button during recording, and it will end recording.

 
Play/Stop

Record playing: Press [PLAY/STOP] button and start replaying record. Press [PLAY/STOP] button again to stop replaying.



Play Demo Song


Play all demo composition: Built-in 75 demo composition. Press [DEMO/TEACHING] button to loop demo composition. Press [DEMO/TEACHING] button again to stop playing. During the playing status, press [DATA/TEMPO+/-] button to select corresponding composition.

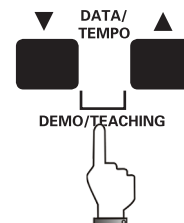

Accompany Function


Select Rhythm: Press [RHYTHM] button to activate rhythm selection. Press [DATA/TEMPO+/-] button to select rhythm within 5 seconds. (The rhythm list is in the appendix)

 Adjust accompaniment velocity: The [RHYTHM] indicator light turns off 5 seconds later after the rhythm is activated. Meanwhile, press [DATA/TEMPO+/-] button to adjust automatic accompaniment velocity.

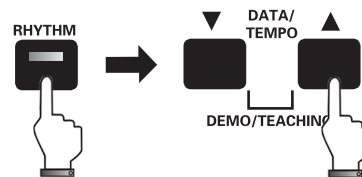

Sync Start

 
Long press [SYNC START] button, and the LED flashes. Press any button on the keyboard and the automatic accompaniment will start. Only the left keyboard will work if Chord Function is turned on.

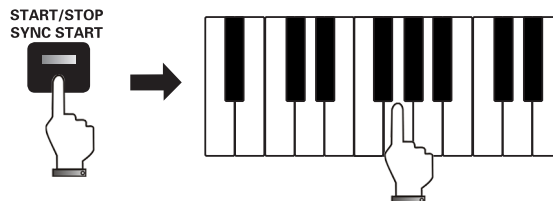

Variation

PRELUDE/CODA: Before the automatic accompaniment starts, press [PRELUDE/CODA] button to start prelude and enter the main musical A status automatically; When the automatic accompaniment is playing, press the [PRELUDE/CODA] button and the automatic accompaniment will stop automatically after playing a piece of coda.

 Fill in A-B: In automatic accompaniment status, press [A/FILL 1] and accompaniment will enter main musical A status; In automatic accompaniment status, press [B/FILL 2] and accompaniment will enter main musical B status.

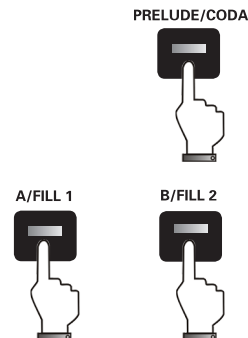


Voice Control

- 1) The default voice is 000 after power on.
- 2) **Voices select:** Press [SOUND] Button to activate voices selection function. OLED will display corresponding voice number. Press [DATA/TEMPO+/-] button to select any voice within 5 seconds.



Teaching Function

 Press one key and [DEMO/TEACHING] button to start teaching function. It will play the teaching composition.

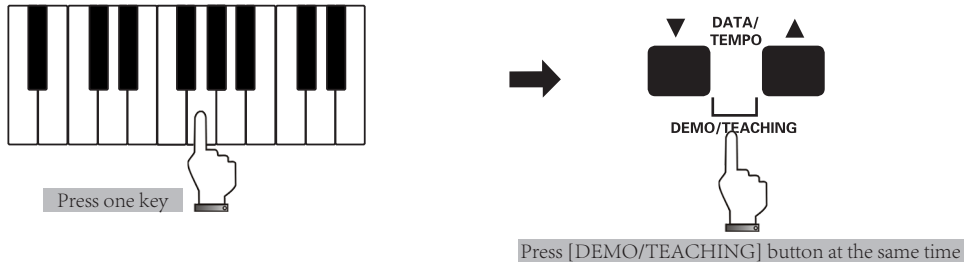


Voice Restoration

No matter in what playing status, long press [SOUND] button twice and the digital piano will return to original status. The default voice is Grand piano.



Metronome

 - 1) Press [METRONOME] button on control panel to start metronome and the indicator light will flash. OLED will display the beat velocity. The default velocity is 120 beats/min.
- 2) Press [DATA/TEMPO+/-] button to adjust beat velocity from 20 to 280 beats/min.
- 3) Press [METRONOME] button again to exit metronome setting. The digital piano will automatically save the current setting.
- 4) Restart digital piano to return to default beat setting.


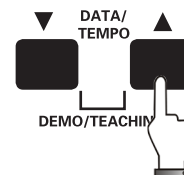


Use [DATA/TEMPO+/-] button to change current beat velocity

Function Control

As a user-friendly instrument, all functions in this digital piano can be activated easily. Every function is corresponding to a key.

  
(The name of each function is printed under the key for reference.)

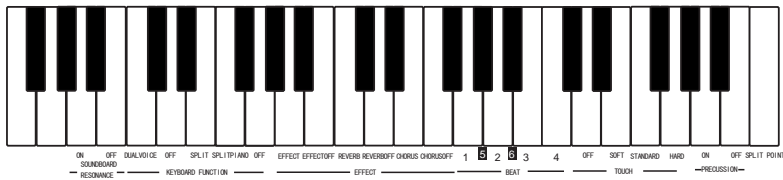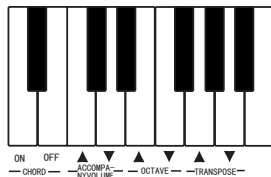

- 1) Press [Function] button, the indicator light turns on and function selection is activated.
Press a key within 5 seconds to select corresponding function.
- 2) Press [Function] button again or wait for 5 seconds without controlling, the indicator light will turn off and exit function setting status. Now you can play the digital piano according to the chosen function mode. (PS: Under the status of function setting, key pressing is soundless.)

Chord

 
- 1) This digital piano contains one chord mode; press [Function] button and the indicator light turns on. Press [Chord On] button within 5 seconds to start automatic chord function.

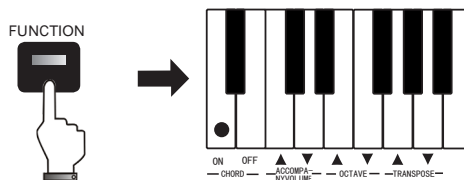

- 2) Press [FUNCTION] button, indicator light turns on. Press [CHORD OFF] button within 5 seconds to turn off automatic chord function.


Accompany Volume

 - 1) Press [FUNCTION] button, indicator light turns on.
Press [ACCOMPANIMENT VOLUME+/-] button within 5 seconds to adjust accompaniment volume.
- 2) Press [FUNCTION] button again or wait for 5 seconds without controlling, the indicator light will turn off and exit accompaniment volume adjusting.

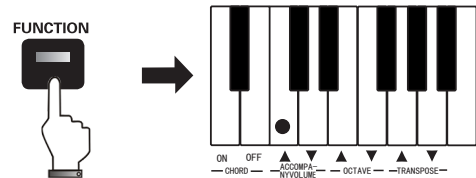

Octave

 - 1) Press [FUNCTION] button, indicator light turns on. Press [OCTAVE+/-] button within 5 seconds to adjust pitch.
- 2) Press [FUNCTION] button again or wait for 5 seconds without controlling, the indicator light will turn off and exit pitch adjusting.

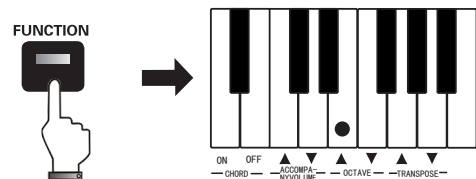


Transposition

This function can transpose a note to +/-12 semitone in a range of octachord.

1) Press [FUNCTION] button and indicator light turns on.

Press [TRANSPOSITION +/-] button within 5 seconds to adjust pitch. Adjusting range: -12 to +12.

 
2) Press [FUNCTION] button again or wait for 5 seconds without controlling, the indicator light will turn off and transposition select function turns off.

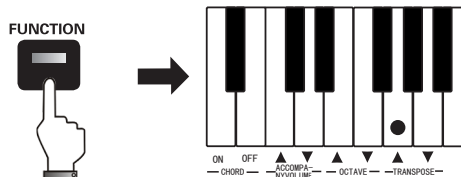

Soundboard Resonance

1) Press [FUNCTION] button, The indicator light up, Press [SOUNDBOARD RESONANCE] key within 5 seconds, the Soundboard Resonance function is activated. The piano will play with soundboard resonance effect.

 
2) Press [FUNCTION], the indicator light on, press [SOUNDBOARD RESONANCE OFF] key within 5 seconds, the function will be off.

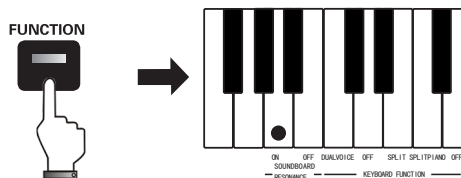


Dual Voice

1) Press [FUNCTION] button, indicator light turns on.

 Press [DUAL VOICE] button within 5 seconds to enter dual voices status.

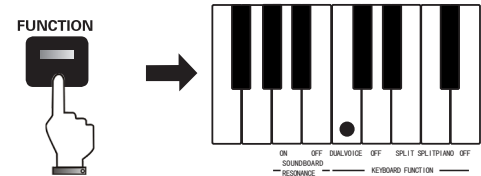

 2) Select 2nd voice by [DATA/TEMPO+/-] button. 1st voice should be adjusted before pressing [DUAL VOICE] button.

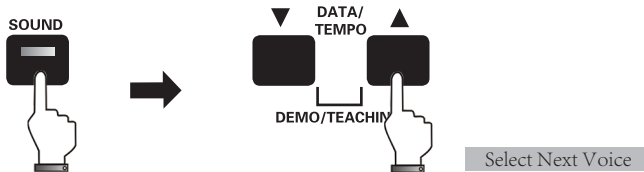


3) Press [Function] button and indicator light turns on.

Press [Dual Voice Off] button to turn off dual voice effect within 5 seconds to return to 1st voice.



Split

 This function can divide the keyboard into two individual playing zones.

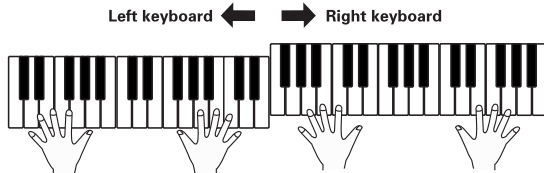


- 1) Before pressing [SPLIT] button, select voice for the left keyboard; Press [FUNCTION] button, the indicator light turns on, press [SPLIT] button within 5 seconds to enter split status. The keyboard is divided into two individual zones. The split point is Central C. Select voice for the right keyboard by [DATA/TEMPO+/-] button.



- 2) Press [FUNCTION] button and the indicator light turns on. Press [SPLIT OFF] button to exit split status within 5 seconds. Press [FUNCTION] button and the indicator light turns on. Press [SPLIT] button within 5 seconds to enter split status. The split point divides the keyboard into two individual playing zones.

Keyboard Split Point Setting

 Press [FUNCTION] button and the indicator light turns on. Press [SPLIT POINT] button within 5 seconds to enter split point setting status. Now press a key to set the split point; Press [FUNCTION] button again or wait for 5 seconds without controlling until the indicator light turns off, the split point is set.

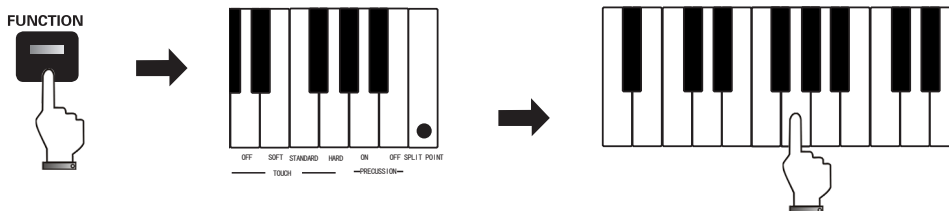


Effect

1) Press [FUNCTION] button and the indicator light turns on.

Press [EFFECT] button within 5 seconds to activate effect function and sound will have special effect.

2) Press [FUNCTION] button and the indicator light turns on.

 Press [EFFECT OFF] button within 5 seconds to turn off effect function.

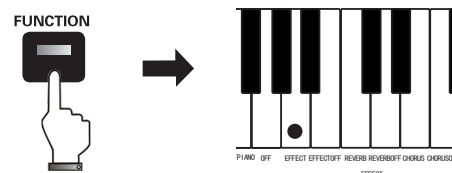


Reverb

1) Press [FUNCTION] button and the indicator light turns on.

Press [REVERB] button within 5 seconds to activate reverb function and sound will have reverb effect.

2) Press [FUNCTION] button and the indicator light turns on.

 Press [REVERB OFF] button within 5 seconds to turn off reverb effect.

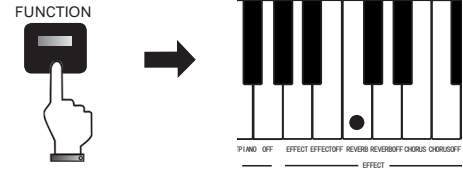

Chorus

1) Press [FUNCTION] button and the indicator light turns on. Press [CHORUS] button within 5 seconds to activate chorus function and sound will have chorus effect.

2) Press [FUNCTION] button and the indicator light turns on.

Press [CHORUS OFF] button within 5 seconds to turn off chorus function.



Beat

 
This digital piano has six kinds of beats, which are 1,2,3,4,5,6.

Press [FUNCTION] button and the indicator light turns on.

Press corresponding beat key within 5 seconds to set.

Press [FUNCTION] button again or wait for 5 seconds without controlling, the indicator light turns off, so as to set split point.

(5,6 is separately matched to the black key)

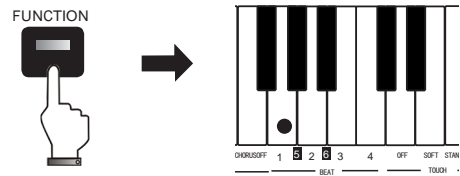


Touch

This digital piano has 5 touches curves:default、soft、standard、hard、touch off.

Press [FUNCTION] button and the indicator light turns on.


Press the corresponding touch key within 5 seconds to activate touch function.

 The default touch is default.

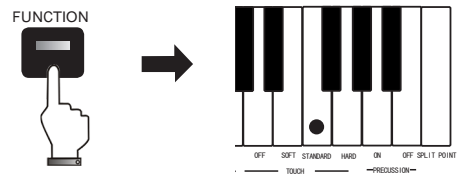

Percussion

 - 1) Press [FUNCTION] button and the indicator light turns on. Press [PERCUSSION ON] button within 5 seconds to activate percussion.
- 2) Press [FUNCTION] button and the indicator light turns on. Press [PERCUSSION OFF] button within 5 seconds to turn off percussion function. The digital piano will return to the original voice.

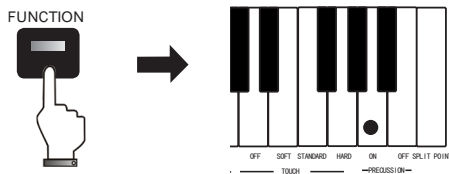


Bluetooth Function

Audio Bluetooth function

- (1) Turn on the piano, the Bluetooth function will be on at the same time.
- (2) Open your phone or iPad to get into Setting--Bluetooth, search [LK06S] device, the password is “6666” , input the password if needed.
- (3) After successful pairing, we can play music through the phone or iPad.
- (4) You can switch song and volume with your phone. (Phone support required)

 Back Inserting Panel Function

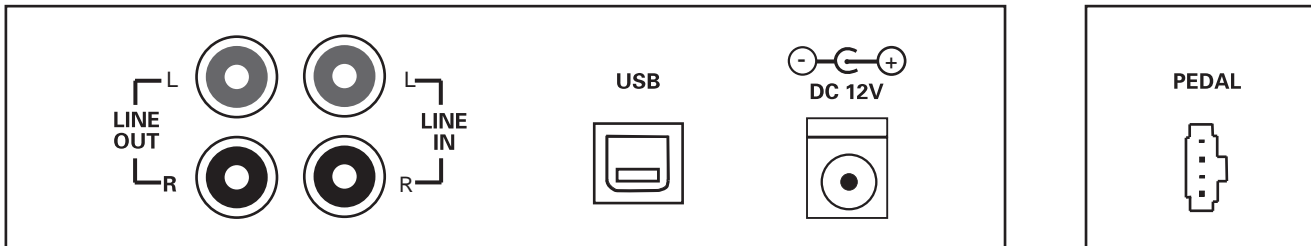

- (1) Line out Stereo output, connect the digital piano to a peripheral speaker system
- (2) Line in Stereo Input, connect the digital piano to a built-in speaker system
- (3) USB USB MIDI Jack
- (4) Power Connect power adapter
- (5) Pedal Pedal jack (Sustain, soft, sostenuto pedal)

USB MIDI function

Connect the computer to the USB MIDI Jack in the back inserting plate to get MIDI Production Function.




Audio connection

Line In: Connect the musical instrument to the built-in speaker system, regarding the digital piano as speaker.



 
AUDIO CONNECTION

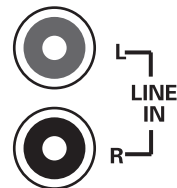

Line Out: Regarding this digital piano as sound source, connect it to the external speaker system.



 AUDIO CONNECTION

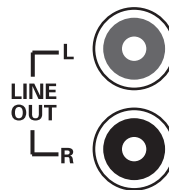

Voice List

Number	Instrument
PIANO	
000	PIANO GRD
001	PIANO BRITE
002	PIANO ELEC
003	HONKY-TONK
004	E PIANO1
005	E PIANO2
006	HARPSCRD
007	CLAVI
GLOCK	
008	CELESTA
009	GLOCKNSPL
010	MUSIC BOX
011	VIBRAPHONE
012	MARIMBA
013	XYLOPHONE
014	TUBULR BELLS
015	DULCIMER
ORGAN	
016	HAMND ORG
017	PERC ORG
018	ROCK ORG

Number	Instrument
019	CHURCH ORG
020	REED ORG
021	ACCORDN 1
022	HARMONICA
023	ACCORDN 2
GUITAR	
024	GTR NYLON
025	GTR STEEL
026	GTR JAZZ
027	GTR CLEAN
028	GTR MUTED
029	GTR OVRDRV
030	GTR DISTRT
031	GTR HRMNX
BASS	
032	ACOU BASS
033	FINGR BASS
034	PICK BASS
035	FRETLS BASS
036	SLAP BAS 1
037	SLAP BAS 2
038	SYN BASS 1

Number	Instrument
039	SYN BASS 2
STRING	
040	VIOLIN
041	VIOLA
042	CELLO
043	CONTRABASS
044	STR TREM
045	STR PIZZ
046	HARP
047	TIMPANI
CONCERT	
048	STRINGS 1
049	STRINGS 2
050	STR SYN 1
051	STR SYN 2
052	CHOIR AAHS
053	VOICE OOHS
054	VOICE SYN
055	ORCH HIT
BRASS	
056	TRUMPT
057	TROMBONE
058	TUBA

Number	Instrument
059	MUTE TPT
060	FR HORN
061	BRASS SECT
062	BRASS SYN 1
063	BRASS SYN 2
PIPE	
064	SAX SOPRANO
065	SAX ALTO
066	SAX TENOR
067	SAX BTONE
068	OBOE
069	ENG HORN
070	BASSON
071	CLARINET
WOODPIPE	
072	PICCOLO
073	FLUTE
074	RECORDER
075	PAN FLUTE
076	BOTTLE BLOWN
077	SHAKHACHI
078	WHISTLE
079	OCARINA

Number	Instrument
SYNTH PIPE	
080	SQR WAVE
081	SAW TOOTH
082	CALLIOPE
083	CHIFF
084	CHARANG
085	VOICE LEAD
086	5TH LEAD
087	BASS LEAD
SYNTH VOICE	
088	NEW AGE
089	WARM PAD
090	POLY SYNTH
091	CHOIR PAD
092	BOW GLASS
093	METAL PAD
094	HALO PAD
095	SWEEP
SYNTH EFFECT	
096	RAIN FX
097	SNDTRK FX
098	CRYSTAL FX
099	ATMOSPH FX

Number	Instrument
100	BRIGHT FX
101	GOBLIN FX
102	ECHO FX
103	SCI-FI FX
FOLK SOUND	
104	SITAR
105	BANJO
106	SHAMISEN
107	KOTO
108	KALIMBA
109	BAGPIPE
110	FIDDLE
111	SHANAI
PERCUSSION	
112	TINKLE BELL
113	AGOGO
114	STEEL DRM
115	WOODBK
116	TAIKO DRM
117	MLDY TOM
118	SYNTH DRM
119	REVRS CYM
EFFECT	

Number	Instrument
120	GTR NOISE
121	BREATH
122	SEASHORE
123	BIRD TWEET
124	TELEPHONE
125	HELICOPTER
126	APPLAUSE
127	GUNSHOT
National sound(China)	
128	Yun Luo
129	GanMeiLa
130	BianMang
131	YangQin
132	LuSheng
133	PiPa
134	LiuQin
135	YueQin
136	DaRuan
137	ZhonRuan
138	GaoHu
139	ErHu
140	ZhongHu
141	ErHuEb1
142	BangDi

Number	Instrument
143	KunDi
144	Xiao
145	BanHu
146	JingHu
147	ZhuiHu
148	SanXian
149	GuZheng
150	SuoNa
151	PaiGu
152	BianQin
153	BianZhong
154	HuLuSi
Drums	
000	Standard Drums
001	China Drums
002	Room Drums
003	Jazz Drums
004	Pwr.Drums
005	Electinic Drums
006	T808 Drums
007	Dance Drums
008	Brush Drums
009	Orche Drums
010	Sfx.Drums

Rhythm List

Number	Rhythm Name
000	8 Beat 1
001	8 Beat 2
002	8 Beat 3
003	8 Beat 4
004	8 Beat Heat
005	8 Beat Pop 1
006	8 Beat Pop 2
007	16 Beat 1
008	16 Beat 2
009	16 Beat 3
010	16 Beat 4
011	16 Beat Funk
012	16 Beat Pop
013	16 Beat Ballad
014	Ballad 1
015	Ballad 2
016	Guitar Ballad
017	Organ Ballad
018	Bluse Ballad
019	Epic Ballad
020	Rock Ballad
021	Slow Ballad

Number	Rhythm Name
022	Pop Ballad
023	Electro Pop Ballad
024	Polk Ballad
025	Country
026	Country Rock
027	Country Shuffle
028	Country Swing
029	Country Ballad
030	Country Waltz
031	House
032	Slow Fox
033	Vienna Waltz
034	Salsa
035	Disco
036	Hip Hop Pop
037	Analog Pop
038	Club Dance
039	Disco Tropic
040	Disco Hands
041	Two Step
042	Polk Pop
043	Waltz 1

Number	Rhythm Name
044	Waltz Pop 1
045	Waltz Pop 2
046	Boogie
047	Funky Pop
048	80's Fusion
049	Jazz Rock
050	Swing 1
051	Dixieland
052	Jazz Samba
053	Jive
054	Bebop
055	Bossa Nova 1
056	Guitar Bossa
057	Pop Bossa
058	Tango
059	Cha Cha
060	Rhumba
061	TEX TEX
062	Chicago Blues
063	Fast Gospel
064	Groove Soul
065	Rap
066	GospelSl

Number	Rhythm Name
067	Blues
068	Blues Rock
069	Gospel Shuffle
070	Slow Blues
071	Foxtrot
072	50's Rock
073	Heavy Metal
074	Rock 1
075	Rock 2
076	Soft Rock
077	Slow Rock
078	Hard Rock
079	Rock & Roll 1
080	Rock & Roll 2
081	Rock Shuffle
082	March
083	US. March
084	Samba
085	Polka
086	Polka Ober
087	Tarantella
088	Slow Waltz
089	Ober Waltz

Number	Rhythm Name
090	Rai
091	Twist 1
092	Twist 2
093	Miami Pop
094	Motown
095	Reggae
096	Swing Reggae
097	Mambo
098	Beguine
099	Musette
100	Piano Ballad
101	Jazz Waltz
102	Bossa Nova 2
103	Waltz 2
104	Guitar Waltz
105	2/4 Piano 1
106	2/4 Piano 2
107	3/4 Piano 1
108	3/4 Piano 2
109	4/4 Piano 1

Number	Rhythm Name
110	4/4 Piano 2
111	4/4 Piano 3
112	4/4 Piano 4
113	China 1
114	China 2
115	China 3
116	China 4
117	China 5
118	China 6
119	China 7
120	70's Rock
121	Ballad
122	Cha Cha
123	Country Rock
124	Cool Soul
125	Dance
126	Deep Happy
127	Disco
128	Easy Beat
129	Euro Pop

MIDI Keyboard Percussion Check List

Note#	Note	Ostand set	1Room set	2Power set	3Electric set	4Synth set
7	D#1	Syn Sound	Syn Sound	Syn Sound	Syn Sound	Syn Sound
8	E1	Slap	Slap	Slap	Slap	Slap
9	F1	Scratch1	Scratch1	Scratch1	Slap	Scratch1
10	F#1	Scratch2	Scratch2	Scratch2	Scratch2	Scratch2
11	G1	Sticks	Sticks	Sticks	Sticks	Sticks
12	G#1	Click	Click	Click	Click	Click
13	A1	Metronome Click	Metronome Click	Metronome Click	Metronome Click	Metronome Click
14	A#1	Metronome Bell	Metronome Bell	Metronome Bell	Metronome Bell	Metronome Bell
15	B1	Kick2	Kick2	Kick2	Electric Kick2	Kick2
16	C2	Kick1	Kick1	Power Kick1	Electric Kick1	Synth Kick
17	C#2	Side Stick	Side Stick	Side Stick	Side Stick	Synth Side Stick
18	D2	Snare Drum2	Snare Drum2	Power Snare	Electric Snare Drum2	Synth Snare
19	D#2	Hand Clap	Hand Clap	Hand Clap	Hand Clap	Hand Clap
20	E2	Snare Drum1	Room Snare1	Snare Drum1 Snare 1	Electric Room	Snare Drum1
21	F2	Low Tom2	Power Low Tom2	Power Low Tom2	Electric Low Tom2	Synth Low Tom2
22	F#2	Closed Hi-Hat	Closed Hi-Hat	Closed Hi-Hat	Closed Hi-Hat	Synth Closed Hi-Hat
23	G2	Low Tom1	Power Low Tom1	Power Low Tom1	Electric Low Tom1	Synth Low Tom1
24	G#2	Pedal Hi-Hat	Low Tom1	Pedal Hi-Hat	Pedal Hi-Hat	Synth Pedal Hi-Hat
25	A2	Mid Tom2	Power Mid Tom2	Power Mid Tom2	Electric Mid Tom2	Synth Mid Tom2
26	F#2	Open Hi-Hat	Open Hi-Hat	Open Hi-Hat	Open Hi-Hat	Synth Open Hi-Hat
27	G2	Mid Tom1	Power Mid Tom1	Power Mid Tom1	Electric Mid Tom1	Synth Mid Tom1

Note#	Note	Ostand set	1Room set	2Power set	3Electric set	4Synth set
28	G#2	High Tom2	Power High Tom2	Power High Tom2	Electric High Tom2	Synth Tom2
29	A2	Mid Tom2	Power Mid Tom2	Power Mid Tom2	Electric Mid Tom2	Synth Mid Tom2
30	A#2	Open Hi-Hat	Open Hi-Hat	Open Hi-Hat	Open Hi-Hat	Synth Open Hi-Hat
31	B2	Mid Tom1	Power Mid Tom1	Power Mid Tom1	Electric Mid Tom1	Synth Mid Tom1
32	C3	High Tom2	Power High Tom2	Power High	Electric High Tom2	Synth Tom2
33	C#3	Crash Cymbal	Crash Cymbal	Crash Cymbal	Crash Cymbal	Synth Crash Cymbal
34	D3	High Tom1	Power High Tom1	Power High Tom1	Power High Tom1	Synth High Tom1
35	D#3	Ride Cymbal	Ride Cymbal	Ride Cymbal	Ride Cymbal	Ride Cymbal
36	E3	Chinese Cymbal 1	Chinese Cymbal 1	Chinese Cymbal 1	Chinese Cymbal 1	Chinese Cymbal 1
37	F3	Ride Bell	Ride Bell	Ride Bell	Ride Bell	Ride Bell
38	F#3	Tambourine	Tambourine	Tambourine	Tambourine	Tambourine
39	G3	Splash Cymbal	Splash Cymbal	Splash Cymbal	Splash Cymbal	Splash Cymbal
40	G#3	Cowbell	Cowbell	Cowbell	Cowbell	Cowbell
41	A3	Crash Cymbal	Crash Cymbal	Crash Cymbal	Crash Cymbal	Crash Cymbal
42	A#3	Vibra-Slap	Vibra-Slap	Vibra-Slap	Vibra-Slap	Vibra-Slap
43	B3	Ride Cymbal1	Ride Cymbal1	Ride Cymbal1	Ride Cymbal1	Ride Cymbal1
44	C4	High bomgo	High bomgo	High bomgo	High bomgo	High bomgo
45	C#4	Low conga	Low conga	Low conga	Low conga	Low conga
46	D4	Mute conga	Mute conga	Mute conga	Mute conga	Mute conga
47	D#4	High conga	High conga	High conga	High conga	High conga
48	E4	Low conga	Low conga	Low conga	Low conga	Low conga
49	F4	High Timbale	High Timbale	High Timbale	High Timbale	High Timbale
50	F#4	Low Timbale	Low Timbale	Low Timbale	Low Timbale	Low Timbale
51	G4	High Agogo	High Agogo	High Agogo	High Agogo	High Agogo

Note#	Note	Ostand set	1Room set	2Power set	3Electric set	4Synth set
52	G#4	Low Agogo	Low Agogo	Low Agogo	Low Agogo	Low Agogo
53	A4	Cabasa	Cabasa	Cabasa	Cabasa	Cabasa
54	A#4	Msracas	Msracas	Msracas	Msracas	Msracas
55	B4	Short Hi Whistle	Short Hi Whistle	Short Hi Whistle	Short Hi Whistle	Short Hi Whistle
56	C5	Long low whistle	Long low whistle	Long low whistle	Long low whistle	Long low whistle
57	C#5	ShortGuiro	ShortGuiro	ShortGuiro	ShortGuiro	ShortGuiro
58	D5	logn Guiro	logn Guiro	logn Guiro	logn Guiro	logn Guiro
59	D#5	Claves	Claves	Claves	Claves	Claves
60	E5	Hi Wood Block	Hi Wood Block	Hi Wood Block	Hi Wood Block	Hi Wood Block
61	F5	Low Wood Block	Low Wood Block	Low Wood Block	Low Wood Block	Low Wood Block
62	F#5	Mute Cuica	Mute Cuica	Mute Cuica	Mute Cuica	Mute Cuica
63	G5	Open Cueca	Open Cueca	Open Cueca	Open Cueca	Open Cueca
64	G#5	Mute Triangle	Mute Triangle	Mute Triangle	Mute Triangle	Mute Triangle
65	A5	Open Triangle	Open Triangle	Open Triangle	Open Triangle	Open Triangle
66	#5	Shaker	Shaker	Shaker	Shaker	Shaker
67	B5	Jingle Bell	Jingle Bell	Jingle Bell	Jingle Bell	Jingle Bell
68	C6	Bell Tree	Bell Tree	Bell Tree	Bell Tree	Bell Tree
69	C#6	Castanets	Castanets	Castanets	Castanets	Castanets
70	D6	Mute Surdo	Mute Surdo	Mute Surdo	Mute Surdo	Mute Surdo
71	D#6	Open Surdo	Open Surdo	Open Surdo	Open Surdo	Open Surdo

Demo Song List

No.	Name	No.	Name	No.	Name	No.	Name
000	Chopin Fi	022	Old France	044	Minuet Piano	066	Oh, Susanna
001	AMASON Rock	023	Minuet Bath	045	Little Starts	067	August Flower
002	Fountain	024	Song of Joy	046	Deep Sea	068	Paloma Blanca
003	Bach Piano	025	Busker	047	Wa Ha Ha	069	Picking Tea
004	Minuet Bach	026	NewsPaper Sale	048	Snail & Bird	070	Camellia Girl
005	Love Romance	027	Doves	049	In Moonshine	071	When Child Born
006	Four Cygnets	028	Mai Tang Yuan	050	Nature Wonder Land	072	FebruaryComing
007	Puppy Wlutz	029	Trout	051	Years Ago	073	Fengyang Flower Drum
008	CpnEtude	030	Curvet Piano	052	CuaiYunZhuiYue	074	Lonely Goatherd
009	Turkey March	031	Spring Waltz	053	Liang Zhu	075	Red Plum Flower
010	Chopin No.6	032	Aledeman	054	Jingle Bells	076	Lambada
011	Menuett	033	Bach 2 Creative	055	Run Hours On Hall	077	LuYang River
012	MarciaAT	034	Moonlight Debussy	056	Moscow Nights	078	HongHu Rever
013	Chopin Night	035	Tea & Butterfly	057	Shear	079	Flower So Red
014	Piano Ballad	036	Gavotte Dance	058	North Spring	080	Koujouno Tsuki
015	Ragetime	037	Canon Piano	059	Youth Dance	081	Doraji
016	Zi Zhu Diao	038	Cowboy & Flute	060	Rainbow	082	Missing In Moonlight
017	Sad Person	039	Turkey March	061	On Wings Of Song	083	Cabrits
018	Fn Rhythm	040	Humoresque	062	Arirang	084	From the new world
019	Eugenia	041	England March	063	TianXianPei	085	Old Black Joe
020	Dolly's Dream	042	Little Boat	064	Sakura	086	Let us row oars
021	4 Cygnets	043	Happy Farmer	065	Bella Ciao	087	The Mail Troika

No.	Name	No.	Name	No.	Name	No.	Name
088	Santa Lucia	099	Little Swallow	110	Katyusha	121	Beyer etude 24
089	Good Scenery	100	Heart Love	111	Christmas Eve	122	Beyer etude 26
090	Jambalaya	101	Dance of Yao Tribe	112	GADA Meilin	123	Beyer etude 27
091	Four Seasons Song	102	Brave Oroqen	113	Danny Boy	124	Beyer etude 28
092	Solo River	103	Please Stay Guest	114	De Nie Er	125	Beyer etude 29
093	My Sun	104	Yunnan Folk Song	115	How Steel Tempered	126	Beyer etude 30
094	Washing Song	105	Under Silver Moon	116	Maira	127	Beyer etude 31
095	Lift Your Veil	106	Chairman Mao	117	Green Sleeves	128	Beyer etude 48
096	Little Cuckoo	107	On Hall of Beijing	118	Kaiser Waltz	129	Beyer etude 52
097	Little Cowboy	108	Yellow River	119	Blue Danube Waltz		
098	Fowing Stream	109	Whole River Red	120	Beyer etude 10		

Technical Specification

Sound source: DSP chip, FZOLF308 Grand piano sound sampling. Five layers dynamic, String overtone resonance analog audio technology.

Keyboard: 88 keys dynamic curve hammer action weighted keyboard

Polyphony: 192(Stereo)

Demo: 130 demos, (Classical piano music+Sound demo+Rhythm demo)

Touch: 5 piano standard touch curves, Default、 Light、 Standard、 Heavy、 Touch on/off.

Sound: 166 sounds with 128GM standard MIDI, 27 folk music, 10 series percussion music, 1 effect voice.

Rhythm:130.

Rhythm control: Auto Chord Switch, SYN start, SYN stop, A fl 1, B fl 2, Prelude\Finale.

Record function: 2 record tracks, record、 replay supported, Maximum notes for one single song is 22000, MIDI, 64 tracks and 16 channels, Support MIDI 0&1 file.

Sound Control: Grand piano tone, Dual voice, Double keyboard, Split mode, Split point.

Dual voice: Dual voice can be set when playing.

Keyboard Split: Double piano, Piano duet, String ensemble, Wind orchestra, Piano+Violin, Guitar+Violin, It can make different setting.

Volume control: Master volume, Accompany volume (0-32), adjustable volume control when playing at night.

Transpose: 25 (0,-/+12)

Octave: 3 octaves,-1,0,+1

Effect function: 64 reverb, 64 chorus,127 Tremolo effect.

Metronome: Dynamics click as per beat,1,2,3,4,5,6,

Tempo: 20-280

Bluetooth: Bulit in Bluetooth.

Pedal: Imitated traditional grand piano pedal function, Soft, selected sustain, sustain.

Interface: USB MIDI jack, pedal jack, Power jack, Headphone jack,Line IN /OUT.

Power: DC12V/2000mA

Dimension: 1360*410*790mm

Net weight: 42.5kg

Accessories: Power Adapter, Guarantee card, Quality certificate, User manual

Trouble Shooting

Problem	Cause/Action
There is noise when turn on/off the power	This is normal , please don' t worry.
After turning on, no sound is produced when press the keys	Please adjust the master volume or check if there is a headphone connected in the device.
The note and its timber are of a little differences under the same patch	This is normal.
When using the sustaining function, some patches are different long or short	This is normal.
The volume is too low	Please adjust the master volume knob.
MIDI transmission function fail when the MIDI Cord connecting well	This is normal.
Noise caused when near phone	This is normal, In order to avoid it please keep away when calling.
When playing piano, the pitch is not in accordance with the keyboard	Please check if you have activated the SPLIT mode function and turn it off.
Pitch can not be changed when playing piano, and the pitch is not in accordance with the keyboard	Please check if you have activated the SPLIT mode function and set the split point to the highest level, Turn off the split mode function and set the split point back to the original.
Distortion or intermittent when playing demo songs	The cause could be the overheating of the speakers,when you play for a long time with the maximum volume, at this point please lower the volume or turn the piano off for a while.
Two tones come out at the same time when playing	Dual sound function might by activated, please turn off it to avoid it.
Pitch wrong	Please confirm the pitch setting or set it to “Zero”
No automatic Accompaniment and Chord	Please confirm the accompaniment volume or if the Chord function is turned on.

Problem	Cause/Action
Dynamics is not same as before	There are 5 piano touch curve, Default、 Soft、 Standard、 Hard、 Touch off. You might choose the wrong dynamics. Please set the one you need.

NOTE: This instrument has been tested and it is according with the relevant regulations of EMC. Wireless communication might caused the interference with this instrument. Or the instrument might caused the interference with wireless. The user should adopt the following measure to improve it.

- Relocation or adjust the receiving antenna.
- Keep a distance between the device and receiver.
- Connect the receiver and the device cord in different plug.
- Please consult your dealer or experienced wireless technician.

Caution: Do not modified the device by yourself.

**Our company reserves the right to change or modify products or specifications at any time without prior notice.



**Manufactured by
Guangzhou Pearl River Amason Digital Musical Instrument Co.,Ltd**

**Add:No.38.Xiangshan Ave,Zengcheng Economic and Technological
Development Zone,Guangzhou China**

Tel:+86-20-36574618

Fax:+86-20-81764948

Email:maggiechen@prpiano.cn

NO.:2B000720

§ 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.