



When folded, please make sure that this title page is visible and not folded inside.

FRONT PAGE

<p><b>TROUBLESHOOTING TIPS</b></p> <table border="1"> <tr> <td rowspan="6">No Sound.</td> <td>Power on the earphones.</td> </tr> <tr> <td>Charge the battery.</td> </tr> <tr> <td>Increase the volume on your phone/device.</td> </tr> <tr> <td>Ensure that the earphones are connected to you device.</td> </tr> <tr> <td>Make sure earbuds are not paired with a different device.</td> </tr> <tr> <td>Make sure the phone/device is not in mute mode.</td> </tr> <tr> <td>Restart phone/device.</td> </tr> <tr> <td>Check with a different music source.</td> </tr> <tr> <td rowspan="3">Poor Sound Quality.</td> <td>Move your mobile device closer to the earphones and away from any interference or obstructions.</td> </tr> <tr> <td>Charge the battery.</td> </tr> <tr> <td>Check with a different music source.</td> </tr> <tr> <td rowspan="3">Battery Won't Charge.</td> <td>Ensure that charging cable is connected securely.</td> </tr> <tr> <td>Make sure the charging cable or charging connector is not damaged.</td> </tr> <tr> <td>Make sure that the charging connection is not dirty resulting in poor contact between earphones and charging case contacts.</td> </tr> <tr> <td>Try a different charging source.</td> </tr> <tr> <td rowspan="2">Functions not working as described in the manual.</td> <td>Depending on the phone/device some of the functions, such as the music/track control functions, may not operate as described. But, all the main features should operated correctly.</td> </tr> </table>		No Sound.	Power on the earphones.	Charge the battery.	Increase the volume on your phone/device.	Ensure that the earphones are connected to you device.	Make sure earbuds are not paired with a different device.	Make sure the phone/device is not in mute mode.	Restart phone/device.	Check with a different music source.	Poor Sound Quality.	Move your mobile device closer to the earphones and away from any interference or obstructions.	Charge the battery.	Check with a different music source.	Battery Won't Charge.	Ensure that charging cable is connected securely.	Make sure the charging cable or charging connector is not damaged.	Make sure that the charging connection is not dirty resulting in poor contact between earphones and charging case contacts.	Try a different charging source.	Functions not working as described in the manual.	Depending on the phone/device some of the functions, such as the music/track control functions, may not operate as described. But, all the main features should operated correctly.	<p><b>ONE YEAR WARRANTY</b></p> <p>Xtreme warrants its products for one year against defects in manufacturing under regular consumer use with original receipt of retail purchase. We believe in our products and want to provide you with a replacement, if needed, but we have to know about the problem while the product is still under warranty. If you discover a defect covered by this warranty, please contact us about receiving a replacement. In order to use the products warranty the customer must provide proof of the retailers receipt.</p> <p>*Any customers outside of the U.S. will be responsible for shipping and handling charges if a replacement is required that is not due to a manufacturing defect. If there is not a manufacturing defect, shipping and handling will be applied.</p> <p>Xtreme's warranty is limited to our products only. Our warranty does not cover the replacement or repair cost of any third-party accessory, electronic device or personal property.</p> <p>For instructions about how to obtain warranty service for your product, please contact Customer Service: customerservice@xtremecables.com. Content is subject to change without prior notice. Some content may differ from how the product works with your specific device.</p> <p><b>WHAT'S INSIDE</b></p> <p>True Wireless Earphones Charging Case USB Type-C Charging Cable 2 Extra Ear Cushions Instruction Manual</p> <p><b>SPECIFICATIONS:</b></p> <p>Input: 5V/500mA Bluetooth Working Range: 10m(33ft) Earphones Battery Capacity: 40mAh Charging Case: 250mAh Playing Time: 3H Talking Time: 2.5H Earphones Charging Time: 1H Case Charging Time: 1.5H</p> <p>FCC ID: 2ASJU-B33J</p>	<p><b>FCC STATEMENT</b></p> <p>Any changes or modifications not expressly approved by the part responsible for compliance could void this user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does not cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct interference by one or more of the following measures:</p> <ul style="list-style-type: none"> <li>Reorient or relocate the receiving antenna</li> <li>Increase the separation between the equipment and receiver</li> <li>Connect the equipment into an outlet on a circuit different from that to which the receiver is connected</li> <li>Consult the dealer or an experienced radio/TV technician for help</li> </ul> <p><b>FCC RADIATION EXPOSURE STATEMENT</b></p> <p>This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.</p>	 <p><b>Bluetooth</b> TWS SERIES</p> <p>Manual XBE9-0135-BLK 855-999-8041   WWW.XTREMECABLES.COM</p>
No Sound.	Power on the earphones.																							
	Charge the battery.																							
	Increase the volume on your phone/device.																							
	Ensure that the earphones are connected to you device.																							
	Make sure earbuds are not paired with a different device.																							
	Make sure the phone/device is not in mute mode.																							
Restart phone/device.																								
Check with a different music source.																								
Poor Sound Quality.	Move your mobile device closer to the earphones and away from any interference or obstructions.																							
	Charge the battery.																							
	Check with a different music source.																							
Battery Won't Charge.	Ensure that charging cable is connected securely.																							
	Make sure the charging cable or charging connector is not damaged.																							
	Make sure that the charging connection is not dirty resulting in poor contact between earphones and charging case contacts.																							
Try a different charging source.																								
Functions not working as described in the manual.	Depending on the phone/device some of the functions, such as the music/track control functions, may not operate as described. But, all the main features should operated correctly.																							

BACK PAGE

<p>Your TW-X earphones and charging case have built-in rechargeable batteries for convenient wireless use. Be sure to fully charge the batteries before initial use or when the wireless earphones have not been used for an extended period of time.</p> <p><b>FEATURES</b></p> <ul style="list-style-type: none"> <li>True wireless xtra slim Bluetooth® earphones and pocket sized charging case with LED indicator</li> <li>Portable, lightweight and sweat resistant</li> <li>Touch control on earphones for play/ pause &amp; answering phone calls</li> <li>Earphones can be used as a single use earphone or as a pair</li> <li>Wirelessly recharge your earphones 3 full times while on the go with included charging case</li> </ul> <p><b>USING EARPHONES</b></p> <ul style="list-style-type: none"> <li><b>Power ON/Power Off:</b> Press and hold the left and right multifunction touch sensors for 3 seconds to power on the earphones. After powering on, your earphones will pair to each other and enter pairing mode. Press and hold for 4 seconds to power them off.</li> <li><b>Hands-free Phone Operations:</b> To answer incoming calls, single press the left or right multifunction touch sensor. To hang up a current call, double press the left or right multifunction touch sensor. To reject an incoming call, press and hold the left or right multifunction touch sensor for 2-3 seconds.</li> <li><b>Playing/Pause:</b> Single press the left or right multifunction touch sensor to play or pause audio.</li> <li><b>Voice Assistant:</b> Press and hold the left or right multifunction touch sensor to activate voice assistant.</li> <li><b>Volume Down:</b> To decrease the volume, double press the left multifunction touch sensor.</li> <li><b>Previous Track:</b> To go to the previous song, or rewind the current song, triple press the left multifunction touch sensor.</li> <li><b>Volume Up:</b> To increase the volume, double press the right</li> </ul>	<p>multifunction touch sensor.</p> <ul style="list-style-type: none"> <li><b>Next Track:</b> To go to the next song, triple press the right multifunction touch sensor.</li> </ul>  <p><b>BLUETOOTH® CONNECTION</b></p> <p>Power on the True Wireless Bluetooth Earphones. The True Wireless earphones will automatically pair to each other at power on and enter pairing mode. Enable Bluetooth on the phone or device that you want to pair. Select "XBE9-0135-BLK" from the list of available Bluetooth devices to pair and connect. The unit will prompt a signal tone followed by the words "connected" to confirm that you have paired successfully.</p> <p><b>Charging Your Earphones and Case:</b></p> <p>The charging case has a digital display which indicates the current battery life of the case. Connect the USB Type-C charging cable to the earbud charging case's USB Type-C port. Insert the other end to a 5V USB power source(not included). The digital display will begin to flash, indicating that the case is being charged and will display the number "100" when it is fully charged. Place the True Wireless Earphones inside</p>	<p>of the charging case. The charging lights on the earbuds will turn solid red during charging and will become solid blue when they are fully charged.</p> <p><b>Note: The True Wireless Earphones can be charged up to 3 times in a fully charged charging case.</b></p> <p><b>Mono Mode Pairing</b></p> <p>The two earphones can be paired with the Bluetooth device separately. Follow the pairing instruction in the previous step, to pair one earbud separately.</p> <p><b>Note: The next time the earphones are powered on, they will automatically connect the previously connected phone/device.</b></p> <p><b>Auto Power Off</b></p> <p>To conserve battery life, the earphones will auto power off if disconnected from the device's Bluetooth® signal for 3 to 5 minutes.</p> <p><b>Note: The functional operation may vary depending on the connected device. In some cases, the touch functions may operate differently from how they are described above.</b></p> <p><b>USEFUL TIPS</b></p> <ul style="list-style-type: none"> <li>Performance can be affected by the environment or when the earphones become discharged</li> <li>Interruption can be caused by obstacles between the earphones and the Bluetooth device, by wi-fi or other high frequency signals, or if the earphones are brought out of range of the Bluetooth device (approx. 33 ft)</li> <li>To maintain healthy battery performance, charge the charging case (and earphones) periodically, if not in use</li> </ul>	<p><b>SAFETY AND CARE INSTRUCTIONS</b></p> <ul style="list-style-type: none"> <li>This product contains a non-replaceable rechargeable lithium-ion battery. When discarding, follow your local/state guidelines.</li> <li>Do not use abrasive cleaning solvents to clean the unit.</li> <li>Disconnect the USB cable once the product is fully charged.</li> <li>Do not expose to heat sources or leave in a location that is likely to get excessively hot.</li> <li>Do not let the product get wet.</li> <li>Do not disassemble.</li> <li>Performance can be affected by the environment or when the product becomes discharged.</li> <li>Interruption can be caused by obstacles between the product and the Bluetooth device, by Wi-Fi or other high frequency signals, or if the product is brought out of range of the Bluetooth device.</li> <li>Charge fully before storing for a long period.</li> </ul> <p><b>Note: Lithium-ion batteries will self-discharge over time. To ensure battery life, do not store the product in an uncharged state for a length of time. If left in a discharged state for too long a lithium-ion battery will no longer have the ability to be recharged.</b></p>
---	---	---	---