 


EXPLORE  
**ONE**

**8+**  
**INSTRUCTION MANUAL**

#88-83007

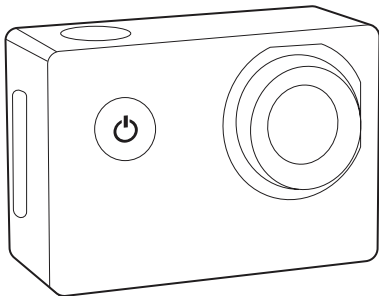

## **HD Action Camera with WiFi**

 
Record & Share The Action!



### **WARNING:**

**CHOKING HAZARD** – Small parts.  
Not for children under 3 years.

**WELCOME**

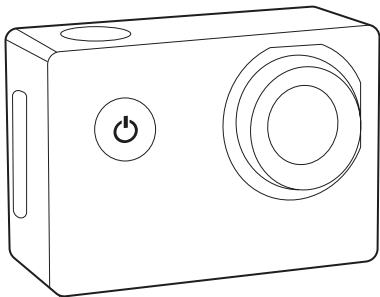

This product is a high-definition digital motion video recording device tailored to market demand. It has a variety of industry-leading features including video recording, photo shooting, audio recording, video display and detachable battery, which makes it perfect for vehicle data recording, photo-shooting, outdoor sports, deep-water probing.

## About this Instruction Manual



Please read the safety instructions and the operating instructions carefully before use. Keep these instructions for renewed use at a later date. When the device is sold or given to someone else, the instruction manual must be provided to the new owner/user of the product.

Read these safety instructions before using your device and store them for possible future reference. This product is intended only for private use. It was developed as an electronic medium for the use of multimedia services.

## Important Safety Instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Store the device in cool, dry and dust-proof places.
- 6) Do not use this apparatus near water unless the unit is securely enclosed in the waterproof housing.
- 7) Clean only with dry cloth.
- 8) Never touch the lens surface with your fingers.
- 9) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 10) Never point the camera lens directly at the Sun. Doing so may damage the image sensor.
- 11) Do not place or store the device near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 12) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 13) The charging cord should always be readily accessible.
- 14) While it is charging, keep the product and the power cord out of the reach of children to prevent accidental suffocation or electric shock.
- 15) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

- 16) In case of overheating, smoke, or unpleasant smell in the process of charging, unplug your device immediately to prevent a fire.
- 17) If the charging cord is damaged, have it repaired by the manufacturer, its service or a similarly qualified person in order to avoid any hazard.
- 18) Replacing the battery incorrectly or with a battery that is not the same type or its equivalent could result in an explosion.
- 19) The battery should not be exposed to excessive heat such as sunlight, fire or any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 20) The battery must be installed according to the polarity.
- 21) The battery must be disposed of safely. Always use the collection bins provided (check with your dealer) to protect the environment.
- 22) Non-rechargeable batteries are not to be recharged.
- 23) Rechargeable batteries must be removed from the unit before being charged, and should only be charged under adult supervision.
- 24) Do not short-circuit the supply terminals.
- 25) Only use attachments/accessories specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 26) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 27) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 28) Do not expose the unit to strong magnetic objects or strong radio waves. Strong magnetic fields may cause product malfunctions or damage to images and sounds.
- 29) If the unit has not been operated in a long time, check whether the camera operates normally or not before using the camera again.
- 30) Always backup or download any data from any memory card before reusing. It is recommended that you test any memory card to make sure it is properly storing the data before any imaging session.
- 31) Please choose branded Micro SD card. Neutral cards are not guaranteed to work normally.
- 32) Do not place Micro SD card near strong magnetic objects to avoid data loss.

## General Warnings

- **Risk of choking!** — Keep packaging material, like plastic bags and rubber bands, out of the reach of children, as these materials pose a choking hazard. This product contains small parts that could be swallowed by children.
- **Leaking battery acid can lead to chemical burns!** Avoid contact of battery acid with skin, eyes and mucous membranes. In the event of contact, rinse the affected region immediately with a plenty of water and seek medical attention.
- **Risk of electric shock!** — Never bend, pinch or pull the power and connecting cables, extensions and adapters. Protect the cables from sharp edges and heat. Before operating, check the device, cables and connections for damage. Never use a damaged unit or a unit with damaged power cables. Damaged parts must be exchanged immediately by an authorized service centre.
- **Risk of property damage!** — Do not disassemble the device. In the event of a defect, please contact your dealer. The dealer will contact the Service Centre and can send the device in to be repaired, if necessary.
- **Do not expose the device to high temperatures!** Use only the supplied power adapter. Do not short-circuit the device or throw it into a fire. Excessive heat or improper handling could trigger a short-circuit, a fire or an explosion.
- **Do not interrupt an ongoing data connection to a computer before all data has been transferred!** This could lead to data loss for which the manufacturer is not liable.

### CAUTION

#### **RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.**

Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.

Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.

A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

## Notes on Cleaning

Turn off the camera. Clean the eyepieces and/or lenses only with a soft, lint-free cloth, (e.g. microfibre cloth). To avoid scratching the lenses, use only gentle pressure with the cleaning cloth. Only use a dry cloth to clean the exterior of the device. To avoid damaging the electronics, do not use any cleaning fluid. Clean the protective case after each use with clear, clean water and dry it thoroughly.

## Disposal



Dispose of the packaging materials properly, according to their type, such as paper or cardboard. Contact your local waste-disposal service or environmental authority for information on the proper disposal.



The integrated battery must only be removed for disposal. Opening the device housing can damage the unit. Drain the battery completely before disposal. Remove all the screws in the housing and open the device housing. Remove the connections to the battery and remove it. Cover the open contacts with tape and package the battery in such a way that it cannot shift in the packaging.



FCC ID: 2ASJU88-83007

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### **Supplier's Declaration of Conformity**

#### **47 CFR § 2.1077 Compliance Information**

#### **Unique Identifier**

Trade Name: Explore One

Model No.: 88-83007

#### **Responsible Party - U.S. Contact Information**

US Company Name: Explore Scientific, LLC.

Address: 1010 S. 48th Street, AR, 72762

Telephone number or internet contact information: 866.252.3811

#### **FCC Compliance Statement**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



**CAN ICES-3 (B)/NMB-3(B) IC: 26040-8883007**

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This device complies with RSS-247 of industry Canada, Operation is subject to the condition that this device does not cause harmful interference.

Le présent appareil est conforme aux CNR-247 d'Industrie Canada applicables aux appareils radio. L'appareil ne doit pas produire de brouillage.

 
 
 
 
 
 
 
This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. The device has been tested for uses against the head and body-worn operations, with 5mm separation in Specific Absorption Rate (SAR) testing.

User must follow specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. User shall avoid using other body-worn accessories containing metallic components, to ensure RF exposure compliance.

Cet équipement est conforme aux limites d'exposition au rayonnement ISED établies pour un environnement non contrôlé. L'appareil a été testé pour une utilisation contre la tête et opérations portées par le corps, avec une séparation 5mm lors du test de débit d'absorption spécifique (SAR). L'utilisateur doit suivre les instructions d'utilisation spécifiques pour satisfaire à la conformité en matière d'exposition aux RF.

Cet émetteur ne doit pas être co-localisé ou fonctionner en conjonction avec une autre antenne ou un autre émetteur. L'utilisateur doit éviter d'utiliser d'autres accessoires portés sur le corps contenant des composants métalliques, afin de garantir la conformité avec l'exposition aux radiofréquences.


# CONTENTS

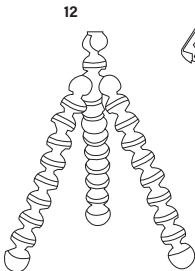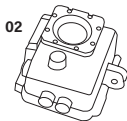

08

09

 06

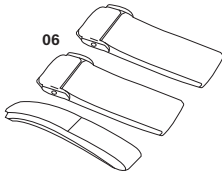


- 01** HD Camera
- 02** Waterproof Case
- 03** Flat Adhesive Mounts
- 04** Handle Bar/Pole Mount
- 05** Frame Housing Mount
- 06** Straps
- 07** Long Thumb Screw
- 08** Quick Release Buckle
- 09** Pivot Mounts
- 10** Short Thumb Screw
- 11** USB Cable
- 12** Tripod
- 13** Selfie Stick
- 14** MicroFlash Card and Adapter

# INSTRUCTIONS

 
## Product Features

1. A waterproof casing that allows you to film fascinating water sports; waterproof up to 30 metres under water
2. 2 in (50.8mm) screen that displays and replays fascinating videos recorded.
3. Support storage cards up to 32GB maximum.
4. WiFi latest remote control technology, smart device application can control camera and download videos and photos.
5. Multiple video recording formats: 1080P/720P/480P.
6. 12 M(HD) 120° wide-angle lens.


### Shutter/Select Button

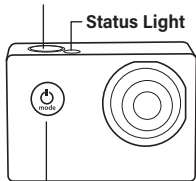

### Power/Mode Button

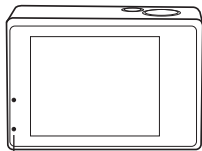 

### Charging Status Light

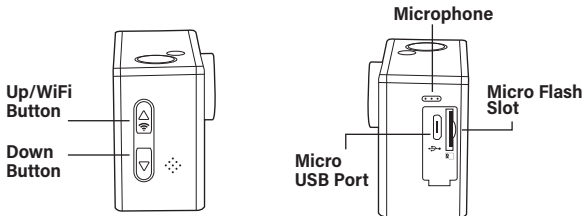 

## Operating

 
### 1. Inserting MicroFlash card

Note: For best performance, please choose a branded MicroFlash card and format it on your computer before use. No-name cards are not guaranteed to work flawlessly.

Insert a MicroFlash card with the label facing the screen.

Use brand name memory cards that meet these requirements:

- a) microSD, microSDHC
- b) Class 10 speed rating
- c) capacity up to 32GB

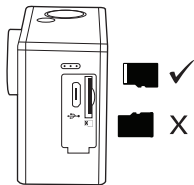

# INSTRUCTIONS

## 2. Charging





- A. Connected computer or power adapter via USB cable for charging.
- B. Charging of the action camera can be done even when it's powered off.
- C. When charging, the red indicator light long bright, fully charged, the red light goes out.

## 3. Turning camera on and off

Press and hold the power switch for three to five seconds to turn the camera on or off.


## 4. Mode Switching

- A. Press the [**Power On-Off / mode**] button  repeatedly to cycle through the camera modes.

Camera mode		Description
	Video recording mode	Video recording/Motion detection
	Photo shooting mode	Time setting/Photo taken
	Play back mode	Cyclic Record/Fast view
	Settings	Adjust all camera settings

## 5. How to record videos and configure recording setting



### 5.1. Video Recording

Turn the camera on. You will start with the video recording mode. There will be an yellow circle  icon in the upper left corner. Insert a SD card and start recording by pressing "OK." Press "OK" again if you want to stop the recording.

### 5.2. Photo shooting

Switch to photo shooting mode by pressing [  ]. There will be an  icon in the upper left corner. Press "OK" to take photos.

### 5.3. Setting

Switch to setting mode by pressing [  ]. There will be an  icon in the upper left corner. Press "OK," "UP," or "DOWN" button to set.

### 5.4. File Storage and Play back

The USB cable is for charging camera only.

Take the MicroFlash card out of the camera and access the images on a computer with a card reader for play back and storage.

# INSTRUCTIONS

## 7. Connecting to WiFi

To connect the camera to an Android or Apple iOS smart device follow these steps:

1. Download the **GoPlus Cam** app from the application store on your smart device and install it.
2. Turn on the camera and press the WiFi button on the side of the device. The WiFi logo will appear on the screen.
3. Using your smart device's WiFi settings, locate the camera's WiFi connection. It will appear as **EXPLOREONE** followed by the camera's serial number. The default password is **12345678**.

When you have successfully connected the devices, a message will prompt to "**Press Up to Return**".

4. Once connected, the **GoPlus Cam** app can be used to view images in real time. It can also be used to control the camera's video functions, take photos and download content directly to your device.

### **Please Note: Instructions for viewing and saving videos on mobile phones.**

For iPhone users: Video from the GoPlus Cam app cannot be saved directly to your iPhone. You must first save the video to the MircoFlash card, transfer it to your computer using the MicroFlash adapter, change the format from AVI to MP4 and then transfer the video to your iPhone.

For Android phone users: Video on the GoPlus Cam app can be saved directly to your Android phone.





### **WiFi signal not stable?**

WiFi signal susceptible to interference, make sure the phone is not held too far away from the camera to prevent loss of signal.

### **Unable to connect to WiFi?**

 
First, make sure your smart device's WiFi is turned on. Press the power button on the camera and press the WiFi button on the side of the device. The WiFi logo will appear on the screen. If no connection, it is recommended to power off and power on both the camera and your smart device and repeat the steps. Also check for any app updates.

# INSTRUCTIONS

## How to Open and Close the Waterproof Case

### How to Open:


Press and hold down the ▼ switch (1) and then use the ◀ arrow (2) to open the clamp (3).

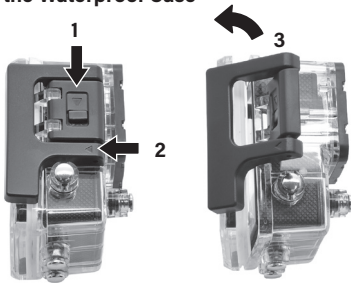

**How to Close:**

Press the case door all the way down (1) and then snap the clamp to the hinge (2).

 Now, simply press the clamp down (3) to close.

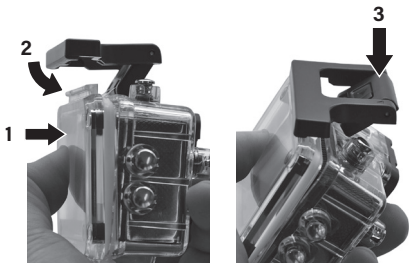

# INSTRUCTIONS

## Base Mount Example



HD Camera



Waterproof Case



Quick Release Buckle



Flat Adhesive Mount



HD Camera



Frame Housing Mount



Pivot Mount



Quick Release Buckle

 


Flat Adhesive Mount

## Helmet Mount Example



HD Camera




Waterproof  
Case



Quick  
Release  
Buckle



 Flat  
Adhesive  
Mount



Straps



HD Camera



 
Frame  
Housing  
Mount



Quick  
Release  
Buckle



Flat  
Adhesive  
Mount



Straps

# INSTRUCTIONS

## Pole/Bicycle Mount Example



HD Camera



Waterproof  
Case



Pivot  
Mount



Handle Bar/  
Pole Mount



HD Camera



Frame  
Housing  
Mount



Pivot  
Mounts



Handle Bar/  
Pole Mount

## Tripod Example



HD Camera



 
Waterproof Case



Quick Release Buckle



Flat Adhesive Mount

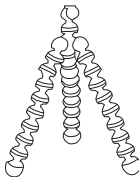

Tripod

## Selfie Stick Example



HD Camera



 
Waterproof Case



Quick Release Buckle



Flat Adhesive Mount





Selfie Stick

# INSTRUCTIONS

## Technical Data

<b>Display</b>	2.0 (50.8 mm) inch display
<b>Lens</b>	120° wide angle
<b>Waterproof case</b>	Up to 30 m (100 ft)
<b>Language options</b>	English/Traditional Chinese/Simplified Chinese/Russian/Portuguese/Spanish/Japanese/Thai/German/French/Dutch/Italian
<b>Resolution of photos</b>	12 M(4032 x 3024) 10 M(3648 x 2736) 8 M(3264 x 2448) 5 M(2592 x 1944) 3 M(2048 x 1536) 2 M(1920 x 1080) 1.3 M(1280 x 960) VGA (640 x 480)
<b>Resolution of videos</b>	1080 P (1920 x 1080) @ 30FPS 1080 P (1440 x 1080) @ 30FPS 720 P (1280 x 720) @ 30FPS WVGA (848 x 480) @ 30FPS VGA (640 x 480) @ 30FPS



<b>Video format</b>	AVI
<b>Video compression format</b>	MJPEG
<b>Storage</b>	Micro Flash card up to 32 GB
<b>Shooting mode</b>	Single shot/Self-timer (3 seconds/5 seconds/10 seconds/20 seconds)
<b>Frequency of optical source</b>	50Hz/60Hz
<b>USB interface</b>	USB 2.0
<b>Rated voltage</b>	DC 5 V  1 A
<b>Battery capacity</b>	Li-ion 3.7V  750 mAh
<b>Recording time</b>	About 45 minutes (at 1080p & WiFi)
<b>Charging time</b>	About 3-4 hours
<b>Dimensions</b>	2.33 x 1.62 x 1.15 in. (59.3 x 41.1 x 29.3 mm)
<b>Operating system</b>	Windows/Linux/Unix/Win7/Mac OS
<b>WiFi Function</b>	Yes

Note: Specifications could be subject to change due to upgrading or updating.  
Please regard the actual product as the standard.





ITM./ART. 2450002  
US/AUS

EXPLORE  
ONE

#88-83007

©2020 Explore Scientific, LLC.  
1010 S 48th Street, Springdale, AR 72762  
explorescientificusa.com | 866.252.3811  
All rights reserved. Made in China.