



Warning

- 1 It is a high-precision product, do not fall or crash.
2. Do not expose the unit to strong magnetic objects, such as magnet and electrical motor. Avoid strong radio waves. Strong magnetic fields may cause the products breakdown or images and sounds damage.
- 3 Never leave the products exposed to high temperatures and direct sunlight.
- 4 Please choose branded Micro SD card. Neutral cards are not guaranteed to work normally.
- 5 Do not place Micro SD card near strong magnetic objects to avoid data loss.
- 6 In case of overheating, smoke, or unpleasant smell in the process of charging, unplug your device immediately to prevent fire hazard.
- 7 While it is charging, keep the product out of children's reach. Power line may cause children accidental suffocation or electric shock.
- 8 Keep the device in cool, dry and dust-proof places.

Preface

This product is a high-definition digital motion video recording device tailored to market demand. It has a variety of industry-leading features including digital video recording, photo shooting, audio recording, video display and detachable battery, which makes it perfect for vehicle data recording, photo-shooting, outdoor sports, home security, deep-water probing, etc., allowing you to film at anytime, anywhere. And it has a variety of patents.



Product Features

- >A water-resistant casing that allows you to film fascinating water sports; water-resistant up to 30 meters under water
- >High definition screen that displays and replays fascinating videos recorded


- > Detachable battery that is easy to replace and prolongs your camera's service life
- > Video recording while charging
- > Video recording with battery
- > 5-megapixel
- > Support storage cards up to 32GB maximum
- > Support wifi function
- > Multiple video recording formats: 1080P / 720P / VGA
- > Video encryption enabled
- > Mini appearance, diversified colors available

Picture of product





Picture of waterproof case

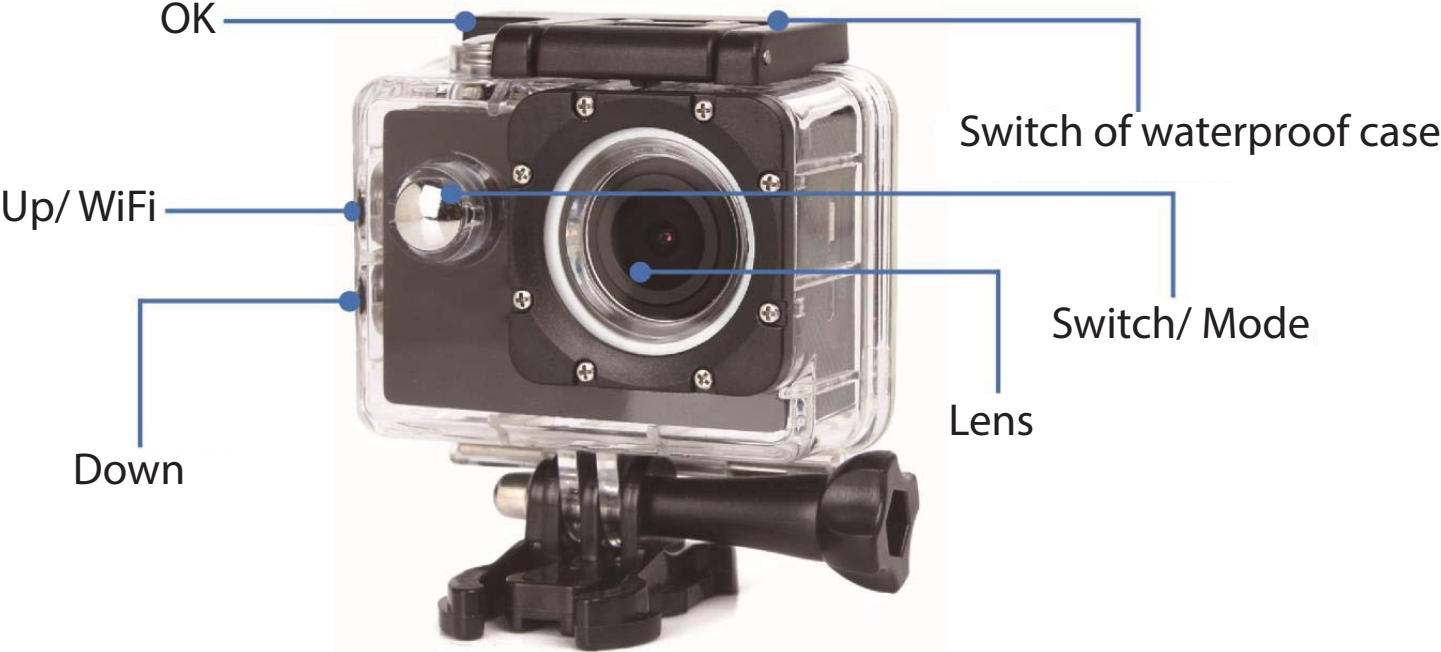

1. Inserting Micro SD Card

Note: Please choose branded Micro SD card and format it on computer before use. Neutral cards are not guaranteed to work normally.

2. Installing and removing batteries

- A Press on battery cap to open it.
- B Correctly install battery into camera as indicated by +/- symbols and direction of arrows marked on battery until it's in place.
- C Battery Gauge: Please refer to diagram.
- D Remove Battery: Open cap to take battery out.

3. Charging

- A Charging can be done by either connecting G2S to computer or power adaptor.
- B Charge G2S on vehicle by connecting it to car charger.
- C G2S can record video while charging
- D Charging of G2S can be done even when it's powered off.

4. Switching camera on and off

- A Press and hold power switch for 3 to 5 seconds to turn it on / off.
- B Switch it on and off by turning display screen on and off.

5. Mode Switching


Switch between video recording / photo shooting / playback / menu by pressing "Power On-Off" button.



recording mode, while






photo shooting mode. Symbols are displayed

on top of screen.  Refers to the function of video playback, and the last one is system settings.


6. How to record videos and configure recording setting

A. Video Recording

Switch to recording mode and there'll be an  icon in the upper left corner of the screen. Press OK to start recording and the  icon in the upper left corner will start to flash. Press "OK" again if you want to stop and the  icon will disappear.

B Photo shooting & Settings

Switch the camera on and press “Mode” to select “Photo shooting Mode”, there’ll

be an  icon in the upper left corner of display screen and the camera is in photo shooting mode. Press “OK” to take photos.

C. File Storage & Playing

After you are done recording, use a USB cable to export the videos onto a computer to play. Or you can take the Micro SD card out and access the image data with a card reader.

7. Wifi connection

The **App-GoPlus cam** lets you control your camera remotely using a smartphone or tablet. Features include full camera control, live preview, photo playback and sharing of select content and more.

1: Download the **App-GoPlus cam** to your smartphone or tablet at the Apple App Store or Google Play.

2: In your smartphone or tablet’s Wi-Fi settings, connect to the network called “**SportsDV_**” followed by a series of numbers.

3: Enter the **password** “ 12345” , which shows on your camera’s LCD screen.

4: Open the **App** on your smartphone or tablet.

Liquid Crystal Display (LCD)	2" TFT
Lens	120° + HD wide -angle lens
Language Options	English/Chinese Traditional /Chinese Simplified/Polish/ French/German/Itaia/ Portuguse/Russian/ Spanish/ Thai
Resolution of Videos Recorded	1920X1080 30FTPS 1440X1080 30FTPS 1280X720 848X480 640X480
Video Format	AVI
Compressed Format of Videos	M-JPG
Storage	Micro SD
Frequency of Optical Source	50Hz / 60Hz
USB Interface	USB2.0
Power Source Interface	5V1A
Battery Capacity	900MAH
Power Dissipation	300mA@4.2V
Recording Time	About 90 minutes
Charging Time	About 3hours
Operating System (OS)	Windows XP/VistaorAbove/Win7/Mac os
Dimension	59.27*41.13*29.28

FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.