 
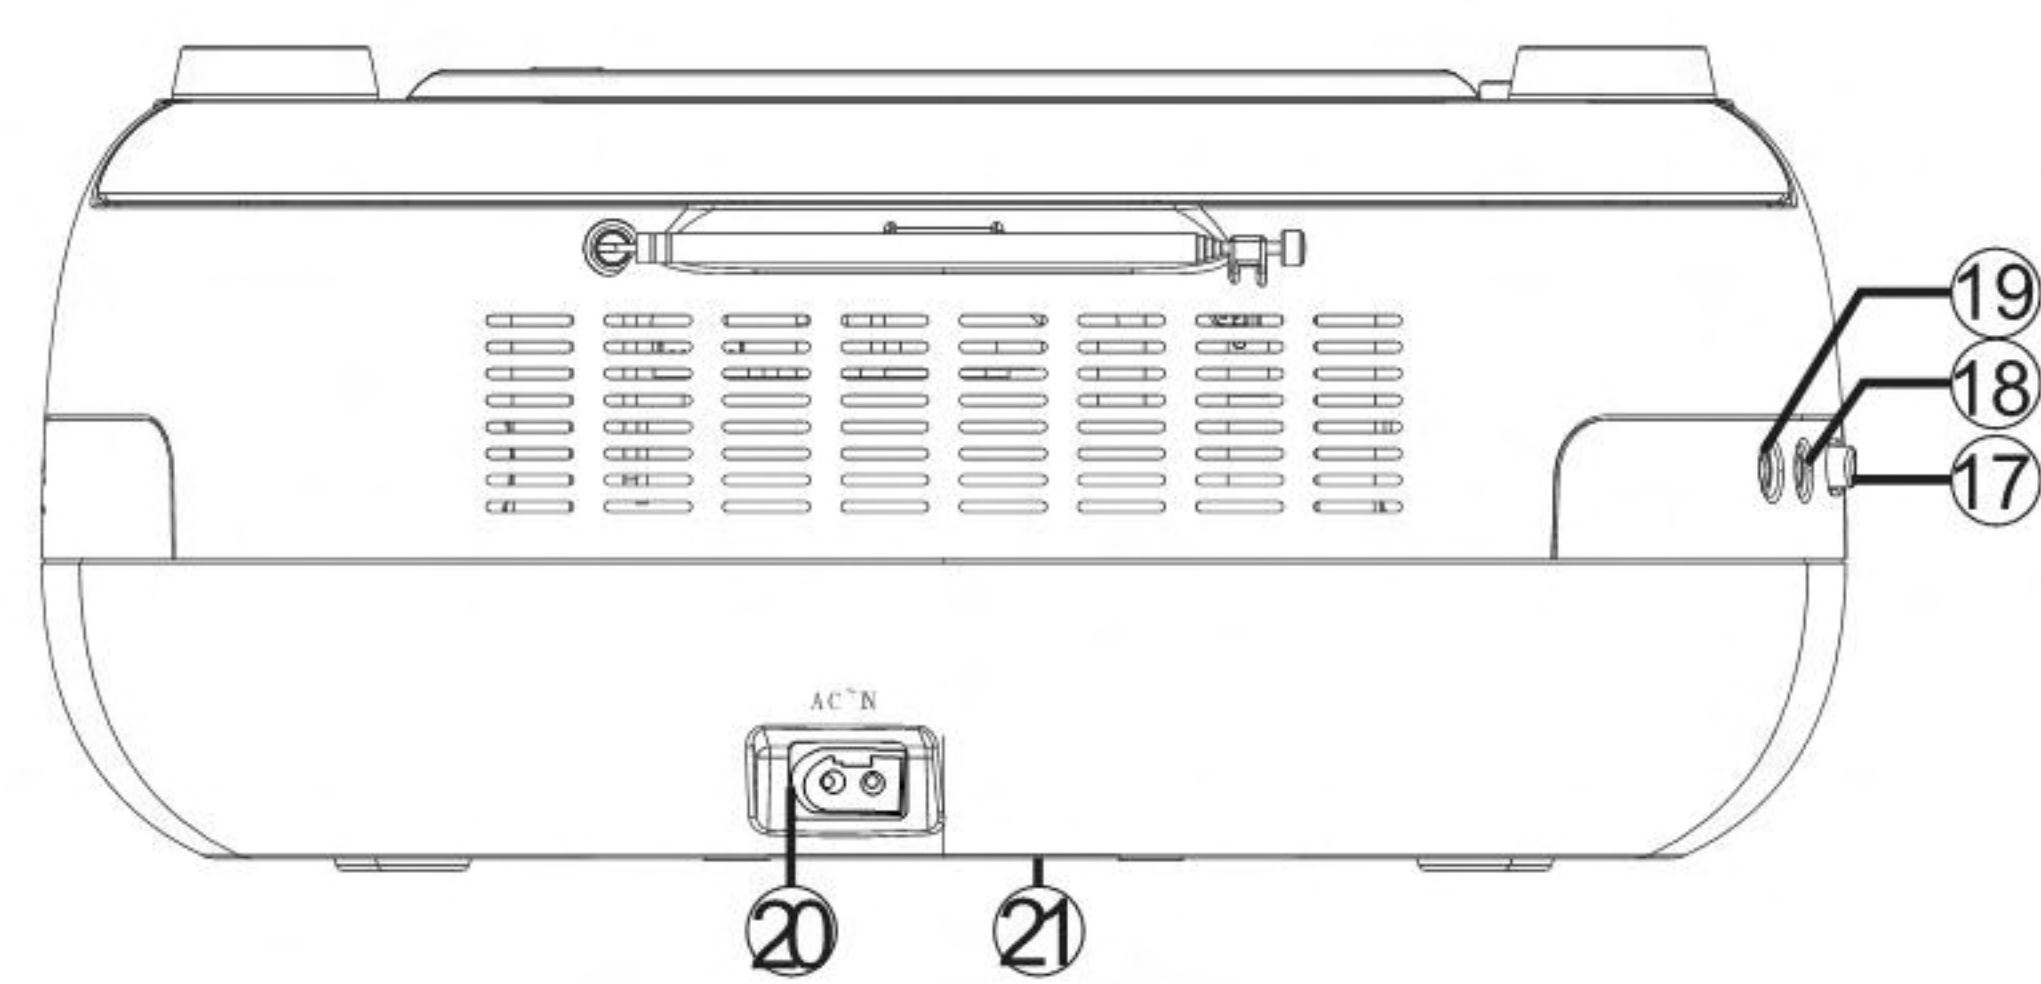 
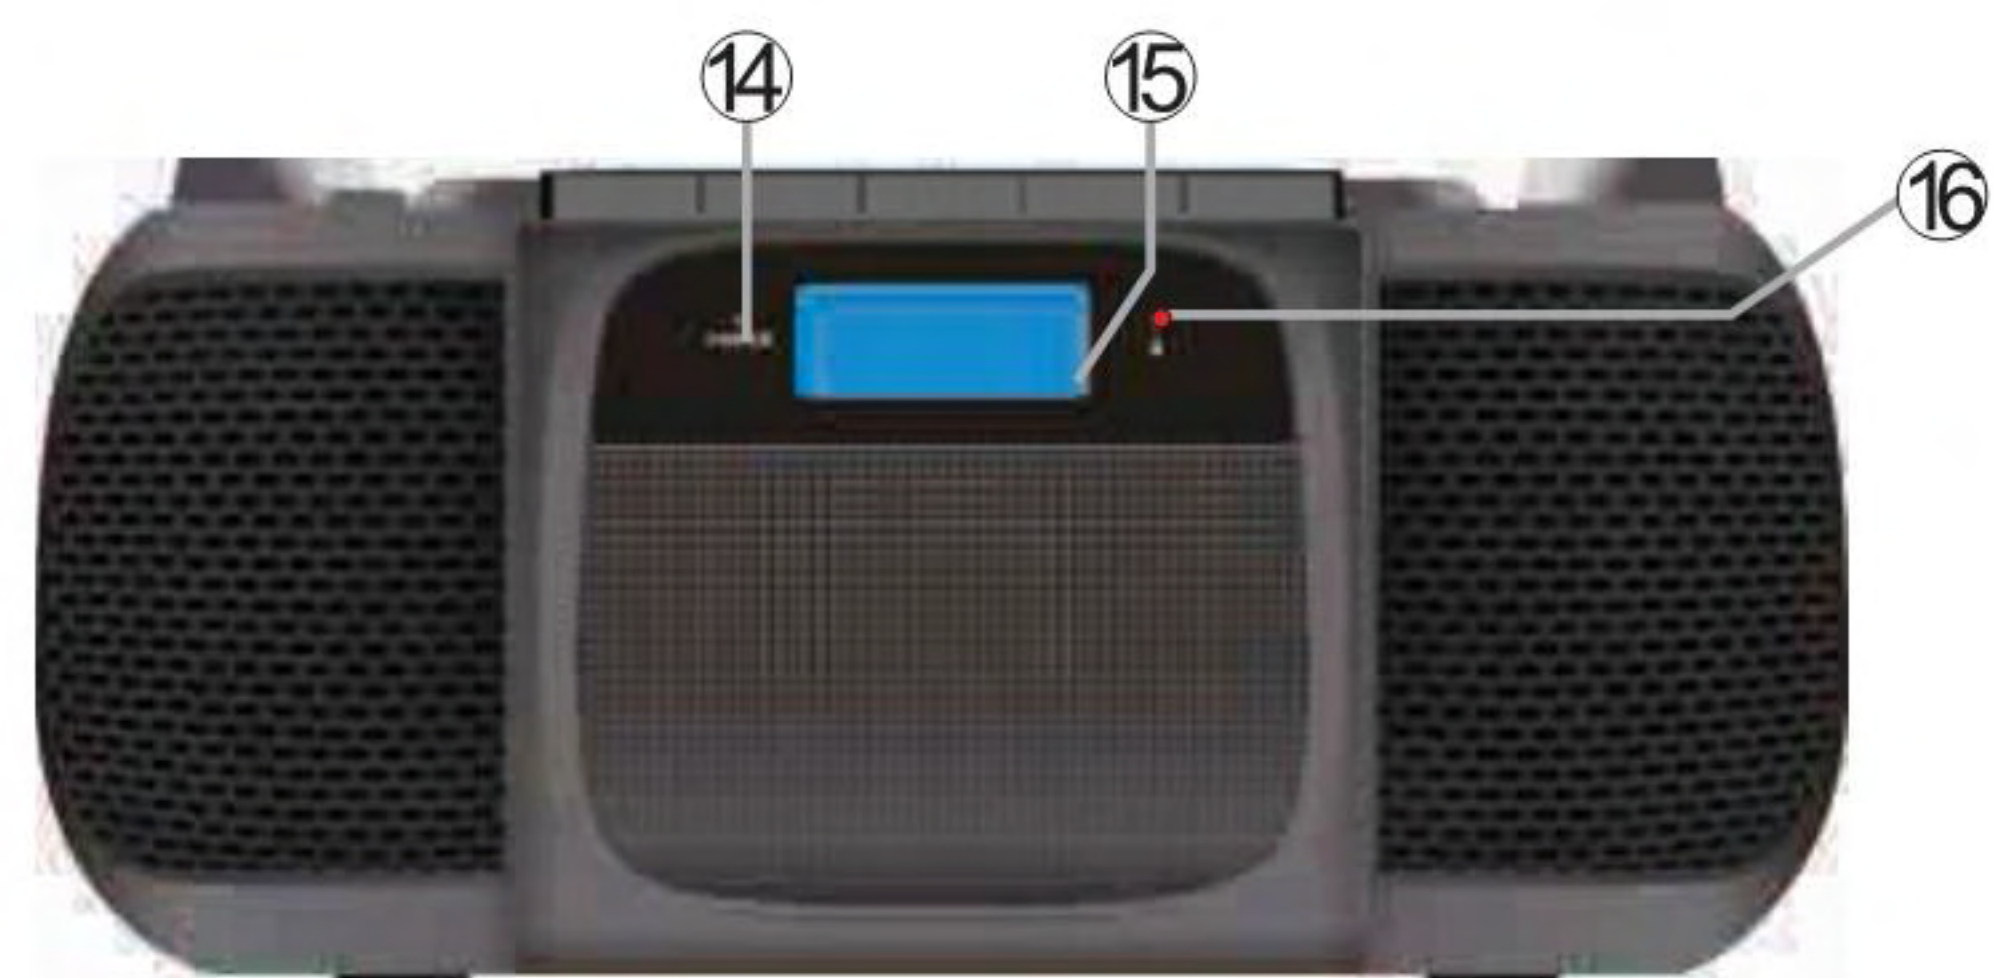 


LOCATION OF CONTROLS

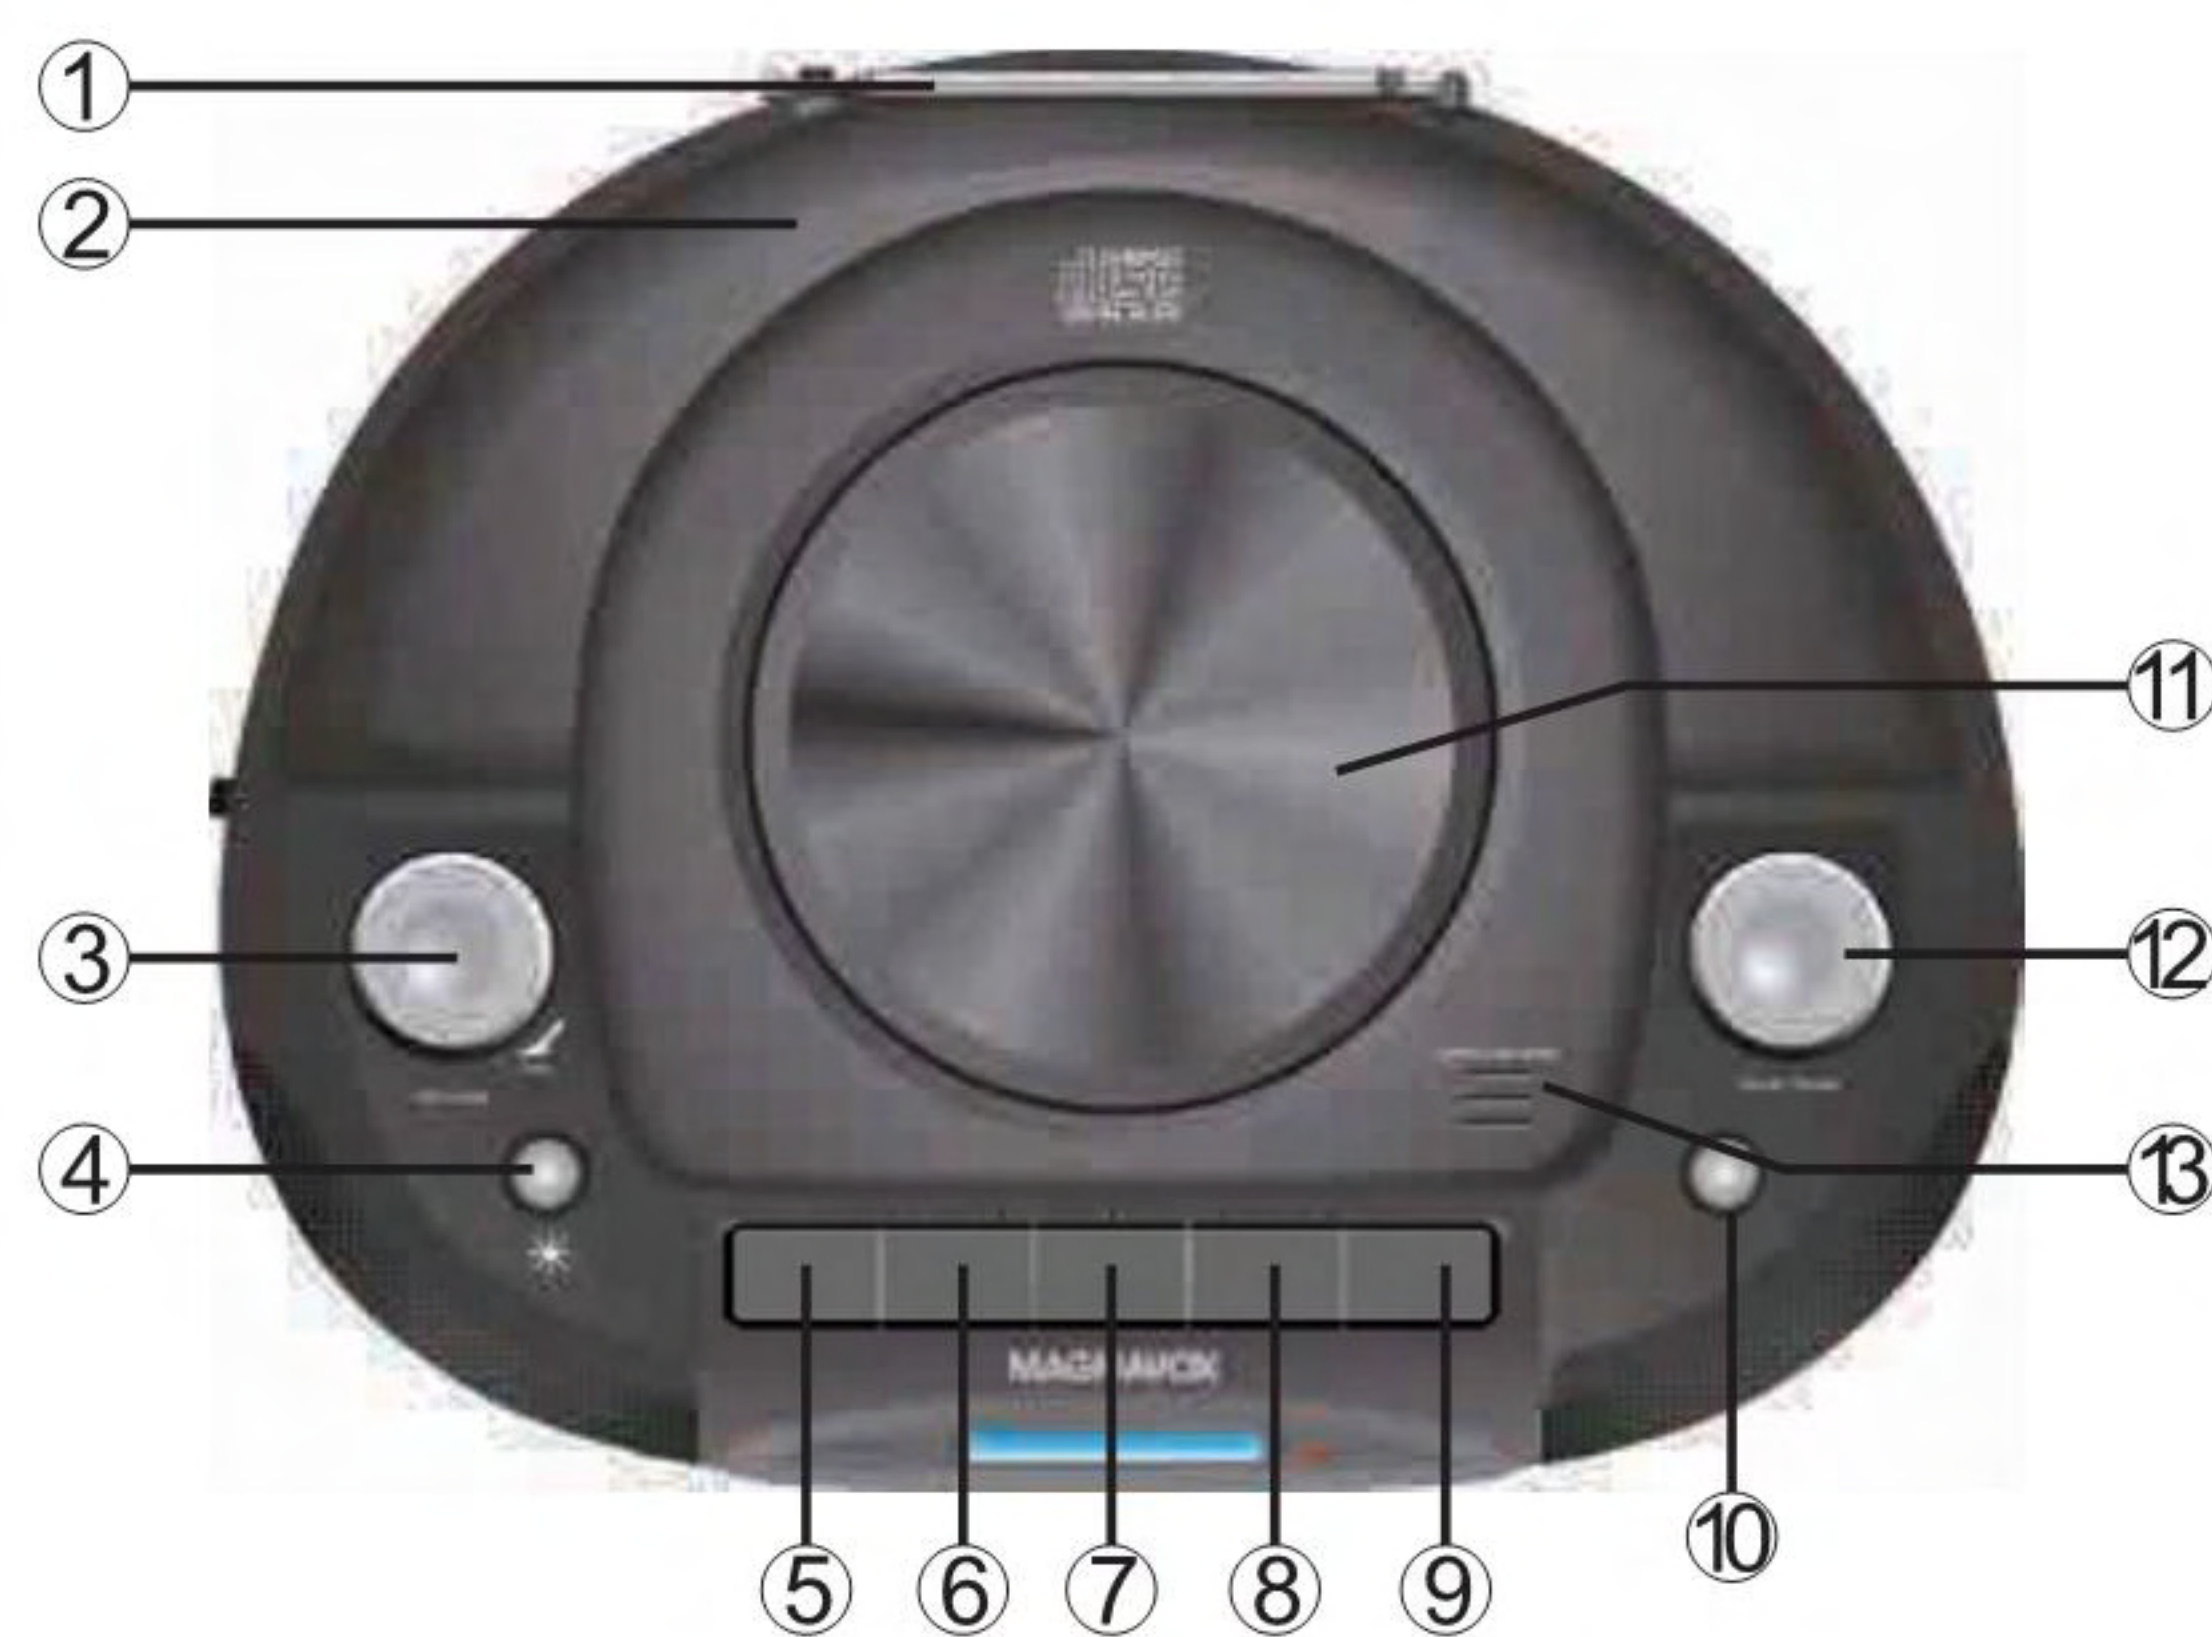

1. FM Telescope Antenna
2. Carry Handle
3. VOLUME Control Knob
4. * Decorative LED Blinking Mode Selection (Turn Off) Button
5. M (Memory) Button
6. ■/BAND (Stop/Radio Band Selection) Button
7. ◀◀ (Skip/Fast Search Backward) Button
8. ▶▶ (Skip/Fast Search Forward) Button
9. ▶|| /SCAN (Play - Pause/Radio Scan) Button
10. BT/CD (Bluetooth/CD Mode Selection) Button
11. CD Door
12. FINE TUNE (Radio Fine Tune) Knob
13. CD Door OPEN/CLOSE Area
14. POWER Indicator
15. LCD Display
16. ✎ (Bluetooth) Indicator
17. Function Selector (Radio – BT/CD/AUX – Power Off)
18. AUX (In) Jack
19. 🎧 (Headphone/Earphone) Jack
20. AC~ Socket
21. Battery Compartment

OPERATION

RADIO:

1. Slide the Function Selector to RADIO position to turn on the radio.
2. Press the ■/BAND Button repeatedly to select AM or FM band as desire. The correspondence indicator AM or FM and the radio frequency will appear on the LCD Display.
3. Press and holding the ◀◀ or ▶▶ Buttons until the radio frequency on the LCD Display start running to automatically search and play the previous/next available radio station. Repeated the same procedures until the desired radio station is searched and play.
4. If the reception is no good, turn the FINETUNE Knob to fine tune.
5. Turn the VOLUME Control Knob to adjust volume level as desire.
6. When finished listening, slide the Function Selector to OFF position to power of the unit.

Radio stations preset:

1. Power on the radio and receive the desired radio station as the previously procedure.
2. Press the M Button, "P XX" will appear on the LCD Display. Press the ◀◀ or ▶▶ Buttons repeatedly to select the program number you want stored to. Then press the M Button again to store it.
3. Repeat the same procedures until all the desired radio stations were stored into the program list. (Up to 20 AM stations and 30 FM stations can be stored.)
4. After programmed, press the ◀◀ or ▶▶ Buttons repeatedly in radio mode to select and play the desired stored radio station.

Antennas:

AM:

This unit has a built-in ferrite rod antenna, which provides adequate reception in most areas. If reception is weak, turn the unit to improve reception.

FM:

The FM Telescopic Antenna is for FM reception only. If reception is weak, adjust the length and the angle of the antenna.

CD:

1. Slide the Function Selector to BT/CD/AUX position to turn on the CD. The LCD Display will illuminate and indicator "CD" will appear.
2. Press the OPEN/CLOSE Area on the CD Door to open it then place a CD disc on the center spindle, with the printed side face up.

3. Close the CD door by press the OPEN/CLOSE Area. Wait a few seconds; the number of the total tracks will appear on the LCD Display.
4. Press the ►►/SCAN Button to start playback the first track on the disc.
5. During playback:
 - Turn the VOLUME Control Knob to adjust volume level as desire.
 - Press the ►||/SCAN Button to pause; press again to resume normal playback
 - Press the ◀◀ or ►► Buttons repeatedly to skip the tracks.
 - Press and holding the ◀◀ or ►► Buttons to fast searching the specific section.
5. To stop CD playback, press the ■/BAND Button. The total number of tracks will appear on the display.
6. When finished listening, slide the Function Selector to OFF position to power off the unit.

Programmed Playback:

Up to 20 tracks can be programmed playback as follows:

1. In CD STOP playback mode, press the M Button. "PROG 1 --" will appear on the display and blinking.
2. Select the first specific track to be programmed by pressing the ◀◀ or ►► buttons repeatedly.
3. Press the M Button to store the selected track into the memory.
4. Repeat steps 2 and 3 until all the specific tracks stored into the memory.
5. Press the ►►/SCAN Button to start program playback. The program indicator "PROG" will stop blinking.
6. To stop playback, press the ■/BAND Button.
7. To erase the program, press the ■/BAND Button again in stop mode. The program indicator will disappear on the display.

Repeat/Random Playback:






1. During playback (or program playback), press the M Button once. The repeat one indicator "REP" will appear on the LCD Display. The current track will playback repeatedly.
2. During playback, press the M Button twice. The repeat all indicator "REP ALL" will appear on the LCD Display. All the tracks on the current disc (or program) will be playback repeatedly.
3. During playback, press the M Button three times, the random indicator "RAND" will appear on the LCD Display. The unit will play the tracks randomly.
4. To cancel the repeat and random play functions, press the M Button repeatedly until all repeat/random playback indicators disappear on the LCD Display or press the ■/BAND Button to stop playback.

Note: Random playback is not available in program playback mode.

BT (BLUETOOTH):

BT pairing and play:


 
First time use or re-pairing the unit to a new BT Device, pair as follows:

1. Slide the Function Selector to BT/CD/AUX position to turn on the CD. The LCD Display will illuminate and indicator "CD" will appear.
2. Press the BT/CD Button on the top of the unit to switch the unit from CD mode to BT mode:
 - The  Indicator on the front of unit will illuminate and blink.
 - Indicate "bt" will appear on the LCD Display and blink.
3. Power on the external BT Device and enter to BT searching mode. Start pairing following the on screen instructions from the external BT Device. After paired, the indicate "bt" on the LCD Display and  Indicator on the front of unit will stop blinking.
4. If pairing is complete you may now play music with your external BT Device.
5. During playback:
 - Turn the VOLUME Control Knob to adjust volume level as desire.
 - Press the  /SCAN Button to pause; press again to resume normal playback.
 - Press the  or  Buttons repeatedly to skip the tracks.
6. When finished listening, slide the Function Selector to OFF position to power off the unit.

Notes:

1. When the external BT Device searched the unit, a r model number "MD6972" will appear on the display of external BT Device.
2. If while pairing you are asked for a code please try "0000" or "1234".

Normal operation after pairing:

1. Slide the Function Selector to BT/CD/AUX position to turn on the CD. The LCD Display will illuminate and indicator "CD" will appear.
2. Press the BT/CD Button on the top of the unit to switch the unit from CD mode to BT mode:
 - The  Indicator on the front of unit will illuminate and blink.
 - Indicate "bt" will appear on the LCD Display and blink.
3. Wait a few seconds until the unit is automatically paired to the external BT Device. The indicate "bt" on the LCD Display and  Indicator on the front of unit will stop blinking.
4. After pairing is complete you may now play music with your external BT Device.

AUX (in):

1. Insert one end of the Audio Connect Cable (not included) to the AUX Out; Line Out or Phones Jack on the external Audio Player.
2. Insert the other end to the AUX (in) Jack on the left of unit.
3. Slide the Function Selector to BT/CD/AUX position to turn on the unit. The unit will automatically switch to AUX (In) mode. The LCD Display will illuminate and indicator "AUX" will appear.
4. Play the music on the connected external Audio Player as usual.
5. Turn the VOLUME Knob to adjust volume level as desired.
6. When finished listening, slide the Function Selector to OFF position to power off the unit.

NOTES:

- Make sure the sound output level of the connected external Audio Device in high level. Otherwise, sound will weak.
- If sound is distorting, reduce the volume of the connected external Audio Player or set the EQ mode of it to normal.

DECPRATIVE LED LIGHTS:

 
Press the * Button on the top of unit repeatedly to set the blinking modes or turn it off as desired.

HEADPHONE JACK:

For private listening, connect the 3.5mm plug from the Earphone/Headphone (not included) into the HEADPHONE Jack on the left of unit. Sound from speakers will be auto cut.

LABEL LOCATION:

The marking label location on bottom.

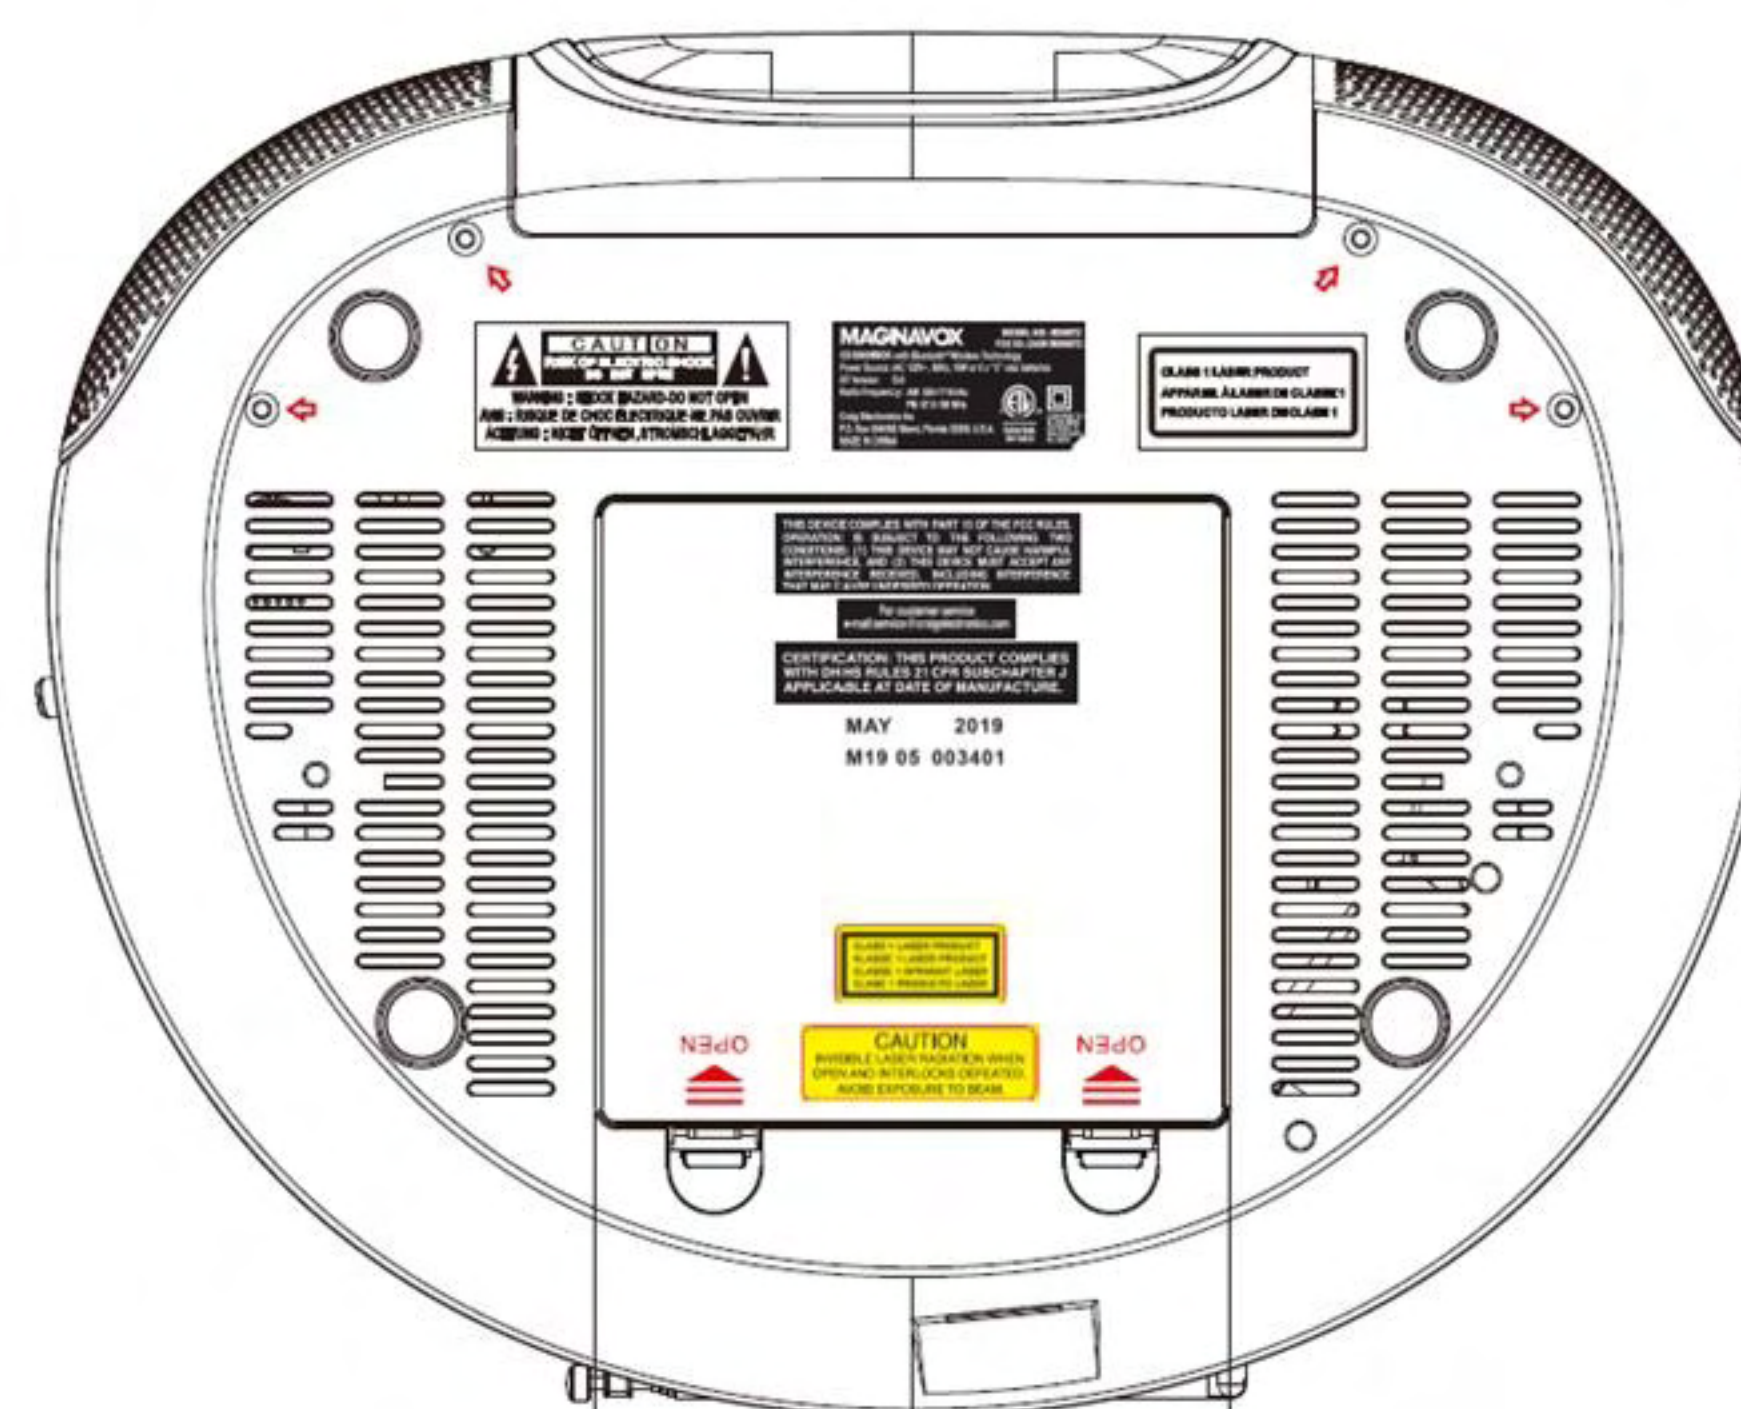

TROUBLESHOOTING

Check the following before requesting service:

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
No power	AC Power cord had not connected	Connect the AC Cord to the rear of unit and any wall outlet having AC 120V~, 60Hz
No sound or sound weak	Volume of the unit was set to minimum position	Increase the volume level by turning the VOLUME Control Knob clockwise
	Volume level of paired/connected device is in low level	Rise the volume level of the paired/connected device
Sound distortion	Volume level too high	Reduce the volume level by turning the VOLUME Control Knob counterclockwise
	Volume level of the connected/paired device too high	Reduce the volume level of the connected/paired device
CD or BT not functioning	Audio Connection Cable was inserted into the AUX (In) Jack	Unplug the cable from AUX (In) Jack
BT not functioning	The external BT Device had NOT paired to the unit	Pair the external BT Device to the unit as page 10
	The external BT Device too far from the unit	Place the external BT device close to the unit
CD not play	Disc is dirty or scratched	Try other discs
	CD disc incorrect install	Place the CD disc on the center spindle with label side face up
	CD compartment door is not closed.	Close CD door completely.



GENERAL SPECIFICATIONS

Power Source:	AC 120 V~, 60 Hz; 16 W, Or DC --- 12V; 8 x "C" size batteries (Not included)
BT Version:	5.0
BT Operation Distance:	≅ 32 Feet in opera area
Radio Frequency:	AM: 535-1710 kHz FM: 87.5-108 MHz
Disc Compatible:	CD; CD-R; CD-RW
Impedance of Speakers:	4ohm 3W
Audio power:	1.5 W per Channel (Total 3W, RMS)

ACCESSORIES

1 x Owner's Manual
1 x AC Power Cord

  SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE

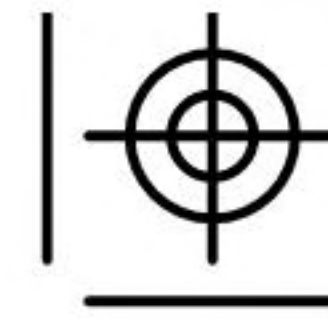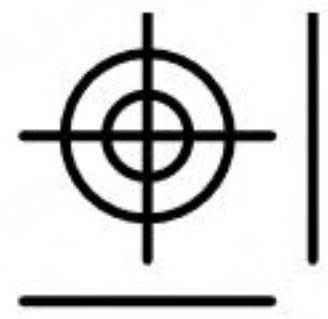

LIMITED WARRANTY

Craig Electronics Inc. warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 180 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange; or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$12 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit can not be repaired or replaced, a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Craig Electronics Inc.
1160 NW 163 Drive
Miami, FL 33169

This warranty is void if the product has been: a) Used in a commercial application or rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Craig Electronics Inc. service center. d) Damaged because it is improperly connected to any other equipment.

Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product. c) Any cost incurred in shipping the product for repair. d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Craig Electronics Inc. be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

This product has been manufactured by and is sold under the responsibility of Craig Electronics Inc., and Craig Electronics Inc. is the warrantor in relation to this product. MAGNAVOX and SMART. VERY SMART are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

To Obtain Service on your Product
email: service@craigelectronics.com

Printed in China

MD6972_WC_E0HQ1_B0US

