

Instructions

www.kulark.com

BL-MT1 Wireless Speaker

1 Appearance



2 Packing List



3 Button Description

39	FEMMES CO	Function Description
1	ம	Power on/Power off
2	+	Volume Up
3	-	Volume Down
4	Ō.	Microphone call
5	0	USB Type-CInterface
6	8	Microphone mute

4 Instructions

Power off

Bluetooth Pairing

Enable Bluetooth settings on phone, select "Kulark S1",pairing completed, blue light off

Clear pairing history

Press 🏰 for 6 seconds, the blue light flashes, 200ms on 200ms off.

Battery is low

Charge

USB Disk function

Power off the device, Connect to the PC via USB cable, device can be USB Disk

"Product warranty is implemented in accordance with the rules of the sales platform."

accept any herdenece received, housing interference that may cause unabsisted operation.

TWO of Fallability Deposes Telephones.

1. this is nonember fault not in an exiscated or operating in conjunction with any other

2. This incomment process, with MF radiation separate limits set forth for an unconstrained.

2. This supplement complement with MF radiation separate limits set forth for an unconstrained.

The device has been evaluated to meet general MF regionars registerment. The device can be used in particles regionary constitution without meetings.

Warranty Card

Username	
Address / Postcode	
Phone number	
Product model	
Product number	
Purchase date	
Invoice number	
Sales unit name	