

VMAI

2.0CH Soundbar

MODEL NO.: Mini 7



INSTRUCTION MANUAL

Help@vmaitech.com

Read this instruction manual carefully before use and
keep it for future reference.

Important!

For your best experience using Vmai soundbar, please read below information before use:

1. This package included:


- Optical cable
- AUX cable
- Mounting kit
- Remote control
- **Power Adapter (NOT in this bags, in a white box within the package)**

Since this item is Fulfilled by Amazon, if any accessory is missing, please email us immediately.

We will send it to you right away.

2. Please make sure you choose the same input mode on the sound bar:

TV connection	Sound bar mode
HDMI (ARC only)	ARC
DIGITAL AUDIO OUT(OPTICAL)	Opt
Headphone/ AUX	AUX
Bluetooth	Bt



TV / PC Sound Setting Instruction

3. **If there is no sound:** Please make sure to switch to PCM sound on your TV audio setting when you connected the optical cable or ARC.

If you are using Smart TV: Apps like Netflix's audio by default, are set to Dolby and DTS for audio in some brand TV, this sound bar does not support DTS

audio. So you must disable Dolby and DTS in Netflix, or set audio to "Stereo" mode.

Please visit "<https://bit.ly/vmaitech>" (CASE SENSITIVE) or view the user manual for more detail about above TV setting.

4. The maximum volume for the sound bar is 32.

If you need any assistance, please contact us and we will get back to you within 24 hours. Vmai is dedicated to providing our customers with good products and service, and we truly value customers satisfaction.

Contact:

✉ Email: Help@vmaitech.com

Website: www.vmaitech.com

 
Phone 📞 / SMS 📧 (Have your Amazon order # ready)

📞 1-334-422-9074 (Monday - Friday 8 AM – 4 PM ET)

Important Safety Instruction

Thank you for purchasing the VMAI Soundbar. Please read this user manual carefully and keep it for future reference. If you need any assistance, please contact our support team: Help@vmaitech.com with your product model number and Amazon order number.

Warning

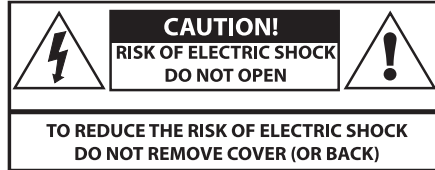

Caution:

To reduce the risk of electric shock, do not dismantle the product and do not expose the apparatus to rain or moisture. No user-serviceable parts inside. Refer servicing to qualified personnel only




The lightning flash within an equilateral triangle is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute an electric shock to a person or persons.



Important! This symbol alerts you to read and observe important warnings and instructions on the unit or in this manual.

Notice:

This appliance is not intended for use by person (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

1. To prevent possible hearing damage, do not listen at high volume levels for long time periods or a sudden high volume level. 
2. Never use the device unsupervised! Switch off the device whenever you are not using it, even if this only for a short while.
3. The appliance is not intended to be operated by means of an external timer or separate remote control system.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
5. Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.

6. The unit should not be impeded by covering the ventilation opening with items such as newspaper, table-cloths, curtains etc. Make sure that there are at least 20 cm of space above and at least 5 cm of space on each side of the unit.
7. The apparatus must not be exposed to dripping or splashing and that objects filled with liquids, such as vases, must not be placed on the apparatus.
8. To prevent fire or shock hazard, do not expose this equipment to direct heat, rain, moisture or dust.
9. Do not locate this unit near any water sources e.g. taps, bathtubs, washing machines or swimming pools. Ensure that you place the unit on a dry, stable surface.
10. Do not place this unit close to a strong magnetic field.
11. Do not place the unit on a amplifier or receiver.
12. Do not place this unit in a damp area as the moisture will affect the life of electric components.
13. Do not attempt to clean the unit with chemical solvents as this might damage the finish. Wipe with a clean, dry or slightly damp cloth.
14. When removing the power plug from the wall outlet, always pull directly on the plug, never pull on the cord.
15. Depending on the electromagnetic waves used by a television broadcast, if a TV is turned on near this unit while it is also on, lines might appear on the TV screen. Neither this unit nor the TV is malfunctioning. If you see such lines, keep this unit well away from the TV set.
16. The mains plug is used to disconnect the device, the disconnected device should remain readily operable.

Important Safety Instructions

1. Read these instructions. Keep these instructions. Follow all instructions. Heed all warnings.
2. Do not use this apparatus near water.
3. Clean only with dry cloth.
4. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
5. Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.
6. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other.
7. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles or at the point where they exit from the apparatus.
8. Only use attachments/accessories specified by the manufacturer.
9. Unplug this apparatus during lightning storms or when unused for long periods of time.

10. Refer all servicing to qualified service personal. Servicing is required when the apparatus has been damage in any way, for example, when the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

11. The AC plug is used to disconnect the device, the disconnected device should remain readily operable. In order to disconnect the apparatus from the AC power completely, the AC plug must be removed from the AC outlet completely.

Preparation for Use

Unpacking and Set Up

- Remove the Sound bar from the carton and remove all packing material from the Sound bar. Save the packing material, if possible, in case the Sound bar ever needs to be serviced or transported. The original carton and packing material is the only safe way to pack your Sound bar to protect it from damage in transit.
- Remove any descriptive labels or stickers on the front or top of the cabinet. Do not remove any labels or stickers from the back or bottom of the cabinet.
- Place your Sound bar on a level surface such as a table, desk or shelf, convenient to an AC outlet, out of direct sunlight, and away from sources of excess heat, dirt, dust, moisture, humidity, or vibration.
- Unwind the Line cord connecting the AC adapter and extend it to its full length.

Protect Your Furniture

This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement center everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the unit.

 
Power Source





This sound bar is designed to operate on normal AC power source. For North America, it works only under SMPS 110V-240V ~50hz/60Hz. Do not attempt to operate the Sound bar on any other power source. You could cause damage to the Sound bar that is not covered by your warranty.

Important Notes

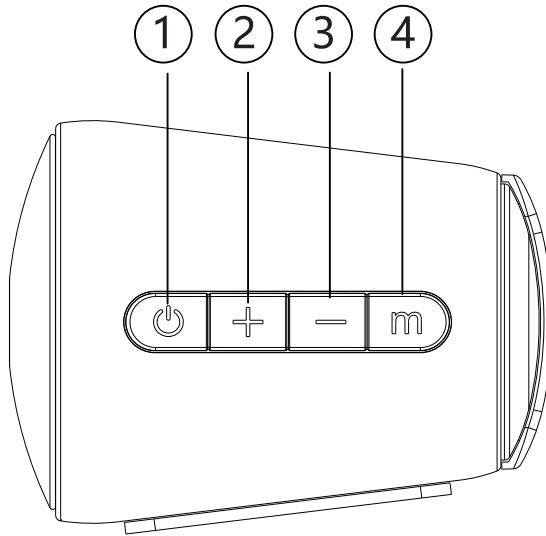
- This sound bar was especially developed for LED/LCD/Plasma TV's: It should not be used in combination with CRTTV's (Cathode Ray Tube TV's) in order to avoid image interference.
- Safety and operating instruction manual should be retained for future reference.
- The apparatus should not be exposed to dripping, splashing or placed in a humid atmosphere such as a bathroom.
- Do not install the product in the following areas:
 - Places exposed to direct sunlight or close to radiators.
 - On top of other stereo equipment that radiate too much heat -Blocking ventilation or in a dusty area.
 - Areas where there is constant vibration.
 - Humid or moist places.
 - Near candles or other flames.
- Operate the product only as instructed in this manual.
- Before turning on the power for the first time, make sure the sound bar is plugged to power outlet.
- For safety reasons, do not remove any covers or attempt to gain access to the inside of the product. Refer any servicing to qualified personnel.
- Do not attempt to remove any screws, or open the casing of the unit; there are no user serviceable parts inside. Refer all servicing to qualified service personnel.

Sound Bar Control Button



- ①  : Short press to turn on/long press to power off.
- ②  : Increase Volume button.
- ③  : Lower Volume button.
- ④  : Mode button-press this button to change mode from BT / HDMI(ARC) / OPT / AUX.

 Input Option

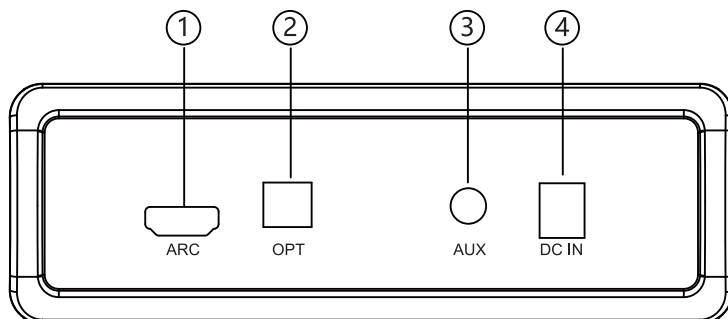

For Detail TV/PC Setting for Vmai Sound Bar Please Visit:

<https://bit.ly/vmaitech> (Case Sensitive)

Or Scan below barcode:



1. ARC Mode:

(1). Using the HDMI cable connect to the tv. (not included)

(2). Using a High-Speed HDMI (1.4 or 2.0) cable, connect the ARC connector on the sound bar to the ARC connector on the TV. (ARC port on TV may be labelled differently. For details, see the TV user manual.)

(3). On your TV, select source as ARC mode. For details, see the TV user manual.

(4). Go to Setting in your TV menu (may vary due to different brand):

I) Setting > Sound > Select Speaker to: external speaker (ARC Mode)/ turn off TV Speaker

II) Setting > Sound(audio) > advanced Audio > digital audio output > PCM Setting > Sound(audio) > audio output format > PCM/ Dolby off

2. Optical Mode:

(1). Using the provided optical cable connect to the tv.

(2). Select optical mode using the remote by pressing the INPUT button, and the sound bar indicator will show OPT.

(3). Go to Setting in your TV menu (may vary due to different brand):

I) Setting > Sound > Select Speaker to: external speaker (optical mode)/ turn off TV Speaker

II) Setting > Sound(audio) > advanced Audio > digital audio output > PCM Setting > Sound(audio) > audio output format > PCM/ Dolby off

If you are using Smart TV apps:

Apps like Netflix was set default audio output is Dolby and DTS for the movie, but this sound bar did no support Dolby and DTS, so you will hear crack sound or no sound, please kindly disable the Dolby and DTS on Netflix. here is the method in below:

Step 1, Launch the Netflix app.

Step 2, Select a TV show or movie.

Step 3, While your TV show or movie is playing, press the Down arrow on your remote.

Step 4, Select Audio & Subtitles.

Step 5, Select your preferred audio or subtitle options. (disable the Dolby and DTS)

Step 6, save the settings

Step 7, play the video test the sound

And more detail about the setting, here is a link from Netflix, please kindly check!

<https://help.netflix.com/en/node/372>

Also, for the Amazon prime video app and Hulu, also please kindly disable the Dolby and DTS, the method is similar to the Netflix, please kindly try.

3. Bluetooth Connect:

1. Plug in the power cord and the display will light up (stand by mode).
2. Press the BT button on the remote control or repeatedly pressing the MODE button on the soundbar control panel until bt is shown on the LED display.
3. Search for new device on your Bluetooth player. (smartphone, tablet, computer).

Choose the device named Vmai M7 in the list of new devices detected and select it.

If a password is asked, just type 0000. The "BT" display will stop flashing when the sound bar is paired successfully. You don't need to make this pairing procedure again the next time you connect the same device to the sound bar, it will be re-connected automatically when it is close to the sound bar with BT input mode activated.

 
In other input mode, short press the BT button. The sound bar will enter Bluetooth mode, and pair to the previous device automatically.

4. AUX Mode:

- (1). After Turn on the soundbar, change to AUX input mode.
- (2). plug in the 3.5mm AUX cable to the AUX IN connector on the soundbar and start playing from the music device

5. DC power input port: Use power adaptor to connect DC 19V 1.5A input port.


Using The Remote Control

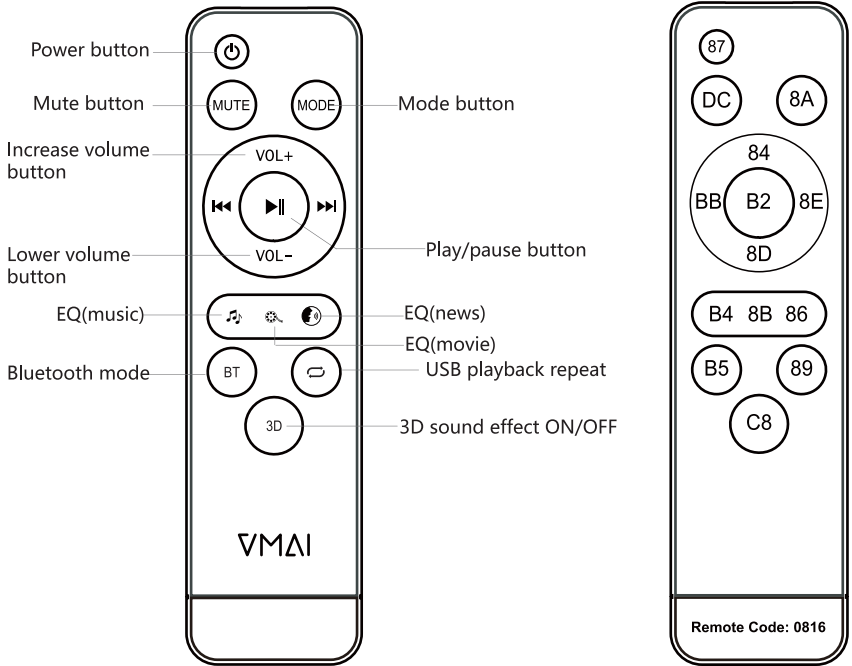


Equalizer modes: The soundbar has 3 equalizer presets, tailored to complement various styles of music. Press the EQ button on the remote to choose between Music (EQ1), Movie (EQ2), News (EQ3). Only support universal remote with learning function with 4-digit coding.

*For the best controlling experience, we still highly recommend you stay with our included remote.

 
Remote Control Battery Replacement

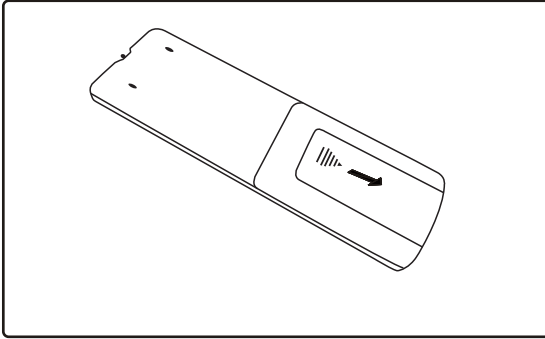

 A. Remove the battery compartment cover.

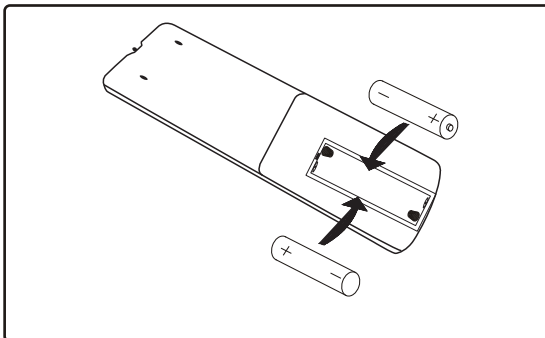

 
B. Insert 2 AAA batteries according to the marking inside compartment.

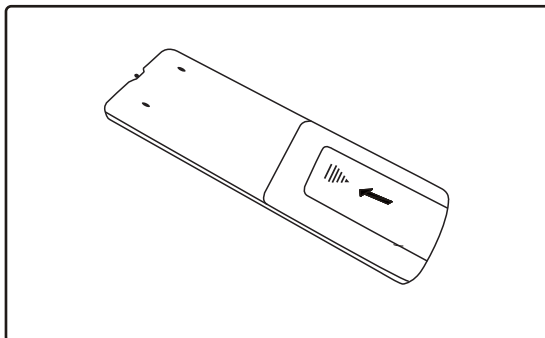

C. Close the compartment.

Wall Mounting

 - 1 Measure 348mm and drill 2 parallel hole (1/4 in each) in the wall.

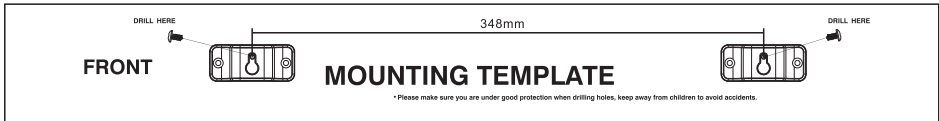

- 2 Firmly apply a dowel into each hole in the wall. (dowel only required for solid wall)

Dowel

 


Solid wall (i.e., Solid brick, Solid concrete, solid wood)



Drywall, Plaster wall, Lath wall, etc.

- 3 Attach the sound bar to the screws on the wall, and press and push the sound bar to the right half an inch to lock.

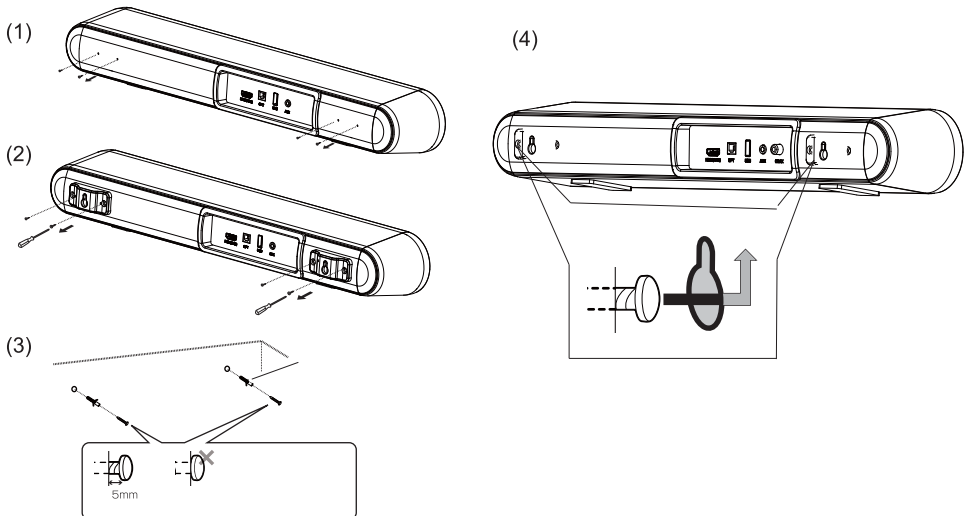

Professional installation and tools are recommended.

Troubleshooting:

Q) No sound comes out after connect to TV using ARC/ Optical (Common):

- Please make sure your TV support ARC output. Then go to Setting in your TV setting (may vary due to different brand):

1)Setting > Sound > Select Speaker to: external speaker (optical mode)/ turn off TV Speaker

2)Setting > Sound(audio) > advanced Audio > digital audio output > PCM Setting >

Sound(audio) > audio output format > PCM/ Dolby off

- Please select the correct input mode.

Q) Why watching Netflix, Disney+, Amazon prime has no sound or noise, some shows have sound on Smart TV?

- If your TV is a smart TV. Apps like Netflix was set default audio output is Dolby and DTS for the movie, but this sound bar did no support Dolby and DTS, so you will hear the crack sound or no sound, please kindly disable the Dolby and DTS on Netflix. Please read back under Input Option- Smart TV set up.

Q) Why won't my Bluetooth device connect to the sound bar?

- You have not enabled the Bluetooth feature on your device or the sound bar.

- The sound bar is connected to another Bluetooth device if LED display not flashing. Disconnect the connected device and try again.

- Long Press the "BT" button on the sound bar, and restart the sound bar.

Q) Can I use a universal remote?

Yes, please make sure to follow your universal remote step to set up. We have provided our remote code on previous pages (0816). Only support universal remote with learning function with 4-digit coding. And we HIGHLY recommend you use our included remote for the best compatibility.

Q) Is this compatible with Fire TV/ Firestick?

Yes, Plug the Fire TV to the TV. And connect the TV using any input mode. If using Optical or ARC. Please make sure you follow our manual setting.

Q) Remote not working.

1: Double check if the batteries are correctly installed in the battery slot.

2: Replace two brand new AAA batteries.

3: Please try unplugging the sound bar and plug back in to restart the sound bar.

If the issue still exists after you did the above steps, please send an email to us:

help@vmaitech.com with your Amazon order ID, we will provide you with free replacement.

Q) Why the battery is not included?

The battery is not included due to Amazon Safety Regulation. We apologize for the inconvenience.

Technical Specifications

Speaker	15W x 2
Frequency Response	50Hz~20KHz
Bluetooth Version	5.0+ EDR
Bluetooth Range	Up to 50 f t (clear line of sight)
Power Adaptor	19V1.5A
Function	BT,HDMI(ARC),OPTICAL,AUX
Size	500 x 99.5 x 70mm / 19.69 x 3.92 x 2.76 in

IMPORTANT: If you need any assistance, don't hesitate to Contact us:
help@vmaitech.com Here at Vmai, we truly value customer satisfaction!

For Detail TV/PC Setting for Vmai Sound Bar Please Visit:

<https://bit.ly/vmaitech> (Case Sensitive)

Or Scan below barcode:



FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.